



**RSE**

## **QUICK GUIDE** WEB EDITION



### **REAR SEAT ENTERTAINMENT SYSTEM**

Your car is equipped with an exclusive multimedia system. The Rear Seat Entertainment system expands the normal audio system in the car with: two screens, A/V AUX input for connection of e.g. video or games console, wireless headphones and remote control.

This system makes it possible to watch video, play back music, listen to radio, watch TV\* or connect other external devices (e.g. a games console).

 









 



The system can be controlled from the front screen (parental control).

More information about the system is available in the normal owner's manual for the car, chapter "RSE - Rear Seat Entertainment system".

Volvo reserves the right to make changes without prior notice.

Options are marked with an asterisk (\*).

## REMOTE CONTROL

	Switch between: L = Screen left rear F = Screen front R = Screen right rear
<b>NAV</b>	Switch to navigation* <sup>A</sup>
<b>RADIO</b>	Switch to radio
<b>MEDIA</b>	Switch to media
<b>TEL</b>	Switch to Bluetooth* handsfree* <sup>A</sup>
	Scroll/Rewind, change track/song
	Play/Pause
	Stop
	Scroll/Fast forward, change track/song
<b>DVD MENU</b>	Menu
<b>EXIT</b> 	To previous, cancels function, deletes entered characters
	Navigate up/down
	Navigate right/left
<b>OK MENU</b> 	Confirm selection
	Volume, decrease
	Volume, increase
<b>0 - 9</b>	Channels, number and letter input
<b>FAV *</b>	Shortcut to favourite setting
<b>INFO #</b>	Information about the current programme
	Selection of language for soundtrack
	Subtitles, selection of language for text
	Teletext*, On/Off

<sup>A</sup> The function is not available in the rear screens.




**1** Scroll wheel, equivalent to **TUNE** in the centre console.

### TO USE

The remote control can be used for all functions in the infotainment system, and for the front screen as well.

To use:


1. First press the button  to select screen.
2. Then aim the remote control at the screen.



### WARNING

Store loose objects such as mobile phone, camera, remote control for extra equipment, etc. in the glovebox or another compartment. Otherwise these could cause injury to occupants in the car in the event of sudden braking or a collision.

## AUDIO SYSTEM

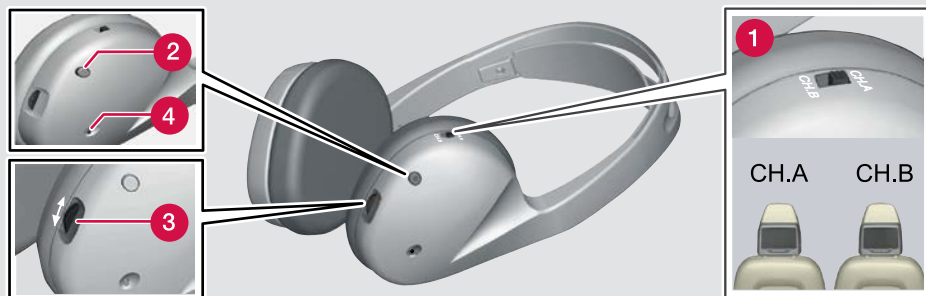


You can listen with the system's wireless headphones or choose to plug your own headphones into the headphone jack.

The wireless headphones are activated with the **On/Off** button (2). An indicator lamp illuminates (4). Select **CH.A** (channel A) or **CH.B** (channel B) with the control (1). Adjust the volume with the volume control (3). The headphones are switched off automatically after approx. 3 minutes when not in use.

### HEADPHONE JACK IN HEAD RESTRAINT

Adjust the volume with the remote control.

## SYSTEM OVERVIEW

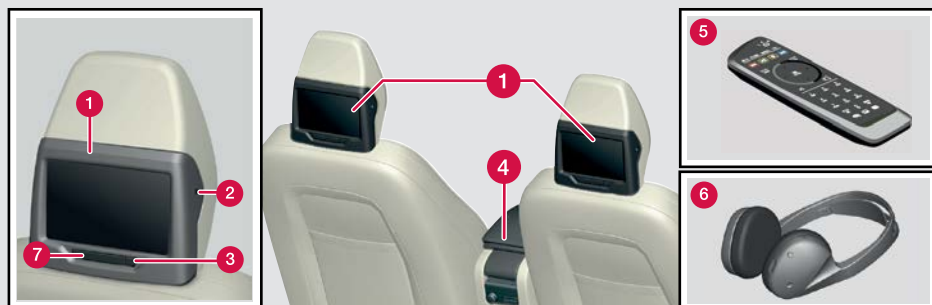


- 1 Screen
- 2 Headphone jack
- 3 On/Off button
- 4 USB, AUX and A/V AUX input

- 5 Remote control
- 6 Headphones
- 7 IR receiver/transmitter


For media player and 12 V socket, see the owner's manual for the car.

## ACTIVATING THE SCREEN AND HEADPHONES

 Switch on the rear screen by pressing the On/Off button on the screen.

1. Switch on the wireless headphones, select **CH.A** for left-hand screen or **CH.B** for right-hand screen, or connect your own headphones into the headphone jack on the side of the head restraints.
2. Select the screen to be controlled with the button  on the remote control.

## PLAYING BACK AUDIO/VIDEO VIA THE A/V-AUX INPUT

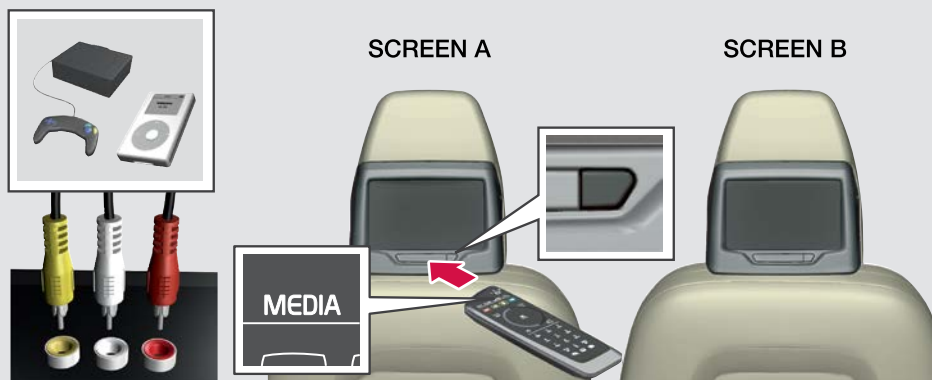

### CONNECTING EQUIPMENT VIA A/V AUX


External equipment, such as a games console can be connected via the A/V AUX input.

- Yellow connector - video cable
- White connector - left channel for audio
- Red connector - right channel for audio

Connect the power cable to the electrical socket if your equipment is designed for 12 V.

Always follow the instructions for the external equipment when connecting.


### PLAYING BACK AUDIO/VIDEO VIA THE A/V-AUX INPUT

1. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to **A/V AUX**, confirm the selection with .
2. Switch on the connected device and press **PLAY** or equivalent on the connected device.

## LISTENING TO MUSIC AND RADIO/WATCHING VIDEO


### PLAYING BACK MUSIC




It is possible to play back music from disc tracks/audio files via the car's media player, USB port/AUX input or via streaming audio files from a Bluetooth® connected device.


1. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to the desired source (**Disc**, **USB**, **AUX** etc.), confirm the selection with .
2. Insert a CD disc in the car's media player or connect an external audio source via the car's USB port/AUX inputs or via Bluetooth®.

### Playback and navigation in playlists

1. Rotate the scroll wheel or use the up/down arrow on the scroll wheel on the remote control to access the playlist/folder structure.




 either gives confirmation of subfolder selection or starts playing back the selected disc track/audio file.

It is also possible to play back a disc track/audio file using  on the remote control and change disc track/audio file using  / .

Stop playback with .


### LISTENING TO RADIO

It is possible to listen to radio via the car's radio.

1. Aim the remote control at the IR receiver on the screen and turn **RADIO**, turn **TUNE** to the desired source (**AM**, **FM1**, **DAB1\*** etc.), confirm the selection with .
2. Select a station using one of the preset buttons **0 - 9** on the remote control or press  / , and the radio searches for the next/previous available station.





### WATCHING VIDEO

It is possible to watch video from disc tracks/video files via the car's media player or USB port.



Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to the desired source (**Disc** or **USB**), confirm the selection with .

1. Insert a DVD disc in the car's media player or connect an external source via the car's USB port.





### Playback and navigation

Play back disc track/video file using  on the remote control and change disc track/video file using  / . Stop playback using .

### Fast forward/rewind




Start fast forward/rewind with a long press on the buttons  / . Then increase fast forward/rewind speed with short presses on the buttons.

Audio files are fast forwarded/rewound at one speed, while video files can be fast forwarded/rewound at four different speeds.

Fast forward/rewind is stopped by pressing ,  or the equivalent opposite  /  button.


## WATCHING TV\*

It is possible to watch TV via the car's media player.

1. Aim the remote control at the IR receiver on the screen and press **MEDIA**, turn **TUNE** to **TV**, confirm the selection with .
2. Select a channel with one of the preset buttons **0 - 9** on the remote control or press  / , the next/previous channel available in the area is shown.

## ADJUSTING THE PICTURE AND SOUND

### Menus, rear screens

Press  on the remote control when a source (e.g. **Disc**) is selected in order to access the menus for the rear screen.

Select menu options using the scroll wheel and the buttons on the remote control.


### Day/Night mode

Set according to the prevailing light conditions. Select between **Auto**, **Day** and **Night**.

### Screen off

The screen is switched off, but the system is still active.

### Pop-up menu RSE<sup>A</sup>

Press  on the remote control when a video file is being played back or TV\* is shown in order to access the pop-up menu.

### Screen format

Select between **Normal**, **Zoom** and **Screen fit**.

### Picture settings

Adjust the settings for brightness, contrast, hue and colour.

### Day/Night mode

Set according to the prevailing light conditions. Select between **Auto**, **Day** and **Night**.

### Source menu

What is shown in the pop-up menu for the Source menu depends on what is being played back or shown, it can be e.g. **Disc menu** or **USB menu**. **Screen off** (see left) is available as a menu option under these menus.

<sup>A</sup> Only applies when playing back videos or watching TV\*.