



XC90

EXCELLENCE

SUPPLEMENT




VÄLKOMMEN!

This supplement describes the rear seat functions in your Volvo XC90 Excellence. Additional owner's information is available in your vehicle, in an app and on the Internet.



THE CENTER DISPLAY

The Owner's Manual is available in the center display in top view.

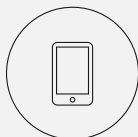

MOBILE APP

The Owner's Manual is available as an app (Volvo Manual) for smartphones and tablets. The app also contains instructional videos for certain functions.



VOLVO'S SUPPORT SITE

Go to Volvo Cars' support site (support.volvocars.com) for manuals and instructional videos. Additional assistance and information about your vehicle and owning a Volvo is also available on the support site.



PRINTED INFORMATION

The glove compartment contains a printed supplement to the Owner's Manual containing information about fuses and specifications as well as a summary of other important and practical information. A complete printed version of the owner's information (or a new Owner's Manual supplement) can be ordered.

CONTENT

01. REAR SEAT TUNNEL CONSOLE

This chapter describes the features of the tunnel console in the rear seat, such as the touchscreen control panel and what can be controlled from it, as well as the cooler and information on how to heat and cool beverages.

02. SEAT SETTINGS

The following information describes how to adjust and set the seats and other seat functionality.

03. INTERIOR OVERVIEW

This section contains information about the vehicle's interior, including an overview of the various storage spaces.

04. SUPPLEMENTARY INFORMATION

Warning, caution and note texts, which must be read.



REAR SEAT CONTROL PANEL

From the touchscreen control panel, which is located in the tunnel console between the rear seats, you can control settings for seat functions and beverage heating/cooling.

Folding up the screen

- Press the upper side of the screen. The screen will move up and start automatically.

The screen will dim after a short period of time if it is not used. Touch the screen to reactivate it.

Folding down the screen

The screen is folded down manually.

- Press the upper side of the screen. Press until the screen is fully recessed in the tunnel console. The screen will switch off when it is folded down.



NAVIGATING IN THE CONTROL PANEL

The control panel is a touchscreen that contains a number of different views. Tap a button on the screen to activate or change settings for a function.

Buttons in Home view



Left/right seat heating.



Cooling/heating of cup holders.



Left/right seat ventilation.



Adjustment of front passenger seat from the rear seat.

Returning to Home view from another view

The control panel automatically returns to Home view after a certain period of time if it is not used. After adjusting the front passenger seat, tap the X to return to Home view.



COOLER

A cooler with space for two bottles and the crystal glasses provided with the vehicle is located behind the rear seat armrest.

- 1 Press the button above the cover to open the cooler.
- 2 There is a control for adjusting the temperature inside the cooler.

The cooling function is active when the engine is running or when the vehicle is in ignition mode **II**.



BEVERAGE HEATING AND COOLING

There are two cup/glass holders in front of the armrest and a holder to heat/cool a cup of coffee/bottle of water, etc.

- Press the cover to open the holder. The heating/cooling function is controlled from the control panel. Blue LED lights indicate that cooling is active, and red lights indicate that heating is active.

The heating/cooling function can be activated when the engine is running or the ignition is in mode **II**.



Tap the button in the control panel repeatedly to shift between the cooling and heating functions. The button will display the set mode.

FOLDING TABLES

Two folding tables are stowed in the center armrest between the rear seats.

1. Open the armrest cover completely.
 2. Use the leather tab to lift the table out of the armrest to the fully vertical position.
 3. Fold the table down over the seat and slide it to the side.
- Repeat the above steps in the reverse order to stow the table.





USB PORTS AND ELECTRICAL SOCKETS

USB port: There are two USB ports under the rear seat armrest. The ports can be used to e.g. charge a cellular phone or a tablet. There are also two USB ports on the tablet holders* on the rear side of the front seat head restraints. The ports can be used to e.g. charge a cellular phone or a tablet.

The USB ports cannot be used to play media in the vehicle's audio system.

Electrical sockets: There is a 12-volt electrical socket and a 120-volt electrical socket under the rear seat armrest.

120-volt: The socket can be used for 120-volt devices such as chargers, laptops, etc. (maximum power output 150 W).

- Plug in the device to connect it. Disconnect the device by pulling the plug from the socket.

12-volt: The socket can be used for 12-volt devices such as MP3 players, cellular phones, etc. (maximum power output 120 W).

- Remove the cigarette lighter from the socket and plug in the device. Unplug the device and replace the cigarette lighter when the socket is not being used.

The ignition needs to be in at least mode **I** for the USB ports and electrical sockets to provide electrical current.



ADJUSTING REAR SEATS

The vehicle's rear seats can be adjusted using the controls on the side of the seats.

- 1 Change the tilt of the backrest by moving the control forward/rearward.
- 2 Raise/lower the seat by adjusting the rear section of the control upward/downward. Move the seat forward/rearward by moving the control forward/rearward.
- 3 Raise/lower the front edge of the seat cushion by moving the front section of the control up/down.
- 4 Settings for massage, side bolsters, lumbar support and seat cushion extension are linked to the multifunction control.

Only one movement (forward/rearward/up/down) can be performed at a time. The seat can be adjusted when the ignition is switched on and for a certain period of time after the door has been unlocked even if the ignition is not on. Adjustment is also possible for a certain period of time after the ignition has been switched off.

The seats have an overload protector that is tripped if a seat is blocked by any object. If this occurs, remove the object and attempt to adjust the seat again.

To adjust sleep/comfort mode, it may be necessary to first move the seat forward slightly.





ADJUSTING SEAT SETTINGS

To adjust lumbar support, side bolsters, seat length extension and massage settings, use the multifunction control on the side of the seat. Settings made using the multifunction control are shown in the control panel. The display only shows the settings for one seat at a time.

1. Fold up the control panel.
2. Activate seat adjustment by turning or pressing the multifunction control in any direction. The seat setting view will open in the control panel.
3. Select the desired function in the control panel by tapping the display or turning the multifunction control upward/downward.
4. Change setting by pressing the control in any direction.

Massage



Tap the button on the screen or select the function using the multifunction control to activate the massage function. The massage function cannot be used when the ignition is switched off.

The following massage settings are available:



On/Off:

Select on or off to switch on/switch off the massage function.



Programs 1-5:

There are five preset massage programs. Choose between 1 (Swell), 2 (Tread), 3 (Advanced), 4 (Lumbar) and 5 (Shoulder).



Intensity:

Choose between low, normal and high.



Speed:

Choose between slow, normal and fast.

Side support



Tap the button on the screen or select the function using the multifunction control to adjust the firmness of the side bolsters in the seat backrest.

- Press the front section of the seat button on the multifunction control to increase the firmness of the side bolsters.
- Press the rear section of the seat button to decrease the firmness of the side bolsters.

Lumbar support



Tap the button on the screen or select the function using the multifunction control to adjust lumbar support.

- Press the seat button on the multifunction control up/down to move the lumbar support up/down.
- Press the front section of the seat button to increase lumbar support.
- Press the rear section of the seat button to decrease lumbar support.

Adjusting the length of the seat cushion



Tap the button on the screen or select the function using the multifunction control to adjust the length of the seat cushion.

- Press the front section of the seat button on the multifunction control to extend the seat cushion.
- Press the rear section of the seat button to retract the seat cushion.



ADJUSTING THE FRONT PASSENGER SEAT FROM THE REAR SEAT

The front passenger seat can be moved forward/rearward and the tilt of its backrest can be adjusted from the rear seat. Use the control panel to change the front passenger seat settings.



1. Tap the button on the screen.
2. A new view will open for adjusting the seat's position and tilt.
3. Tap the X to return to Home view.

Adjusting backrest tilt

- Tap the upper left arrow to move the backrest forward.
- Tap the upper right arrow to move the backrest rearward.

Moving the seat forward/rearward

- Tap the lower left arrow to move the seat forward.
- Tap the lower right arrow to move the seat rearward.

SEAT HEATING/VENTILATION

The seats can be heated for increased comfort in cold weather. Seat heating is controlled from the control panel.



Tap the button for the left or right seat repeatedly to switch between the three levels: high, medium and low. The selected level will be shown on the button.

The seats can also be ventilated to e.g. help remove moisture from the seat occupant's clothing. Seat ventilation is controlled from the control panel.



Tap the button for the left or right seat repeatedly to switch between the three positions: high, medium and low. The selected position will be shown on the button.



TETHER ANCHORS FOR CHILD SEATS

The vehicle is equipped with child restraint tether anchors in the rear row of seats, **1**. The upper tether anchors are mainly intended to be used with front-facing child seats.

- Move the seat and adjust the backrest to access the tether anchors.
 - > Always follow the manufacturer's instructions for securing child seats.





STORAGE COMPARTMENTS

- 1 Tablet holders* on the rear sides of the front seat head restraints*.
- 2 Ashtrays in the door panels.
- 3 Storage compartment under the armrest between the seats.
- 4 Storage pockets in the door panels.
- 5 Storage pockets on the rear side of the front seat backrests.
- 6 Storage pockets on the sides of the tunnel console.
- 7 Small pockets in the fronts of the seat cushions.

HANDLE IN CARGO COMPARTMENT

The vehicle is equipped with a fluorescent handle on the inside of the tailgate. This handle can be used in an emergency situation to open the tailgate from the inside.

- Pull down the handle to open the tailgate.

After use, the handle must be pushed back into its original position manually.





TABLET HOLDER*

For some equipment levels, there is a holder for tablets on the rear side of the front seat headrests. Contact a Volvo retailer for information about compatible tablets for the holder.

To place a tablet in the holder

1. Insert the tablet in the spring-loaded cradle on the left-hand side of the holder.
2. Press the tablet toward the holder and let it spring back in under the frame.
3. Push the holder down into the bracket until it clicks into place.

To remove the holder from its mount

The tablet holder must always be removed when the seat or backrest is adjusted beyond the normal seat position.

1. Push the holder down into the bracket **1** while pressing the button on the headrest **2**.
2. Pull out the holder from the bracket.

SUPPLEMENTARY INFORMATION

The Owner's Manual and other manuals contain safety instructions and all warning, caution and note texts, which must be read. Some functions only apply to certain markets.



WARNING

BEVERAGE HEATING AND COOLING

Store bottles, thermoses, glasses and cups in the intended holders or in the cooler while the vehicle is moving.

SEAT HEATING/VENTILATION

The control for the heated seat should not be used by people who have difficulty detecting temperature increases due to nerve damage or numbness or who for another reason may have difficulty operating the control. This is to help prevent burn injuries.

TETHER ANCHORS FOR CHILD SEATS

The child seat's upper straps must be routed through the hole in the head restraint before being tensioned in the tether anchors. If this is not possible, follow the child seat manufacturer's recommendations.

STORAGE COMPARTMENTS

Store loose objects, such as a cell phone, camera, remote control for extra equipment, etc., in the glove compartment or another compartment. Otherwise, these could injure people in the vehicle in the event of hard braking or a collision.

HANDLE IN CARGO COMPARTMENT

Keep all vehicle doors and the tailgate locked and keep the keys out of the reach of children. Unsupervised children could lock themselves inside the vehicle and be injured. On hot days, the temperature in the vehicle can increase rapidly and exposure to high temperatures can lead to serious injury or death. Small children are particularly susceptible.



CAUTION

NAVIGATING IN THE CONTROL PANEL

Do not use sharp objects on the screen as this could cause scratches.

FOLDING TABLES

The table can withstand a maximum load of 10 kg. If excessive weight is placed on the table, the table support arm will be dislodged from the rail under the table in order to protect the table leg. To reset the table:

1. Fold the tabletop down slightly below the horizontal position and hold it there.
2. Put the metal nubs in the end of the support arm into the grooves in the rail under the tabletop. At the same time, fold the black plastic piece at the end of the support arm out of the way, with the plastic nub pointing downwards.
3. When the metal nubs are in their grooves, fold the black plastic piece upward against the back of the table until it clicks into place and then fold the tabletop upward to position the support arm bracket in the track. Then fold the tabletop downward again.

The support arm bracket can now slide in the rail under the table and the support arm will be secured again.

USB PORTS AND ELECTRICAL SOCKETS

Fuses

Always replace blown fuses with new fuses of the same color and amperage. Never use a fuse with a higher amperage than that specified in the table in the Owner's Manual. If an electrical component fails to function, this may be because a fuse has blown due to temporary overload. For more information on fuses, see the vehicle's regular Owner's Manual.

Power output

The 12-volt socket has a maximum power output of 120 W and the 120-volt socket has a maximum power output of 150 W.

SEAT HEATING/VENTILATION

Seat ventilation cannot be started if the temperature in the passenger compartment is too low. This is to avoid chilling the person sitting in the seat.

TABLET HOLDER

Protective plastic screen covers should be used on tablets placed in the tablet holder. This is to help prevent glass shards in the vehicle in the event of a collision.



NOTE

COOLER

The cooler needs free air circulation in order to function optimally. Leave at least 5 cm of free space around the cooler's air intake in the cargo compartment.

The temperature settings may need to be adjusted to compensate for the ambient temperature. Use the max. setting to lower the temperature quickly.

Because the temperature at the bottom of the cooler is below the freezing point, condensation may form that occasionally needs to be dried away. For optimal drying/cleaning, remove the transparent bottle holder.

SEAT HEATING/VENTILATION

Seat ventilation should be used with caution by people sensitive to drafts. Comfort level low is recommended for prolonged use.

 **WARNING**

California Proposition 65

Operating, servicing and maintaining a passenger vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle.

V O L V O