



XC90

EXCELLENCE LOUNGE

SUPPLEMENT



VÄLKOMMEN!

Here you can read about the functions for the rear seat in your Volvo XC90 Excellence Lounge. More detailed owner's information is available in the car, in the app and on the web.



THE CAR'S CENTRE DISPLAY

The owner's manual is available in the car's centre display, where it can be accessed via the top view.



MOBILE APP

The owner's manual is available as an app (Volvo Manual) for smartphones and tablets. The app also contains video tutorials for selected functions.



VOLVO'S SUPPORT SITE

The Volvo Cars support site (support.volvocars.com) contains manuals and video tutorials, as well as additional information and assistance for your Volvo and your car ownership.



PRINTED INFORMATION

There is a supplement to the owner's manual in the glovebox that contains information on fuses and specifications, as well as a summary of important and practical information. A printed owner's manual and associated supplement can be ordered.

CONTENTS

01. TUNNEL CONSOLE IN THE REAR SEAT

This section describes what you will find in the tunnel console in the rear seat, e.g. the control display and what can be controlled from it, plus the cooler box and information on heating and cooling drinks.

02. LOUNGE CONSOLE

Information on Lounge Console and its various functions and settings can be found here.

03. SEAT SETTINGS

Information on how to adjust and set the seats, along with other seat functionality, can be found here.

04. OVERVIEW OF INTERIOR

Here you can read about the interior of the car and have an overview of the various storage compartments, for example.

05. SPECIAL TEXTS

Warning, important and note texts, which must be read.



CONTROL DISPLAY IN THE REAR SEAT

The control display is fitted in the tunnel console between the rear seats and controls the seat functions, the heating and cooling of drinks and the functions in Lounge Console.

Raising the screen

- Press the top of the screen. The screen rises and starts automatically.

The light is dimmed after a certain time. Touch the screen to reactivate it.

Lowering the screen

The screen is lowered manually:

- Press the top of the screen. Push until the screen is fully retracted into the tunnel console. The screen is switched off when it is lowered.



NAVIGATING IN THE CONTROL DISPLAY

The control display is a touch-sensitive screen that consists of different views. Tap on a button in the screen to activate or change the settings for a function.

Buttons in the home view



Heating of the left and right-hand seat respectively.



Cooling/heating of cup holder.



Ventilation of the left and right-hand seat respectively.



Adjusting the Lounge Console from the rear seat.

Returning to home view from another view

The control display automatically returns to the home view after a certain time.



COOLER BOX

There is a cooler box behind the armrest in the rear seat with space for two bottles and the enclosed crystal glasses.

- 1 Press the button located above the cover to open the box.
- 2 On the inside of the box there is a control for setting the temperature.

The cooling function is active when the car is running or set in ignition position **II**.



HOT AND COLD DRINKS

There are two cup/glass holders in front of the armrest, as well as a heating/cooling holder for e.g. a bottle or tea/coffee cup.

- Press on the cover to open the holder. Heating or cooling is controlled from the control display. Blue LEDs indicate that cooling is active, red LEDs indicate that heating is active.

Heating or cooling can be activated when the car is running or set in ignition position **II**.



Tap repeatedly on the button in the control display to change between the two functions of cooling and heating. The button shows the set position.

FOLDING OUT THE TABLES

There are two tables under the armrest in the rear seat that can be folded out over the rear seats.

1. Fully open the armrest cover.
 2. Lift the table up out of the armrest using the leather tab and swing it out to a completely vertical position.
 3. Fold down the table top across the seat and slide it to the side.
- Repeat the steps in reverse order to fold the table back in.





USB PORTS AND ELECTRICAL SOCKETS

USB ports: There are two USB ports under the armrest in the rear seat. The screen bracket* on the rear of the driver's seat head restraint also includes two USB ports. The ports can be used to charge mobile phones or tablets, for example. It is not possible to playback media in the car's audio system via the USB ports.

Electrical sockets: There is one 12 V electrical socket and one 230 V electrical socket under the armrest in the rear seat.

230 V: The socket can be used for various accessories requiring a 230 V supply, such as chargers or laptop computers (maximum power output 150 W).

- Plug in the accessory's connector. Disconnect the accessory by unplugging the connector.

12 V: The socket can be used for various accessories requiring a 12 V supply, such as music players or mobile phones (maximum power output 120 W).

- Remove the cigarette lighter from the socket and plug in the accessory's connector. Unplug the accessory's connector and refit the cigarette lighter when the socket is not in use.

The car's electrical system must be in at least ignition position **I** for the USB ports and electrical sockets to supply power.

LOUNGE CONSOLE

The Lounge Console consists of a 12.9-inch touchscreen and a combined footrest and storage compartment. The Lounge Console can be adjusted forward/back via the control display in the rear seat.



In the control display, tap on the button to access the view where the Lounge Console can be adjusted.



Tap on the button to extend the screen to reading mode or retract it. In reading mode, the angle of the screen can be adjusted manually. Press the extend/retract button to interrupt the extending/retracting of the screen. Be aware of the risk of trapping when adjusting this.



The console can be moved forward/back for greater convenience. Be aware of the risk of trapping when adjusting this.



Tap on the button to retract the screen (if it is extended) and adjust the console forward to maximum. To stop, tap on the button again.

It is possible to adjust the footrest to three different positions, as well as to close it. The footrest is opened with your foot using the button in the lower edge of the Lounge Console, and then its position is adjusted manually. To lower it to closed position, first raise it to the top position and then lower it fully.



Tap on the button to activate and adjust the built-in heating function in the footrest.



Locking the cover to the storage space

In closed position, the cover for the storage space in the console can be locked using the associated lock card. To lock/unlock, hold the card still in front of the key reader on the right-hand side of the console, marked with a key symbol. A dull clicking sound is heard when locking/unlocking. The cylindrical part of the lock card must be facing the key symbol. To change between locked and unlocked mode, move the lock card away from the key reader for a few seconds and then show it again.

Lounge Console app

The Excellence Lounge app can be found on the screen in the Lounge Console. This will help you to explore the options offered by the car, provide information on unique Excellence Lounge functions and help with connecting to Wi-Fi or Bluetooth, for example.

ADJUSTING THE REAR SEAT

The car's rear seats can be adjusted using the controls on the side of the seats.

- 1 Adjust the backrest inclination by adjusting the control forward/backward.
- 2 Raise/lower the seat by adjusting the rear part of the controls upwards/downwards. Move the seat forward/backward by adjusting the controls forward/backward.
- 3 Raise/lower the seat cushion front edge by means of adjusting the front section of the control up/down.
- 4 Settings for massage, side support, lumbar support and seat cushion extension are linked to the multi-function control.

Only one movement (forward/back/up/down) can be made at a time. Seat adjustment can be made while the car is running and a certain time after the doors have been unlocked without the car running. Adjustment is also possible for a period of time after the car has been switched off.

The seats have overload protection which is triggered if a seat is blocked by an object. If this happens, remove the object and then operate the seat again.

To adjust the sleeping/comfort position, it may be necessary to first move the seat forward slightly.





ADJUSTING THE SETTINGS FOR THE SEAT

To adjust the lumbar support, side support in the backrest, seat cushion length and massage settings, use the multi-function control on the side of the seat. Settings made with the multi-function control are shown in the control display. The display only shows settings for one seat at a time.

1. Raise the control display.
2. Activate seat adjustment by turning or pressing the multi-function control in any direction. The seat settings view opens in the control display.
3. Select the desired function in the control display by tapping on the display or turning the multi-function control up/down.
4. Change the setting by pressing on the control in the desired direction.

Massage



Tap on the screen button or select the function using the multi-function control to activate the massage function. It is not possible to use the massage function when the car is switched off.

The following setting options are available for massage:



On/Off:

Choose between On or Off to activate/deactivate the massage function.



Program 1-5:

There are five preset massage programs. Choose between 1 (Swell), 2 (Tread), 3 (Advanced), 4 (Lumbar) and 5 (Shoulder).



Intensity:

Choose between low, normal and high.





Speed:

Choose between slow, normal and fast.

Side support



Tap on the screen button or select the function using the multi-function control to activate adjustment of side support in the backrest.

- Press the front section of the seat button on the multi-function control to increase side support.
- Press the rear section of the seat button in order to reduce the side support.

Lumbar support



Tap on the screen button or select the function using the multi-function control to activate adjustment of lumbar support.

- Press the seat button up/down on the multi-function control to move the lumbar support up/down.
- Press the front section of the seat button to increase lumbar support.
- Press the rear section of the seat button in order to reduce the lumbar support.

Seat cushion extension



Tap on the screen button or select the function using the multi-function control to activate adjustment of seat cushion length.

- Press the front section of the seat button on the multi-function control to extend the seat cushion.
- Press the rear section of the seat button to retract the seat cushion.



HEATED/VENTILATED SEATS

The seats can be heated in order to increase comfort when it is cold. The seat heater is controlled from the control display.



Tap repeatedly on the button for the left or right-hand seat to change between the three positions: high, medium and low. The button shows the set level.

The seats can be ventilated, for example, to remove moisture from clothes. The seat ventilation is controlled from the control display.



Tap repeatedly on the button for the left or right-hand seat to change between the three positions: high, medium and low. The button shows the set position.



MOUNTING POINTS FOR CHILD SEATS

The car is equipped with mounting points for child seats in the rear seat row, **1**. The upper mounting points are primarily intended for use with front-facing child seats.

- Slide the seat forward and adjust the backrest forward in order to access the mounting point.
 - > Always follow the manufacturer's mounting instructions for correct assembly.

STORAGE SPACES

- 1 There is a privacy screen* on the driver's seat, with a clothes hanger on it.
- 2 There are ashtrays in the door sides.
- 3 There is a storage space under the armrest between the seats.
- 4 There are storage compartments in the door sides.
- 5 There is a storage pocket on the driver's seat backrest.
- 6 There are storage pockets on the sides of the tunnel console.
- 7 There is a small pocket in the front part of the seat cushion.





HANDLE IN THE CARGO AREA

The car is equipped with a self-illuminating handle on the inside of the tailgate. It can be used to open the tailgate from the inside in an emergency situation.

- Pull down the handle to open the tailgate.

After use, the handle must be pressed back into its original position manually.

HOLDER FOR TABLET*

Depending on equipment level selected, there is a tablet holder on the rear of each front seat head restraint. Contact a Volvo dealer for information on the tablets supported.

Attaching the tablet in the holder

1. Slide the tablet in against the spring unit on the left-hand side of the holder.
2. Fold the tablet in towards the holder and allow it to spring back in under the frame.
3. Push the holder down into the bracket until it clicks.

Removing the holder from its bracket

The tablet mount must always be removed when adjusting the seat or backrest beyond the normal seat position.

1. Press the holder down into the bracket **1** and simultaneously press the button on the head restraint **2**.
2. Pull the holder from the bracket.



SPECIAL TEXTS

The owner's manual and other manuals contain safety instructions and all warning, important and note texts, which must be read. Some functions only apply to certain markets.

WARNING

HOT AND COLD DRINKS

Store bottles, Thermos flasks, glasses and mugs in the holders or in the cooler box while driving.

LOUNGE CONSOLE

Risk of pinching when the screen in the Lounge Console is extended and retracted. See decal on passenger side sun visor.

HEATED/VENTILATED SEATS

The control for the heated seat must not be used by people who find it difficult to perceive an increase in temperature due to numbness or who otherwise have difficulty in operating the controls. This is to prevent burn injuries.

MOUNTING POINTS FOR CHILD SEATS

The child seat's upper straps must be routed through the hole in the head restraint leg before they are tensioned at the mounting point. If this is not possible, follow the recommendations from the seat manufacturer.

STORAGE SPACES

Keep loose objects such as mobile phones, cameras, remote controls for accessories, etc. in the glove compartment or other compartments. Otherwise they may injure people in the car in the event of sudden braking or a collision.

HANDLE IN THE CARGO AREA

Make sure you keep the doors and tailgate locked and keep the keys out of the reach of children. Unsupervised children can lock themselves in and risk injury. On hot days the temperature inside the car can rise quickly and exposure to the high temperature can lead to serious injury and death. Small children are particularly susceptible.

IMPORTANT

NAVIGATING IN THE CONTROL DISPLAY

Do not use sharp objects on the screen as they may scratch it.

FOLDING OUT THE TABLES

A maximum load of 10 kg may be applied to the table. If the table is overloaded, the table support arm will loosen in an attempt to protect the table leg. To reset the table, follow the instructions below:

1. Angle the table top down slightly below horizontal and hold it in that position.
2. Secure the metal pin in the end of the support arm in the slots in the rail under the table top. At the same time, fold aside the black plastic pin slightly farthest out on the support arm.
3. When the metal pin is in its slot, angle the table top up so that the attachment device for the support arm engages in the track. Then angle the table top down again.

The table top's attachment device can now slide in the rail under the table and the support arm is thereby secure again.

USB PORTS AND ELECTRICAL SOCKETS

Fuses

Always replace a blown fuse with one that has the same colour and amperage designation. Never fit a fuse with a higher value than that indicated in the table in the owner's manual. If an electrical component is not working then it may be due to the fuse having blown, caused by a temporary overload. For information on fuses, see the normal owner's manual for the car.

Power output

The 12 V socket has a maximum power output of 120 W and the 230 V socket has 150 W.

LOUNGE CONSOLE

Do not put any objects on the front part of the Lounge Console. See decal on passenger side sun visor.

HEATED/VENTILATED SEATS

Seat ventilation cannot be started if the passenger compartment temperature is too low. This is in

order to avoid cooling down the person sitting in the seat.

HOLDER FOR TABLET

The tablet should have protective plastic on the screen when it is fitted in the holder. This is to avoid glass splinters in the event of a collision.

NOTE

COOLER BOX

The cooler box needs to have free circulation of air for optimal function. For this reason, you should leave at least 5 cm of space at the air intake for the cooler box in the cargo area.

The temperature setting may need to be adjusted depending on the ambient temperature. The maximum position is recommended to quickly lower the temperature.

Due to negative temperature in the bottom of the refrigerator for faster cooling, condensation may occur which sometimes needs to be wiped away. For optimum drying/cleaning, you need to remove the transparent bottle holder.

LOUNGE CONSOLE

The Lounge Console may not be able to operate in low passenger compartment temperatures.

The screen in the Lounge Console may not be able to operate in high passenger compartment temperatures. Extend the screen and cool it using the air vents between the front and rear doors.

HEATED/VENTILATED SEATS

The seat ventilation should be used carefully by people sensitive to draughts. A low level is recommended for long-term use.

STORAGE SPACES

Privacy screen*

The hook on the privacy screen on the driver's seat may be loaded with max. 1.2 kg.

V O L V O