

OWNERS MANUAL



WEB EDITION

DEAR VOLVO OWNER

THANK YOU FOR CHOOSING VOLVO

We hope you will enjoy many years of driving pleasure in your Volvo. The car has been designed for the safety and comfort of you and your passengers. Volvo is one of the safest cars in the world. Your Volvo has also been designed to satisfy all current safety and environmental requirements.

In order to increase your enjoyment of the car, we recommend that you familiarise yourself with the equipment, instructions and maintenance information contained in this owner's manual.



Table of contents





00 Introduction

| Important information | |
|---------------------------|---|
| Volvo and the environment | 1 |





01 Safety

| Seatbelts | 16 |
|--|----|
| Airbag system | 19 |
| Airbags (SRS) | 20 |
| Activating/deactivating the airbag (SRS)*. | 23 |
| Side airbags (SIPS bags) | 25 |
| Inflatable Curtain (IC) | 27 |
| WHIPS | 28 |
| When the systems deploy | 30 |
| Crash mode | 31 |
| Child safety | 32 |



02 Instruments and controls

| Overview, left-hand drive cars | 40 |
|---|-----|
| Overview, right-hand drive cars | 42 |
| Driver's door control panel | 44 |
| Combined instrument panel | 45 |
| Indicator and warning symbols | 46 |
| Information display | 50 |
| Electrical socket | 52 |
| Lighting panel | 53 |
| Left-hand stalk switch | 56 |
| Right-hand stalk switch | 59 |
| Cruise control* | 62 |
| Keypad in the steering wheel* | 64 |
| Steering wheel adjustment, hazard warn- | 0.1 |
| ing flashers | 6 |
| Parking brake | 66 |
| Power windows | 6 |
| Rearview and door mirrors | 69 |
| Power sunroof* | 73 |
| Personal preferences | 74 |
| HomeLink® EU* | 7 |
| | |



03 Climate control

| General information on climate control | 82 |
|---|----|
| Manual climate control, AC | 84 |
| Electronic climate control, ECC* | 87 |
| Air distribution | 91 |
| Fuel-driven engine block heater and passenger compartment heater* | 92 |
| Fuel-driven auxiliary heater* (diesel) | 95 |



04 Interior

| Front seats | 98 |
|---|-----|
| Interior lighting | 100 |
| Storage spaces in the passenger compartment | 102 |
| Rear seat | 100 |
| Cargo area | 108 |



05 Locks and alarm

| Remote control with key blade | 114 |
|-------------------------------|-----|
| • | |
| Active locks | 117 |
| Keyless drive* | 118 |
| Battery in remote control | 121 |
| Locking and unlocking | 122 |
| Child safety locks | 125 |
| Alarm* | 126 |
| | |



Table of contents





06 Starting and driving

| 3 | |
|--|-----|
| General | 132 |
| Refuelling | 134 |
| Starting the engine | 135 |
| Starting the engine – Flexifuel | 137 |
| Keyless drive* | 139 |
| Manual gearbox | 140 |
| Automatic gearbox | 142 |
| All-wheel drive | 146 |
| Brake system | 147 |
| DSTC - Stability and traction control sys- | |
| tem* | 149 |
| Park Assist* | 151 |
| BLIS* – Blind Spot Information System | 153 |
| Towing and recovery | 157 |
| Start assistance | 159 |
| Driving with a trailer | 160 |
| Towing equipment* | 162 |
| Detachable towbar* | 164 |
| Loading | 168 |
| Adjusting headlamp pattern | 169 |
| | |



07 Wheels and tyres




08 Car care

| Cleaning | 190 |
|-----------------------|-----|
| Touching up paintwork | 193 |
| Rustproofing | 194 |







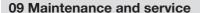

Volvo service

| Volvo service | 198 |
|-------------------------------|-----|
| Self-maintenance | 199 |
| Bonnet and engine compartment | 200 |
| Oils and fluids | 201 |
| Wiper blades | 206 |
| Battery | 208 |
| Replacing bulbs | 210 |
| Fuses | 217 |



10 Infotainment system

| General | 226 |
|-------------------------------|-----|
| Audio functions | 228 |
| Radio functions | 232 |
| CD functions | 237 |
| Menu structure – audio system | 240 |
| Phone functions* | 241 |
| Menu structure – phone* | 248 |
| Bluetooth handsfree* | 251 |



11 Specifications

| Type designation | 258 |
|------------------------|-----|
| Dimensions and weights | 260 |
| Engine specifications | 262 |
| Engine oil | 264 |
| Fluids and lubricants | |
| Fuel | 27 |
| Catalytic converter | 276 |
| Electrical system | 27 |
| Type approval | 279 |



Table of contents



Table of contents (1)



Introduction



Important information

Reading the Owner's Manual

Introduction

A good way of getting to know your new car is to read the owner's manual, ideally before your first journey. This will give you the opportunity to familiarise yourself with new functions, to see how best to handle the car in different situations, and to make the best use of all the car's features. Please pay attention to the safety instructions contained in the manual.

The equipment described in the owner's manual is not present in all cars. In addition to standard equipment, this manual also describes options (factory fitted equipment) and certain accessories (retrofitted extra equipment). If you are uncertain over what is standard or option/accessory then contact vour Volvo dealer.

Volvo cars are adapted for the varying requirements of different markets, as well as for national or local legal requirements and regulations.

The specifications, design features and illustrations in this owner's manual are not binding. We reserve the right to make modifications without prior notice.

© Volvo Car Corporation

Option

All types of option/accessory are marked with an asterisk *

The range of options/accessories for the different car models varies depending on the market. The majority of options are factory fitted and cannot be retrofitted, accessories are retrofitted.

Contact your authorised Volvo dealer for more information.

Special texts



WARNING

Warning texts advise of a risk of personal injury.



IMPORTANT

Important texts advise of a risk of material damage.



NOTE

NOTE texts give advice or tips that facilitate the use of features and functions for example.

Footnote

There is footnote information in the owner's manual that is located at the bottom of the page. This information is an addition to the text that it refers to via a number. If the footnote refers to text in a table then letters are used instead of numbers for referral.

Message texts


There are displays in the car that show text messages. These text messages are highlighted in the owner's manual by means of the text being slightly larger and printed in grey. Examples of this are in menu texts and message texts on the information display (e.g. Audio settings).

Decals

The car contains different types of decal which are designed to convey important information in a simple and clear manner. The decals in the car have the following descending degree of importance for the warning/information.

Important information

Warning for personal injury

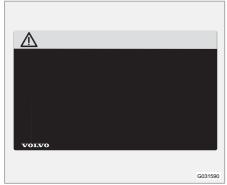

Black ISO symbols on yellow warning field, white text/image on black message field. Dangerous situation which, if not avoided, may result in serious personal injury or fatality.

Risk of property damage



White ISO symbols on black symbol field, white text/image on black message field. If a colour is required then the decal shall be blue. Dangerous situation which, if not avoided, may result in minor or moderate damage to property.

Information



White ISO symbols and white text/image on black message field.

Procedure lists

Procedures where action must be taken in a certain sequence are numbered in the owner's manual.

1 Introduction

Important information

- 1 When there is a series of illustrations for step-by-step instructions each step is numbered in the same way as the corresponding illustration.
- A There are numbered lists with letters adjacent to the series of illustrations where the order of the instructions is not significant.
- Arrows appear numbered and unnumbered and are used to illustrate a movement.

If there is no series of illustrations for step-bystep instructions then the different steps are numbered with normal numbers.

Position lists

Red circles containing a number are used in overview images where different components are pointed out. The number recurs in the position list featured in connection with the illustration that describes the item.

Bulleted lists

A bulleted list is used when there is a list of points in the owner's manual.

Example:

- Coolant
- Engine oil

To be continued

>> This symbol is located furthest down to the right when a section continues on the next double-page spread.

Recording data

One or more of the computers in your Volvo are capable of recording detailed information. This information is intended for use in research to enhance safety and for diagnosing faults in some of the in-car systems. The data may include details regarding seatbelt use by the driver and passengers, the functions of various vehicle systems and modules, and status information about the engine, throttle, steering, brakes and other systems. This data can also include details of the way the car is driven. This type of information can include, without being limited to, specific details such as vehicle speed, the use of the brake and accelerator pedals and steering wheel position. This latter type of data can be stored for a limited period while the car is being driven and subsequently during a collision or a near-collision. Volvo Car Corporation will not disclose the stored information without consent. However, Volvo Car Corporation may be forced to disclose the information due to national legislation. Volvo Car Corporation and its authorised workshops may also read and use the information.

Accessories and extra equipment

The incorrect connection and installation of accessories can negatively affect the car's electrical system. Certain accessories only function when their associated software is installed in the car's computer system. Always contact an authorised Volvo workshop before installing accessories which are connected to or affect the electrical system.

Information on the Internet

At www.volvocars.com there is further information concerning your car.

Volvo and the environment

Volvo Cars' environmental philosophy



Environmental care is one of Volvo Car Corporation's core values which influence all operations. We also believe that our customers share our consideration for the environment.

Your Volvo complies with strict international environmental standards and is also manufactured in one of the cleanest and most resource-efficient plants in the world. Volvo Car Corporation has global ISO certification, which includes the environmental standard ISO 14001 covering all factories and several of our other units. We also set requirements for our partners so that they work systematically with environmental issues

EPI (Environmental Product Information) is supplied for all Volvo models. Here you can see how the environment is affected during the entire lifecycle of the car.

Read more at www.volvocars.com/EPI.

Fuel consumption

Volvo cars have competitive fuel consumption in each of their respective classes. Lower fuel consumption generally results in lower emission of the greenhouse gas, carbon dioxide.

It is possible for the driver to influence fuel consumption. For more information read under the heading, **Reducing environmental impact**.

Efficient emission control

Your Volvo is manufactured following the concept "Clean inside and out" – a concept that encompasses a clean interior environment as well as highly efficient emission control. In many cases the exhaust emissions are well below the applicable standards.

Clean air in the passenger compartment

A passenger compartment filter prevents dust and pollen from entering the passenger compartment via the air intake.

A sophisticated air quality system, IAQS* (Interior Air Quality System) ensures that the incom-

Introduction



Volvo and the environment

ing air is cleaner than the air in the traffic outside.

The system consists of an electronic sensor and a carbon filter. The incoming air is monitored continuously and if there is an increase in the level of certain unhealthy gases such as carbon monoxide then the air intake is closed. Such a situation may arise in heavy traffic, queues and tunnels for example.

The entry of nitrous oxides, ground-level ozone and hydrocarbons is prevented by the carbon filter.

Textile standard

The interior of a Volvo is designed to be pleasant and comfortable, even for people with contact allergies and for asthma sufferers. Extreme attention has been given to choosing environmentally-compatible materials. This means that they also fulfil the requirements in the Oeko-Tex 100 standard ¹, a major advance towards a healthier passenger compartment environment.

Oeko-Tex certification covers seatbelts, carpets and fabrics for example. The leather in the upholstery undergoes chromium-free tanning with plant substances and fulfils the certification requirements.

Volvo workshops and the environment

Regular maintenance creates the conditions for a long service life and low fuel consumption for your car. In this way you contribute to a cleaner environment. When Volvo's workshops are entrusted with the service and maintenance of your car it becomes part of our system. We make clear demands regarding the way in which our workshops are designed in order to prevent spills and discharges into the environment. Our workshop staff have the knowledge and the tools required to guarantee good environmental care.

Reducing environmental impact

You can easily help reduce environmental impact, for example, by driving economically and by servicing and maintaining the car according to the instructions in the owner's manual.

The following advice will help you to do your bit for the environment: (for further advice on how you can reduce environmental impact and drive economically, see page 132).

- Decrease fuel consumption by choosing ECO tyre pressure, see page 176.
- A roof load and ski box increase air resistance, leading to higher fuel consumption.
 Remove them directly after use.

- Remove unnecessary items from the car.
 The greater the load the higher the fuel consumption.
- If the car is equipped with an engine block heater, always use it before starting from cold. This reduces fuel consumption and exhaust emissions.
- Drive gently and avoid braking too hard.
- Drive in the highest gear possible. Low engine speeds result in lower fuel consumption.
- Use engine braking to slow down.
- Avoid letting the engine idle. Pay attention to local regulations. Switch off the engine when stationary for longer periods.
- Always dispose of environmentally hazardous waste, such as batteries and oils, in an environmentally safe manner. If uncertain about disposal, consult an authorised Volvo workshop for advice.
- Service your car regularly.
- High speed increases consumption considerably due to increased wind resistance. A doubling of speed increases wind resistance 4 times.

These hints will help reduce fuel consumption without increasing travel time or lessening the enjoyment of driving. Apart from being kind to

¹ More information on www.oekotex.com

Introduction



Volvo and the environment

your car, you'll be saving money - and the Earth's resources.

SAFETY








Seatbelts

General information

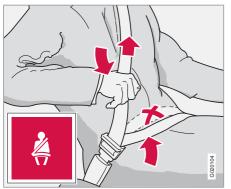

Tensioning the hip strap. The belt must be positioned low down.

Heavy braking can have serious consequences if the seatbelts are not used. Ensure that all passengers use their seatbelts. It is important that the seatbelt lies against the body so it can provide maximum protection. Do not lean the backrest too far back. The seatbelt is designed to protect in a normal seating position.

Putting on a seatbelt

 Pull the seatbelt out slowly and secure it by pressing the buckle into the lock. A loud "click" indicates that the seatbelt has locked.

Releasing the seatbelt

 Press the red lock button and then let the seatbelt retract. If the seatbelt does not retract fully, feed the seatbelt in by hand so that it does not hang loose.

The seatbelt locks and cannot be withdrawn:

- if it is pulled out too quickly.
- during braking and acceleration.
- if the car leans heavily.

Keep in mind the following:

- do not use clips or anything else that can prevent the seatbelt from fitting properly
- ensure that the seatbelt is not twisted or caught on anything
- the hip strap must be positioned low down (not over the abdomen).
- tension the hip strap over the lap by pulling the diagonal shoulder belt as illustrated.

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

Λ

WARNING

Each seatbelt is designed for only one person.

$|\Lambda|$

WARNING

Never modify or repair the seatbelt yourself. Contact an authorised Volvo workshop. If the seatbelt has been subjected to a major load, such as in a collision, the entire seatbelt must be replaced. Some of the seatbelt's protective properties may have been lost even if the seatbelt does not appear damaged. The seatbelt must also be replaced if it shows signs of wear or damage. The new seatbelt must be typeapproved and designed for installation at the same location as the replaced seatbelt.

Seatbelts

Seatbelts and pregnancy




The seatbelt should always be worn during pregnancy. But it is crucial that it be worn in the correct way. The diagonal section of the seatbelt should wrap over the shoulder then be routed between the breasts and to the side of the abdomen. The lap section of the seatbelt should lay flat over the thighs and as low as possible under the abdomen. — It must never be allowed to ride upward. Remove all slack from the seatbelt and ensure that it fits close to the body. In addition, check that there are no twists in the seatbelt

As a pregnancy progresses, pregnant drivers should adjust their seats and steering wheel such that they can easily maintain control of the

vehicle as they drive (which means that they must be able to easily operate the foot pedals and steering wheel). They should strive to position the seat with as large a distance as possible between their abdomen and the steering wheel.

Seatbelt reminder

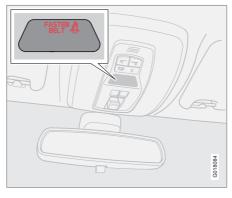

Unbelted occupants will be reminded to fasten their seatbelts by means of an audio and visual reminder. The audio reminder is speed dependent, and in some cases time dependent. The visual reminder is located in the roof console and the combined instrument panel.

Child seats are not covered by the seatbelt reminder system.

Rear seat

The seatbelt reminder in the rear seat has two subfunctions:

- Provides information on which seatbelts are being used in the rear seat. A message is shown in the information display when the seatbelts are used or the rear doors are opened. The message is automatically cleared after approx. 30 seconds or can be acknowledged manually by pressing the READ button.
- Provides a warning if one of the rear seatbelts is unfastened during a journey. This warning takes the form of a message on the information display along with the audio/visual signal. The warning ceases when the seatbelt is re-fastened or when acknowledged manually by pressing the READ button.

The message on the information display showing which seatbelts are in use is always available. Press the **READ** button to see stored messages.

Certain markets

An audio signal and indicator lamp remind the driver if not wearing a seatbelt to use one. At low speed, the audio reminder will sound for the first six seconds.



01

01 Safety

Seatbelts


Seatbelt tensioner

All the seatbelts are equipped with seatbelt tensioners. A mechanism in the seatbelt tensioner tightens the seatbelt in the event of a sufficiently violent collision. The seatbelt then provides more effective restraint for occupants.



Airbag system

Warning symbol on the combined instrument panel

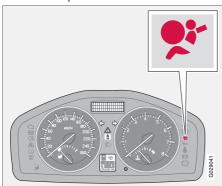

The airbag system ¹ is continually monitored by the system's control module. The warning symbol in the combined instrument panel illuminates when the ignition key is turned to position I, II or III. The symbol goes out after approx. 6 seconds provided the airbag system¹ is working correctly.



As well as the warning symbol, a message may appear on the display in appropriate cases. If the warning symbol malfunctions, the warning triangle illuminates and the message SRS AIRBAG SERVICE REQUIRED or SRS AIRBAG SERVICE URGENT appears in the display. Contact an

authorised Volvo workshop immediately.




WARNING

If the warning symbol for the airbag system remains illuminated or illuminates while driving, it means that the airbag system does not have full functionality. The symbol indicates a fault in the seatbelt tensioner system, SIPS, SRS system or IC system. Contact an authorised Volvo workshop urgently.

¹ Includes SRS and seatbelt tensioner, SIPS and IC.

Airbags (SRS)

Airbag system

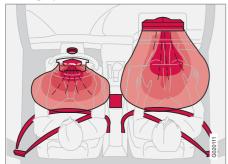


SRS system, left-hand drive

The system consists of airbags and sensors. A sufficiently violent collision trips the sensors and the airbag(s) are inflated with hot gas. To cushion the impact, the airbag deflates when compressed. When this occurs, smoke escapes into the car. This is completely normal. The entire process, including inflation and deflation of the airbag, takes place within tenths of a second.

WARNING

Repairs must only be performed by an authorised Volvo workshop. Any interference in the airbag system could cause malfunction and result in serious personal injury.

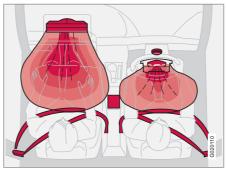

SRS system, right-hand drive


NOTE

The sensors react differently depending on the course of the collision and whether or not the seatbelts on the driver's side and passenger side are used.

It is therefore possible that only one (or none) of the airbags may inflate in a collision. The airbag system senses the force of the collision on the car and adapts accordingly so that one or more airbags is deployed.

The capacities of the airbags are also adapted to the collision force to which they are subjected.

Airbags (SRS)

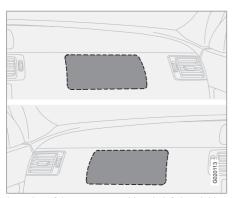

Location of the passenger airbag in left-hand drive and right-hand drive cars

WARNING

Do not put objects in front of or above the instrument panel where the passenger airbag is located.

Airbag (SRS) on the driver's side




The car has an SRS airbag (Supplemental Restraint System) in the steering wheel to supplement the protection afforded by the seatbelt on the driver's side. This airbag is folded up into the centre of the steering wheel. The steering wheel is marked **SRS AIRBAG**.

WARNING

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

Passenger airbag (SRS)

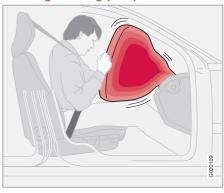

The car has an airbag ¹ to supplement the protection afforded by the seatbelt on the passenger side. This airbag is folded up into a compartment above the glovebox. Its cover panel is marked **SRS AIRBAG**.

MARNING

To minimise the risk of injury if the airbag deploys, passengers must sit as upright as possible with their feet on the floor and back against the backrest. Seatbelts must be secured.

 $^{^{\}rm 1}\,$ Not all cars have a passenger airbag (SRS). This can be unselected when the car is ordered.

01 Safety

01

Airbags (SRS)




WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.²

Never allow a child to stand or sit in front of the front passenger seat. No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger the life of the child.

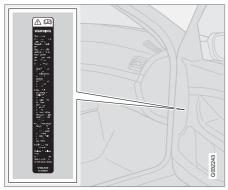

Location of decal for front passenger airbag.

² For information on activated/deactivated airbag (SRS) see page 23.



Activating/deactivating the airbag (SRS)*

Key switch off - PACOS

General information

The airbag (SRS) for the front passenger seat can be deactivated if the car is equipped with a PACOS switch. For information on how to activate/deactivate, see under the heading Activating/deactivating.

Key switch off/switch

The switch for the passenger airbag (PACOS) is located on the passenger end of the instrument panel and is accessible when the passenger door is open, (see under the heading, Switch – PACOS). Check that the switch is in the required position. Volvo recommends that the key blade is used to change position.

For information on the key blade, see page 115.

$\overline{\wedge}$

WARNING

Failure to follow the advice given above can endanger life.



WARNING

If the car is equipped with a front passenger airbag (SRS), but does not have a switch (PACOS), the airbag will always be activated.

Λ

WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag


is activated and the symbol in the roof console is illuminated. Failure to follow this advice could endanger the life of the child.



WARNING

Do not allow anyone to sit in the front passenger seat if the text message in the roof panel indicates that the airbag (SRS) is deactivated and if the warning symbol for the airbag system is also displayed on the combined instrument panel. This indicates that there has been a severe malfunction. Contact an authorised Volvo workshop immediately.

Activating/deactivating

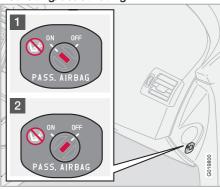

Switch location.

- The airbag is activated. With the switch in this position, persons taller than 140 cm can sit in the front passenger seat, but never children in a child seat or on a booster cushion.
- The airbag is deactivated. With the switch in this position, children in a child seat or on a booster cushion can sit in the front passenger seat, but never persons taller than 140 cm.



Activating/deactivating the airbag (SRS)*



WARNING

Activated airbag (passenger seat):

Never place a child in a child seat or on a booster cushion on the front passenger seat when the airbag is activated. This applies to everyone shorter than 140 cm.

Deactivated airbag (passenger seat):

No one taller than 140 cm should ever sit in the front passenger seat when the airbag is deactivated.

Failure to follow the advice given above can endanger life.

Messages



Indicator showing that the passenger airbag (SRS) is deactivated.

A text message and a symbol in the roof panel indicate that the airbag (SRS) for the front passenger seat is deactivated (see preceding illustration).



Indicator showing that the passenger airbag (SRS) is activated.

A warning symbol in the roof panel indicates that the airbag (SRS) for the front passenger seat is activated (see preceding illustration).



NOTE

When the remote control is turned to ignition position II or III the warning symbol for the airbag is shown in the combined instrument panel for approx. 6 seconds, see page 19.

Following which, the indicator in the roof console is illuminated showing the correct status for the front passenger seat airbag. For more information on the different ignition positions, see page 135.



Side airbags (SIPS bags)

Side airbags - SIPS bags



Side airbag locations.

In a side impact collision a large proportion of the collision force is transferred by the SIPS (Side Impact Protection System) to beams, pillars, the floor, the roof and other structural parts of the body. The side airbags at the driver's and front passenger seats protect the chest area and are an important part of the SIPS. The side airbags are located in the front seat backrests.

WARNING

Repairs must only be performed by an authorised Volvo workshop.

Any interference in the SIPS bag system could cause malfunction and result in serious personal injury.

WARNING

Do not put objects in the area between the outside of the seat and the door panel, since this area is required by the side airbag.

WARNING

Only use car seat covers approved by Volvo. Other seat covers may impede the operation of the side airbags.

WARNING


Side airbags are a supplement the seatbelts. Always use a seatbelt.

Child seats and side airbags

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the side airbag.

A child seat or booster cushion can be placed on the front passenger seat provided that the car does not have an activated 1 passenger airbag.

SIPS bags

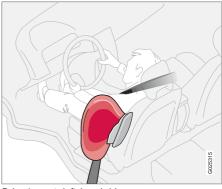


Driver's seat, left-hand drive,

The SIPS bag system consists of side airbags and sensors. A sufficiently violent collision trips the sensors and the side airbags are inflated. The airbag inflates between the occupant and the door panel and thereby cushions the initial impact. The airbag deflates when compressed by the collision. The side airbag is normally only deployed on the side of the collision.


¹ For information on activated/deactivated airbag (SRS), see page 23.

01 Safety

Side airbags (SIPS bags)

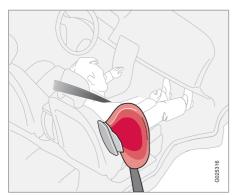

Front passenger seat, left-hand drive.

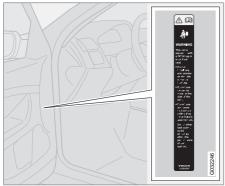

Location of decal for side airbag, driver's side, front, left-hand drive car.



Inflatable Curtain (IC)

Properties



The inflatable curtain IC (Inflatable Curtain) is a supplement to the SIPS and the airbags. It is fitted in the headlining along both sides of the roof and protects all of the vehicle's outer seats. A sufficiently violent collision trips the sensors and the inflatable curtain is inflated. The inflatable curtain helps to prevent the driver and passengers from striking their heads on the inside of the car during a collision.

Λ

WARNING

Never hang or attach heavy items onto the handles in the roof. The hook is only designed for light clothing (not for solid objects such as umbrellas for example).

Do not screw or install anything onto the car's headlining, door pillars or side panels. This could compromise the intended protection. Only ever use Volvo genuine parts that are approved for placement in these areas.



WARNING

Do not load the car higher than 50 mm under the top edge of the side windows. Otherwise, the intended protection of the inflatable curtain, which is concealed in the headlining, may be compromised.



WARNING

The inflatable curtain is a supplement to the seatbelts.

Always use a seatbelt.

(Z)

WHIPS

Protection against whiplash injury - WHIPS



The whiplash protection system (WHIPS) consists of energy absorbing backrests and specially designed head restraints for the front seats. The system is actuated by a rear-end collision, where the angle and speed of the collision, and the nature of the colliding vehicle all have an influence.



WARNING

The WHIPS system is a supplement to the seatbelts. Always use a seatbelt.

Properties of the seat

When the WHIPS system is deployed, the front seat backrests are lowered backward to alter the seating position of the driver and front seat passenger. This reduces the risk of whiplash injury.

Λ

WARNING

Never modify or repair the seat or WHIPS system yourself. Contact an authorised Volvo workshop.

WHIPS system and child seats/booster cushions

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the WHIPS system.

Correct seating position

For the best possible protection, the driver and front seat passenger should sit in the centre of the seat with as little space as possible between the head and the head restraint.



WHIPS

Do not obstruct the WHIPS system





Do not squeeze rigid objects between the rear seat cushion and the front seat backrest. Make sure you do not to obstruct the function of the WHIPS system.



WARNING

If a rear seat backrest is folded down, the corresponding front seat must be moved forward so that it does not touch the folded backrest.

🚹 WARNING

If a seat has been subjected to extreme forces, such as due to a rear-end collision, the WHIPS system must be checked by an authorised Volvo workshop.

Part of the WHIPS system's protective capacity may have been lost even if the seat appears to be undamaged.

Contact an authorised Volvo workshop to have the system checked after even a minor rear-end collision.

When the systems deploy

Activating the systems

| Activating the systems | | | | |
|---------------------------------------|---|--|--|--|
| System | Triggered | | | |
| Seatbelt tensioner, front seat | In a frontal collision and/or side-impact accident and/or rear-end collision. | | | |
| Seatbelt tensioner, outside rear seat | In a frontal collision | | | |
| Airbags (SRS) | In a frontal collision ^A | | | |
| Side airbags (SIPS) | In a side-impact accident ^A | | | |
| Inflatable Curtain IC | In a side-impact accident ^A | | | |
| Whiplash protection WHIPS | In a rear-end collision | | | |

A The bodywork of the car could be greatly deformed in a collision without airbag deployment. A number of factors such as the rigidity and weight of the object hit, the speed of the car, the angle of the collision etc. affects how the different safety systems of the car are activated.

If the airbags have been deployed, the following is recommended:

- Have the car transported to an authorised Volvo workshop. Do not drive with deployed airbags.
- Let an authorised Volvo workshop replace components in the car's safety system.
- Always contact a doctor.



NOTE

The SRS, SIPS, IC and belt tensioner systems are deployed only once during a collision.

WARNING

The airbag system's control module is located in the centre console. If the centre console is drenched with water or other liguid, disconnect the battery cables. Do not attempt to start the car since the airbags may deploy. Have the car transported to an authorised Volvo workshop.




WARNING

Never drive with deployed airbags. They can make steering difficult. Other safety systems may also be damaged. The smoke and dust created when the airbags are deployed can cause skin and eye irritation/ injury after intensive exposure. In case of irritation, wash with cold water. The rapid deployment sequence and airbag fabric may cause friction and skin burns.



Crash mode

Driving after a collision

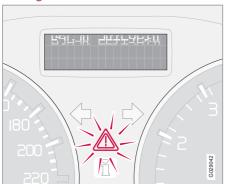

If the car is involved in a collision, the text CRASH MODE SEE MANUAL may appear on the information display. This means that the car has reduced functionality. Crash mode is a protective state that is enforced when the collision may have damaged any of the car's vital functions, such as the fuel lines, sensors for one of the safety systems, or the brake system.

Attempting to start the car

First, check that no fuel is leaking from the car. There must be no smell of fuel either.

If everything seems normal and you have checked for indications of fuel leakage, you may attempt to start the car.

Firstly, remove the ignition key and then reinsert it. The car's electronics will then try to reset themselves to normal mode. Then try to start the car. If **CRASH MODE SEE MANUAL** is still shown on the display then the car must not be driven or towed. Even if the car appears to be driveable, hidden damage may make the car impossible to control once moving.

Moving the car

If NORMAL MODE is shown after CRASH MODE SEE MANUAL has been reset, the car can be moved carefully out of a dangerous position. Do not move the car further than necessary.

\triangle

WARNING

Never attempt to repair your car or reset the electronics yourself if the car has been in crash mode. This could result in personal injury or the car not functioning as normal. Always allow an authorised Volvo workshop to check and restore the car to NORMAL MODE after CRASH MODE SEE MANUAL has been displayed.

WARNING

Never, under any circumstances, attempt to restart the car if it smells of fuel when the **CRASH MODE SEE MANUAL** message is displayed. Leave the car at once.



WARNING

If the car is in crash mode it must not be towed. It must be transported to an authorised Volvo workshop.



Child safety

Children should sit comfortably and safely

The position of a child in the car and the choice of equipment are dictated by the child's weight and size. For more information, see page 33.



NOTE

Regulations regarding the placement of children in cars vary from country to country. Check what does apply.

Children of all ages and sizes must always sit correctly secured in the car. Never allow a child to sit on the knee of a passenger.


Volvo's own child safety equipment is designed for your car. Use Volvo genuine equipment to best ensure that the mounting points and attachments are correctly positioned and are sufficiently strong.



NOTE

In the event of questions when fitting child safety products, contact the manufacturer for clearer instructions.

Child seats

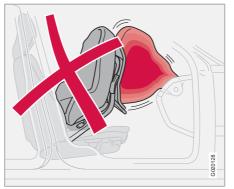

Child seats and airbags are not compatible.

Volvo has child safety products that are designed for and tested by Volvo.



NOTE

When using child safety products it is important to read the installation instructions included with the product.

Do not attach the straps for the child seat to the horizontal adjustment bar, springs, rails or beams under the seat. Sharp edges can damage the straps.

Allow the back of the child seat to rest against the dashboard. This applies to cars without a passenger airbag, or where the airbag is deactivated.

Location of child seats

You may place:

- a child seat/booster cushion on the front passenger seat, provided the passenger airbag is not activated ¹.
- a rear-facing child seat in the rear seat that uses the back of the front seat as support.

Always place a child in the rear seat if the passenger airbag is activated. A child in the front passenger seat could suffer serious injury if the airbag deploys.

¹ For information on activated/deactivated airbag (SRS), see page 23.



Child safety



WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.²

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger the life of the child.



WARNING

Booster cushions/child seats with steel braces or some other design that could rest on the seatbelt buckle's opening button must not be used, as they could cause the seatbelt buckle to open accidentally.

Do not allow the upper section of the child seat to rest against the windscreen.

Label Airbag



Label located on instrument panel end face.

Placement of children in the car ³

| Weight/age | Front seat ^A | Outer rear seat | Centre rear seat |
|--|---|---|---|
| Group 0 max. 10 kg (0 – 9 months) Group 0+ max. 13 kg Type approval: E5 03135 Britax Baby Safe Plus – rear-facing child seat, secured with the car's seatbelt and straps. Use a protective cushion between the child seat and the dash-board. Type approval: E5 03135 Britax Baby Safe Plus – rear-facing child seat, secured with the ISOFIX fixture system. Type approval: E1 03301146 | Volvo Child seat – rear-facing child seat, secured with the car's seatbelt, straps and support legs. Type approval: E5 03135 | Volvo Child seat – rear-facing child seat, secured with the car's seat- belt, straps and support legs. Type approval: E5 03135 | |
| | child seat, secured with the ISOFIX fixture system. | Britax Baby Safe Plus – rear-facing child seat, secured with the ISOFIX fixture system. Type approval: E1 03301146 | Britax Baby Safe Plus – rear-facing child seat secured with the car's seatbelt. Type approval: E1 03301146 |

² For information on activated/deactivated airbag (SRS) see page 23.

³ With regard to other child seats the car should be included in the manufacturer's enclosed list of vehicles or be universally approved in accordance with the ECE R44 legal requirement.

01 Safety

01

Child safety

| Weight/age | Front seat ^A | Outer rear seat | Centre rear seat |
|-----------------|--|--|--|
| Group 1 | Volvo Child seat – rear-facing child | Volvo Child seat – rear-facing child | Volvo Child seat – rear-facing child |
| 9 – 18 kg | seat, secured with the car's seatbelt and straps. Use a protective cushion | seat, secured with the car's seatbelt, straps and support legs. | seat, secured with the car's seat- belt, straps and support legs. |
| (9 – 36 months) | between the child seat and the dash- board. | Type approval: E5 03135 | Type approval: E5 03135 |
| | Type approval: E5 03135 | | |
| | Britax Fixway – rear-facing child seat, secured with the ISOFIX fixture system and straps. | Britax Fixway – rear-facing child seat, secured with the ISOFIX fixture system and straps. | |
| | Type approval: E5 03171 | Type approval: E5 03171 | |
| Group 2/3 | Volvo Booster cushion - with or with- | Volvo Booster cushion – with or with- | Volvo Booster cushion – with or |
| 15 – 36 kg | out backrest. | out backrest. | without backrest. |
| (3 – 12 years) | Type approval: E5 03139 | Type approval: E5 03139 | Type approval: E5 03139 |
| · · · · · · | | Volvo Integrated booster cushion – available as a factory fitted option. | |
| | | Type approval: E5 03168 | |

A For information on activated/deactivated airbag (SRS), see page 23.



Child safety



WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.⁴

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger the life of the child.


Integrated booster cushions*



Volvo's integrated booster cushion for the outer rear seats is specially designed to pro-

vide optimum safety for children. Combined with the regular seatbelts the integrated booster cushion is approved for children weighing between 15 and 36 kg.

Raising the booster cushion

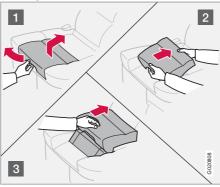

- Pull that handle to raise the booster cushion.
- 2 Grasp the cushion with both hands and push it backwards.
- 3 Push until it locks in place.

WARNING

The booster cushion must be in the locked position before the child is placed there.

Check that:

- the booster cushion in locked in position.
- the seatbelt is in contact with the child's body and is not slack or twisted, and that the seatbelt is positioned correctly across the shoulder.
- the hip strap is low across the hips for optimum protection.
- the seatbelt does not lie across the child's throat or below the shoulder.
- Carefully adjust the position of the head restraint to suit the child.

⁴ For information on activated/deactivated airbag (SRS) see page 23.



Child safety



WARNING

Repair or replacement should only be performed by an authorised Volvo workshop. Do not make any modifications or additions to the booster cushion.

If an integrated booster cushion has been subjected to a major load, such as in conjunction with a collision, the entire booster cushion must be replaced. Even if the booster cushion appears to be undamaged, it may not afford the same level of protection. The booster cushion must also be replaced if it is heavily worn.

Lowering the booster cushion




- Pull the handle.
- 2 Lower the seat and press until it locks.



NOTE

Remember to stow away the booster cushion before lowering the rear seat backrest.

ISOFIX fixture system for child seats*

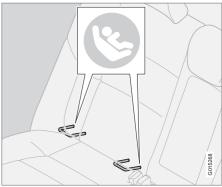

Mounting points for the ISOFIX fixture system are concealed behind the lower section of the rear seat backrest. in the outer seats.

The location of the mounting points is indicated by symbols in the backrest upholstery (see illustration above).

Press the seat cushion down to access the mounting points.

Always follow the manufacturer's installation instructions when connecting a child seat to the ISOFIX mounting points.

INSTRUMENTS AND CONTROLS










Overview, left-hand drive cars

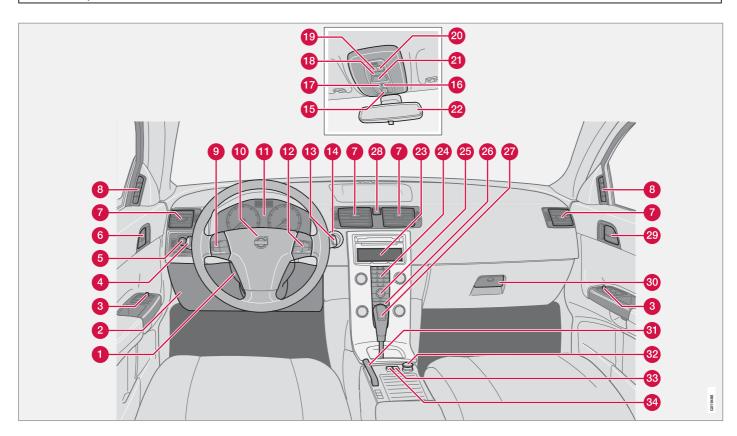

02 Instruments and controls

02


Overview, left-hand drive cars

- Steering wheel adjustment
- Bonnet release
- Control panel
- 4 Direction indicators, main beam, trip computer
- 6 Lighting, fuel filler flap opener
- 6 Door handle, lock button.
- Air vents in dashboard
- Air vent for side window
- Oruise control
- Horn, airbag
- Combined instrument panel
- Keypad for infotainment system
- Windscreen wipers and washer, headlamp washers
- Ignition switch
- Sunroof controls
- 16 No function
- No function
- (8) Switch for interior lighting
- 19 Reading lamp, left-hand side

- Reading lamp, right-hand side
- Seatbelt reminder and passenger seat airbag indicator
- Interior rearview mirror
- Display for climate control and infotainment system
- Infotainment system
- Controls for climate control, infotainment system and personal preferences
- Climate control
- Gear lever
- Hazard warning flashers
- Door handle
- 30 Glovebox
- Parking brake
- 🥸 Electrical socket/cigarette lighter
- Blind Spot Information System, BLIS
- Switch, optional equipment



Overview, right-hand drive cars

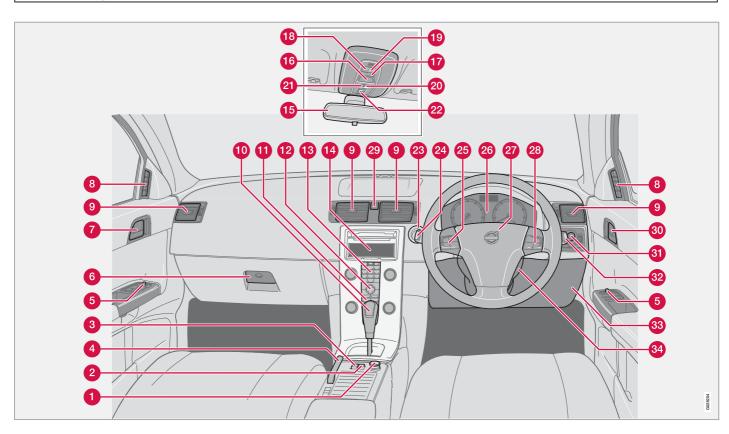

02 Instruments and controls

02


Overview, right-hand drive cars

- Electrical socket, cigarette lighter
- Blind Spot Information System, BLIS
- Switch, optional equipment
- Parking brake
- 6 Control panel
- 6 Glovebox
- Door handle
- Air vent for side window
- Air vents in dashboard
- Gear lever
- Climate control
- Controls for climate control, infotainment system and personal preferences
- (R) Infotainment system
- Display for climate control and infotainment system
- 15 Interior rearview mirror
- Seatbelt reminder and passenger seat airbag indicator
- Switch for interior lighting
- Reading lamp, left-hand side

- Reading lamp, right-hand side
- No function
- 2 No function
- Sunroof controls
- Ignition switch
- Windscreen wipers and washers, headlamp washers
- Cruise control
- 26 Combined instrument panel
- 🜇 Horn, airbag
- Keypad for infotainment system
- Hazard warning flashers
- 🔞 Door handle, lock button
- 3) Lighting, fuel filler flap opener
- Direction indicators, main beam, trip computer
- Bonnet release
- Steering wheel adjustment

Driver's door control panel


Driver's door control panel

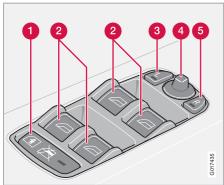

- 1 Disengaging the rear power windows. Electric child safety lock*
- 2 Power windows
- Ooor mirror, left-hand side
- 4 Door mirrors, setting
- 6 Door mirror, right-hand side



Combined instrument panel

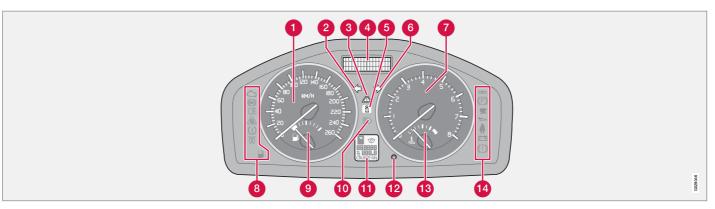

- Speedometer.
- 2 Direction indicators, left.
- Warning symbol.
- Information display The display presents information or warning messages, outside temperature and clock. When the outside temperature is between +2 °C and -5 °C a snowflake symbol appears on the display. This warns of icy roads. The outside temperature gauge may show a slightly high reading after the car has been stationary.
- Information symbol.
- Oirection indicator, right.

- Tachometer Indicates engine speed in thousands of revolutions per minute (rpm).
- 8 Indicator and warning symbols.
- 9 Fuel gauge, see also trip computer, pag e 57.
- Main beam indicator.
- Display Display for automatic gear position, rain sensor, odometer, trip meter and cruise control.
- Button for trip meter Used to measure short distances. Short presses on the button switches between the two trip meters T1 and T2. A long press (more than 2 seconds) resets an active trip meter to zero.
- Temperature gauge Used for the engine cooling system. A message will appear on the display if the temperature becomes too high and the gauge goes into the red zone. Bear in mind that extra lights placed in front of the air intake, for example, reduce the cooling capacity at high outside temperatures and high engine loads.
- 14 Indicator and warning symbols.

Functionality check, symbols


All indicator and warning symbols ¹ illuminate when the ignition key is turned to position **II** before starting. This is to check that the symbols are working. When the engine starts, all the symbols should go out except the handbrake symbol, which only goes out when the brake is disengaged.





If the engine does not start within five seconds, all symbols extinguish except the symbols for a fault in the car's emissions system and for low oil pressure. Certain symbols may have no function, depending on the car's specifications.

Symbols in the centre of the instrument panel

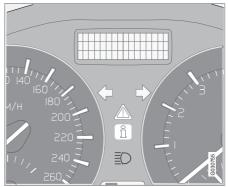



The red warning symbol illuminates when a fault has been indicated which could affect the safety and/or driveability of the car. An explanatory text is shown on the

information display at the same time. The symbol remains visible until the fault has been rectified but the text message can be cleared with the **READ** button, see page 50. The warning symbol can also illuminate in conjunction with other symbols.

When the symbol illuminates:

- Stop in a safe manner. Do not drive the car further.
- Read the information on the information display. Implement the action in accordance with the message in the display. Clear the message using READ.



The yellow information symbol illuminates and a text appears on the information display. The message text is cleared using the **READ** button, see page 50, or disappears

automatically after a period of time (time depending on which function is indicated).

The yellow information symbol can also illuminate in conjunction with other symbols.




NOTE

When a service message is shown, the symbol and message are cleared using the **READ** button, or disappear automatically after a time.

¹ For certain engine variants, the symbol for low oil pressure is not used. Warnings are given via display text, see page 50.



Indicator symbols - left-hand side

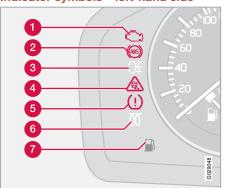

- Fault in car's emissions system
- ABS fault
- Rear fog lamp
- 4 Stability system STC or DSTC
- 6 No function
- 6 Engine preheater (diesel)
- Low level in fuel tank

Emissions system



If the symbol illuminates then it may be due to a fault in the car's emissions system. Drive to an authorised Volvo workshop to have the system checked.

ABS fault



If this symbol illuminates then the system is not working. The car's regular brake system continues to work, but without the ABS function.

- 1. Stop the car in a safe place and turn off the engine.
- 2. Restart the engine.
- Drive to an authorised Volvo workshop to have the ABS checked if the symbol remains lit.

Rear fog lamp



This symbol is lit when the rear fog lamp is on.

Stability system STC or DSTC*



For information on the system's functions and symbols, see page 149.

Engine preheater (diesel)




This symbol illuminates during engine preheating. Preheating occurs when the temperature is below –2 °C. The car can be started once the symbol goes out.

Low level in fuel tank



When the symbol illuminates the level in the fuel tank is low, refuel as soon as possible.

Indicator symbols – right-hand side

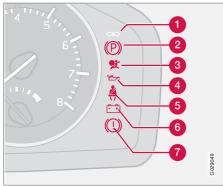

- Indicator symbol for trailer
- Parking brake applied
- Airbags SRS
- 4 Low oil pressure
- Seatbelt reminder
- 6 Alternator not charging
- 🕜 Fault in brake system

Indicator symbol for trailer



This symbol flashes when the direction indicators are used and the trailer is connected. If the symbol does not flash then one of the lamps on the trailer or the car is

faulty.

Parking brake applied



The symbol illuminates when the parking brake is applied. Always pull the parking brake lever to the end position.



NOTE

The symbol illuminates irrespective of how hard the parking brake is applied.

Airbags - SRS



If this symbol remains illuminated or illuminates while driving, it means a fault has been detected in the seatbelt buckle, SRS, SIPS, or IC system. Drive directly to an

authorised Volvo workshop to have the system checked.

Low oil pressure 2



If this symbol illuminates during driving then the engine's oil pressure is too low. Stop the engine immediately and check the engine oil level, top up if necessary. If the

symbol illuminates and the oil level is normal, contact an authorised Volvo workshop.

Seatbelt reminder



This symbol illuminates if someone in a front seat has not put on their seatbelt or if someone in a rear seat has taken off their seatbelt.

Alternator not charging



If this symbol illuminates while driving, a fault has occurred in the electrical system. Contact an authorised Volvo workshop.

Fault in brake system



If this symbol illuminates, the brake fluid level may be too low.

 Stop the car in a safe place and check the level in the brake fluid reservoir, see page 204. If the level in the reservoir is

² For certain engine variants, the symbol for low oil pressure is not used. Warnings are given via display text, see page 50.



below **MIN** the car should not be driven any further. Have the car transported to an authorised Volvo workshop to have the brake system checked.



If the BRAKE and ABS symbols illuminate at the same time, there may be a fault in the brake force distribution system.



- Stop the car in a safe place and turn off the engine.
- 2. Restart the engine.
- If both symbols extinguish, continue driving.
- If the symbols remain illuminated, check the level in the brake fluid reservoir, see page 204.
- If the brake fluid level is normal but the symbols are still lit, the car can be driven, with great care, to an authorised Volvo workshop to have the brake system checked.

If the level in the reservoir is below MIN
then the car should not be driven any further. Have the car transported to an
authorised Volvo workshop to have the
brake system checked.

Λ

WARNING

If the BRAKE and ABS symbols are lit at the same time, there is a risk that the rear end will skid during heavy braking.

Reminder - doors not closed

If one of the doors, the bonnet ³ or the tailgate is not properly closed, the driver will be reminded of this.

Low speed



If the car moves at a speed less than 5 km/h, the information symbol illuminates and DRIVER DOOR OPEN, PASSENGER DOOR OPEN, LEFT REAR

DOOR OPEN, BONNET OPEN or RIGHT REAR DOOR OPEN is shown on the display. Stop the car safely as soon as possible and close the door or bonnet.

High speed



If the car is moving faster than 10 km/h, the symbol illuminates and one of the texts indicated in the preceding paragraph appears on the display.

Tailgate reminder




If the tailgate is open, this information symbol will illuminate and **TAILGATE OPEN** will appear on the display.

³ Only cars with alarm.

Information display

Messages

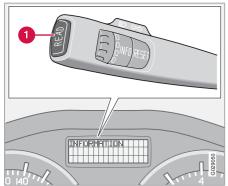

When a warning or indicator symbol illuminates the information display shows a supplementary message.

Press the **READ** button (1).

Switch between messages with the **READ** button. Fault messages are stored in the memory until the fault is rectified.



NOTE

If a warning message appears while you are using the trip computer, the message must be read (press **READ**) before the previous activity can be resumed.

| Message | Specification |
|------------------------------------|---|
| STOP SAFELY ^A | Stop the car in a safe manner and turn off the engine. Serious risk of damage. |
| SERVICE URGENT ^A | Have the car checked by an authorised Volvo workshop immedi- ately. |
| SEE MANUAL ^A | Read the Owner's Manual. |
| SERVICE REQUIRED ^A | Have the car checked by an authorised Volvo workshop as soon as possible. |
| HIGH ENGINE TEMP STOP ENGINE | Stop the car in a safe manner and turn off the engine. Serious risk of damage. |
| BOOK TIME FOR SERVICE | Time to book regular service at an authorised Volvo workshop. |

| Message | Specification |
|--|--|
| TIME FOR SERV-ICE | Time for regular service at an authorised Volvo workshop. The timing is determined by the number of kilometres driven, number of months since the last service, engine running time and oil grade. |
| MAINTENANCE OVERDUE | If the service intervals are not followed then the warranty does not cover any damaged parts. Contact an authorised Volvo workshop for service. |
| TRANSMISSION OIL CHANGE NEE- DED | Have the car checked by an authorised Volvo workshop as soon as possible. |



Information display

| Message | Specification |
|-------------------------------------|--|
| REMINDER CHECK OIL LEVEL | Check the oil level. The message is shown every 10 000 km (certain engine variants). For information on checking the oil level, see page 202. |
| SOOT FILTER FULL SEE MAN- UAL | Diesel particle filter requires regeneration, see page 274. |
| STC/DSTC SPIN CONTROL OFF | The function of the stability and traction control system is reduced, see page 150 for more variants. |
| TRANSMISSION PERFORMANCE LOW | The gearbox cannot handle full capacity. Drive carefully until the message clears, see page 144. |
| | If shown repeatedly: Contact an author- ised Volvo work- shop. |

| Message | Specification |
|------------------------------------|---|
| TRANSMISSION OIL TEMP HIGH | Drive more smoothly or stop the car in a safe manner. Disen- gage the gear and run the engine at idling speed until the message clears. For more information, see page 144. |
| TRANSMISSION HOT STOP SAFELY | Critical fault. Stop the car immediately in a safe manner. Contact an author- ised Volvo work- shop. ^B |

A Part of message, shown together with information on where the problem has arisen.

B For more messages concerning automatic transmission, see

page 144.

Electrical socket

12 V electrical socket



The electrical socket can be used for 12 V accessories, such as mobile phone chargers and coolers. The maximum current is 10 A. For the socket to supply current, the ignition key must be in at least position I.

WARNING

Always leave the plug in the socket when the socket is not in use.

Cigarette lighter*

Activate the lighter by pushing in the button. The button pops out when the lighter is hot. Pull out the lighter and light a cigarette on the heated coils.

Electrical socket in the rear seat



The electrical socket can be used for various accessories, such as mobile phone chargers and coolers.

NOTE

Cigarette lighter does not work in this socket.

It is designed for 12 V. The maximum current is 10 A. For the socket to supply current, the ignition key must be in at least position I.


WARNING

Always leave the plug in the socket when it is not in use.



Lighting panel

General

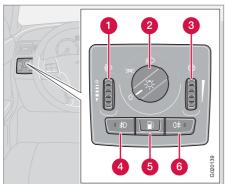

- Thumbwheel for headlamp levelling
- 2 Light switches
- 3 Thumbwheel for adjusting display and instrument lighting
- 4 Front fog lamps*
- Opening the fuel filler flap
- Rear fog lamp

| Posi- tion | Specification |
|---------------|---|
| 0 | Automatic/deactivated dipped beam. Only main beam flash. |
| ED DE | Position/parking lamps. |
| 10 | Automatic dipped beam. Main beam and main beam flash work in this position. |

Headlamp levelling

The load in the car changes the vertical alignment of the headlamp beam, which could dazzle oncoming motorists. Avoid this by adjusting the height of the beam.

- 1. Turn the ignition key to position II.
- 2. Turn the headlamp control (2) to one of the end positions.
- 3. Roll the control (1) up or down respectively to raise or lower beam alignment.

Cars with Bi-Xenon® headlamps* have automatic headlamp levelling, so there is no control (1).

Position/parking lamps.

Position/parking lamps can be switched on irrespective of ignition key position.

Turn the headlamp control (2) to the centre position.

When the ignition key is in position II the position/parking lamps and number plate lighting are always on.

Headlamps

Automatic dipped beam*

Dipped beam comes on automatically when the ignition key is turned to position II, except when the headlamp control (2) is in the centre position. If necessary, the automatic dipped beam can be deactivated by an authorised Volvo workshop.

Automatic dipped beam, main beam

- 1. Turn the ignition key to position ${f II}.$
- Dipped beam is activated by means of turning the headlamp control (2) clockwise to the end position.
- Main beam is activated by means of moving the left-hand stalk switch towards the steering wheel to the end position and releasing it, see page 56.

The lamps are switched off automatically when the ignition key is turned to position I or 0.



Lighting panel

Instrument lighting

The instrument lighting is switched on when the ignition key is in position **II** and the head-lamp control (2) is in one of the end positions. The lighting is automatically dimmed during the day and can be controlled manually at night.

 Roll the control up or down (3) for brighter or dimmer lighting.

Enhanced display lighting

To facilitate reading the odometer, trip meter, clock and outside temperature gauge, these illuminate when the car is unlocked and when the key is removed from the ignition switch. The displays extinguish when the car is locked.

Fog lamps



NOTE

Regulations for use of fog lamps vary from country to country.

Front fog lamps*

The front fog lamps can be switched on along with the headlamps or the position lamps/parking lamps.

Press the button (4).

The light in the button (4) illuminates when the front fog lamps are switched on.

Rear fog lamp

The rear fog lamp can only be switched on with the headlamps or the front fog lamps.


Press the button (6).

The rear fog lamp indicator symbol on the combined instrument panel and the light in the button (6) illuminate when the rear fog lamp is switched on.

Fuel filler flap

Press button (5) to open the fuel filler flap when the car is unlocked, see page 122.

Active Bi-Xenon® lights*

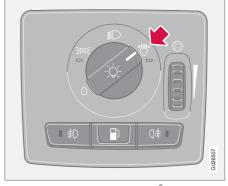


Lighting panel, for active Bi-Xenon lights.

If the car is equipped with active headlamps (Active Bi-Xenon® Lights, ABL) the light from the headlamps follows the steering wheel movement in order to provide maximum lighting in bends and junctions and so provide increased safety.

The LED illuminates when the function is activated. The LED flashes and an error message is shown on the information display in the event of a malfunction. The function is only active in twilight or darkness and only when the car is moving.

Lighting panel

The function can be deactivated/activated with the headlamp control.

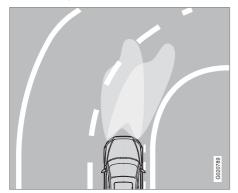

Headlamp pattern with function deactivated (left) and activated (right) respectively.

Brake light


The brake light automatically comes on during braking.

Emergency brake light and automatic hazard warning flashers, EBL*

Emergency Brake Lights (EBL) are activated in the event of heavy braking or if the ABS brakes are activated. This function means that the brake light flashes to immediately alert cars travelling behind. The system is activated if ABS is used for more than 0.5 seconds or in the event of heavy braking, however, only when braking from speeds above 50 km/h. When the speed of the car is lower than 30 km/h the brake lights shine normally again and the hazard warning flashers are switched on automatically. The hazard warning flashers remain on until the car accelerates again but can be deactivated with the button for hazard warning flashers, see page 65.

Left-hand stalk switch

Stalk switch positions

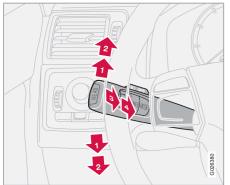

- Short flash sequence, direction indicators
- Continuous flash sequence, direction indicators
- Main beam flash and switching from main to dipped beam
- Home safe lighting and switching from dipped to main beam

Direction indicators

Continuous flash sequence

Move the stalk switch up or down to end position (2).

The stalk switch remains in its end position and is moved back manually, or automatically by steering wheel movement.

Short flash sequence

Move the stalk switch up or down to position (1) and release.

The direction indicators flash three times and the stalk switch returns to its home position.

Main beam flash

Move the stalk switch gently towards the steering wheel to position (3).

Main beam comes on until the stalk switch is released. Main beam flash only works when the ignition key is inserted in the ignition switch.

Switching, main and dipped beam

The ignition key must be in position **II** and the headlamp control in end position, see page 53, for main beam to be switched on.

Activating main beam:

 Move the stalk switch towards the steering wheel to the end position (4) and release.

Deactivating main beam:

 Move the stalk switch towards the steering wheel to position (3) and release.

Home safe lighting


Some of the exterior lighting can be kept switched on to work as home safe lighting after the car has been locked. The standard delay is 30^{-1} seconds, but can be changed to 60 or 90 seconds, see page 75.

- 1. Remove the key from the ignition switch.
- Move the stalk switch towards the steering wheel to the end position (4) and release.
- 3. Get out of the car and lock the door.



Left-hand stalk switch

Trip computer*

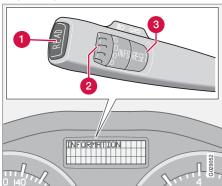

- READ confirms
- 2 Thumbwheel ² browse between menus and options in the trip computer list
- RESET² resets

Controls

To scroll through trip computer information turn the thumbwheel either up or down in steps. Continue turning to return to the starting point.

$|\mathbf{i}|$

NOTE

If a warning message interrupts while you are using the trip computer, this message must be acknowledged. Acknowledge by pressing the **READ** button and revert to the trip computer function.

Functions

The trip computer displays the following information:

- AVERAGE SPEED
- ACTUAL SPEED MPH*
- INSTANTANEOUS
- AVERAGE
- KILOMETRES TO EMPTY TANK
- STC/DSTC, see page 149

AVERAGE SPEED

When the ignition is switched off, the average speed is stored and used as the basis of the new value when you continue driving. Reset using the **RESET** button.

ACTUAL SPEED MPH

Current speed is displayed in mph.

INSTANTANEOUS

Current fuel consumption is calculated every second. The information on the display is

updated every couple of seconds. When the car is stationary, "--.-" appears on the display. During the period for regeneration ³ fuel consumption may increase, see page 274.

AVERAGE

The average fuel consumption is stored when the ignition is switched off and remains until the function is reset. Reset using the **RESET** button.



NOTE

There may be a slight error in the reading if a fuel-driven heater is used.

KILOMETRES TO EMPTY TANK

The range to empty is calculated based on the average fuel consumption over the last 30 km. No guaranteed range remains when the display shows " --- km to empty tank". Refuel as soon as possible.



NOTE

There may be a slight error in the reading if fuel consumption is changed due to a change in driving style or if a fuel-driven heater is used for example.

² No function in cars without trip computer, fuel-driven parking heater as well as stability and traction control system.

³ Only applies to diesel cars with particle filter.



02 Instruments and controls

Left-hand stalk switch

Resetting

1. Select AVERAGE SPEED or AVERAGE


Reset with one press on the RESET button. Press and hold the RESET button for at least five seconds to reset the average speed and average consumption at the same time.

02



Right-hand stalk switch

Windscreen wipers

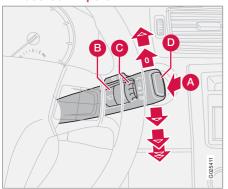

- Mindscreen and headlamp washers
- Rain sensor On/Off
- Thumbwheel
- Rear window wiper and washer

Windscreen wipers off



The windscreen wipers are off when the stalk switch is in position

Single sweep



Raise the stalk switch to make a single sweep.

Intermittent wiping



You can adjust and set a suitable speed for intermittent wiping. Turn the thumbwheel (C) up for a shorter interval between sweeps. Turn it down to increase the delay.

Continuous wiping



The wipers sweep at normal speed.



The wipers sweep at high speed.

IMPORTANT

Before activating the wipers during winter ensure that the wiper blades are not frozen in and that any snow or ice on the windscreen (and rear window) is scraped away.

IMPORTANT

Use plenty of washer fluid when the wipers are cleaning the windscreen. The windscreen must be wet when the windscreen wipers are operating.

Windscreen/headlamp washer

Move the stalk switch toward the steering wheel to start the windscreen and headlamp washers. The wipers will make several more sweeps once the stalk switch is released.

High-pressure headlamp washing*

High-pressure headlamp washing consumes a large quantity of washer fluid. To save fluid, the headlamps are washed as follows:

Dipped beam selected with the switch on lighting panel:

The headlamps are washed the first time the windscreen is washed. Within the next ten minutes, they are washed every fifth wash cycle of the windscreen. In the event of a longer interval the headlamps are washed each time.

Parking/position lamps selected with the switch on the lighting panel:

- Bi-Xenon® headlamps are only washed every fifth wash cycle irrespective of the time that elapses.
- Halogen headlamps are not washed.


The switch on the lighting panel is in position 0:

- Bi-Xenon® headlamps are only washed every fifth wash cycle irrespective of the time that elapses.
- Halogen headlamps are not washed.



Right-hand stalk switch

Rear window wiper and washer

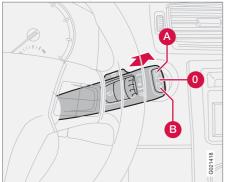

Move the stalk switch forward to start rear window washing and wiping. The wiper blade makes several extra sweeps once washing has finished. The button at the end of the stalk switch has three positions:

- A Intermittent wiping: Depress the top of the button.
- Neutral position: Function deactivated.
- Constant speed: Depress the bottom of the button.


Wiper - reversing

Engaging reverse gear while the windscreen wipers are on initiates intermittent rear window

wiping. If the rear window wiper is already on at normal speed, no change is made.

The function for intermittent wiping for reverse can be deactivated. Contact an authorised Volvo workshop.

Rain sensor*

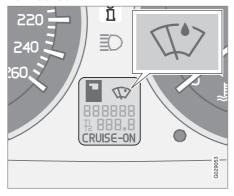

The rain sensor automatically activates the windscreen wipers based on how much water it detects on the windscreen. The sensitivity of the rain sensor can be adjusted using the thumbwheel (C), see page 59.

Turn the thumbwheel upwards for higher sensitivity and downwards for lower sensitivity, (an

extra sweep is made when the thumbwheel is turned upwards).

On/Off

When activating the rain sensor, the ignition key must be in position I or II and the wind-screen wiper stalk switch must be in position 0 (not activated).

Activating the rain sensor:

 Press the button (B), see page 59. A display symbol shows that the rain sensor is active.

To turn the rain sensor off, either:

- 1. Press button (B)
- Press the stalk switch downward to another wiper program. If the stalk switch is raised, the rain sensor will remain active, the wipers make an extra sweep and then return to rain sensor mode when the stalk is released to position 0 (not activated), see page 59.

The rain sensor is automatically deactivated when the key is removed from the ignition switch or five minutes after the ignition is switched off.

02 Instruments and controls



Right-hand stalk switch



IMPORTANT

At an automatic car wash: Deactivate the rain sensor by pressing the button (B) while the ignition key is in position I or II. Otherwise, the windscreen wipers could start swiping and become damaged.

Thumbwheel


Use the thumbwheel to adjust the frequency of wiper sweeps when intermittent wiping is selected, or the sensitivity to rain when the rain sensor is selected.

02



Cruise control*

Activating

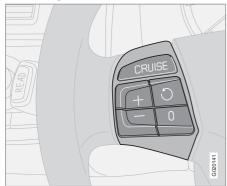


The controls for cruise control are to the left of the steering wheel.

Setting the desired speed:

- Press the CRUISE button. CRUISE is shown on the combined instrument panel.
- Touch + or to lock the vehicle speed. CRUISE-ON appears in the combined instrument panel.

Cruise control cannot be engaged at speeds below 30 km/h or above 200 km/h.

Increasing or decreasing speed

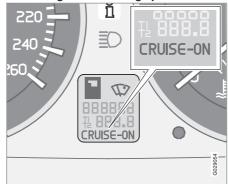

Increase or decrease the speed by pressing and holding + or -. The speed of the car when the button is released is set as the new speed.

A brief press (less than half a second) on + or - changes the speed by 1 km/h or 1 mph ¹.

(i)

NOTE

A temporary increase in speed (less than one minute) using the accelerator, such as while overtaking, does not affect the cruise control setting. When you release the accelerator, the car will return to the programmed speed.

Temporary disengagement

 Press 0 to disengage the cruise control temporarily. CRUISE will be shown on the combined instrument panel. The speed set earlier is stored in the memory.

The cruise control is also temporarily disengaged when:

- the brake pedal or clutch pedal is depressed
- speed falls below 25–30 km/h¹ when travelling uphill
- the gear selector is moved to position N
- wheel spin or wheel lock-up occurs.
- a temporary increase in speed lasts longer than one minute.

¹ Depending on engine type.

02 Instruments and controls



Cruise control*

Return to the set speed



 Press this button to resume the previously set speed. CRUISE ON appears on the combined instrument panel.

Disengaging

 Press CRUISE to disengage the cruise control. CRUISE ON clears on the combined instrument panel. 02

02

Keypad in the steering wheel*

Button functions



The four buttons at the bottom of the steering wheel keypad control the radio and the phone. The function of a button depends on which system is active. The steering wheel keypad can be used to scroll between preset stations. change CD tracks and adjust the volume.

Press and hold one of the arrow keys to fast forward/reverse or search for the next station.


The phone must be switched on to adjust audio system settings. It must be activated with the ENTERkey to enable control of the phone system with the arrow keys.

To return to Audio only, press EXIT.



Steering wheel adjustment, hazard warning flashers

Steering wheel adjustment

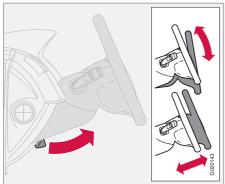

The steering wheel can be adjusted for both height and reach.

- 1. Pull the lever towards you to release the steering wheel.
- 2. Adjust the steering wheel to the position that suits you best.
- Push back the lever to fix the steering wheel in place. If the lever is stiff, press the steering wheel lightly at the same time as you push the lever back.

↑ WARNING

Adjust the steering wheel before driving off, never while driving. Before driving, check that the steering wheel is fixed in position.

Hazard warning flashers



Use the hazard warning flashers (all direction indicators flash) when the car is stopped where it could be a traffic hazard or obstruction. Press the button to activate the function.

A sufficiently violent collision or heavy braking activates the hazard warning flashers automatically, see page 55. The function can be deactivated with the button.


i NOTE

Regulations regarding the use of hazard warning flashers vary from country to country.



Parking brake

Parking brake (handbrake)

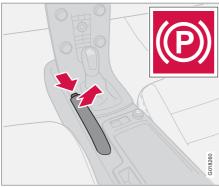

The lever is located between the front seats.



NOTE

The warning lamp symbol in the combined instrument panel illuminates irrespective of how hard the parking brake is applied.

How to Apply the parking brake

- 1. Press the foot brake pedal down firmly.
- Pull up the parking brake lever up firmly to its full extent.
- 3. Release the foot brake pedal and make sure that the car is at a standstill position.

4. If the vehicle rolls, the parking brake lever must be pulled more firmly.

When parking a vehicle always put the gear selector in position 1 (for manual transmission) or **P** (for automatic transmission).

Parking on a hill

If the car is parked facing uphill; turn the wheels away from the kerb.

If the car is parked facing downhill; turn the wheels toward the kerb.

How to release the parking brake

- 1. Press the foot brake pedal down firmly.
- Pull the parking brake lever up slightly, press the button, release the parking brake lever and release the button.



Power windows

Operation

The power windows are operated using the controls in the doors. The ignition key must be in position I or II for the power windows to operate.

The windows continue to work for a limited amount of time when the car is stopped and ignition key is removed, provided none of the doors is opened. Operate the windows with caution.

To open a window:

Depress the front of the control.

To close a window:

- Raise the front of the control.



NOTE

One way to reduce the pulsating wind noise when the rear windows are open is to also open the front windows slightly.

Remote control and lock buttons


To operate the power windows with lock buttons and remote control, see pages 114 and 122.

\wedge

WARNING

Make sure that children and other passengers cannot be trapped in any way when closing the windows. Pay close attention if the rear door windows are controlled from the driver's door or if the windows are closed with the remote control.

Driver's door

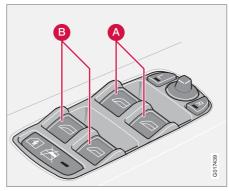

Controls, power windows.

A Front window controls

Rear window controls

The driver can operate all of the power windows from the driver's seat.

The windows can be opened and closed in two ways:

Manual operation

Depress one of the controls (A) or (B) gently or raise it gently. The power window opens or closes as long as the switch is actuated.

Automatic operation

Fully depress one of the controls (A) or raise it, then release. The side window will then open or close automatically. If the window is obstructed by an object, the movement will stop.



WARNING

The function that interrupts the movement of the windows in the event of them being blocked works with both automatic and manual closing, although not with pinch protection deployed.

WARNING

If there are children in the car:

Remember to switch off the supply to the power windows by removing the ignition key if the driver leaves the car.

Make sure that children and other passengers cannot be trapped in any way when closing the windows.



Power windows

Blocking power windows in the rear doors



Blocking rear power windows and electric child safety locks*.

The light in the switch is lit

The rear door windows can only be operated from the driver's door.

The light in the switch is extinguished


The rear door windows can be operated both with the control on each rear door and with the controls on the driver's door.

\mathbf{i}

i) NOTE

If the car has electric child safety locks on the rear doors, the light indicates that these are also activated. The doors then cannot be opened from the inside. A text message is shown on the display when the electric child safety locks are activated.

Front passenger seat

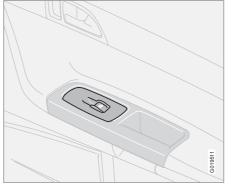

Front passenger seat.

The control in the front passenger door operates that window only.

Rear power windows




The rear door windows can be operated with the control on each door or with the switch on the driver's door. If the light in the switch for blocking the rear power windows (located in the control panel in the driver's door) is lit, the rear door windows can only be operated from the driver's door. The windows in the rear doors are operated in the same way as the windows in the front doors.



Rearview and door mirrors

Interior rearview mirror

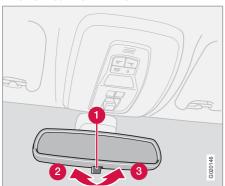

Bright light from behind could be reflected in the rearview mirror and dazzle the driver. Use dimming when disturbed by light from behind.

Dipping

- Control for dimming
- Normal position
- Oimmed position.

Automatic dimming*

Bright light from behind is automatically dimmed by the rearview mirror. The control (1) is not available in mirrors with automatic dimming.

Interior rearview mirror with compass*



The upper right-hand corner of the rearview mirror has an integrated display that shows the compass direction in which the front of the car is pointing. Eight different directions are shown with English abbreviations: N (north), NE (north east), E (east), SE (south east), S (south), SW (south west), W (west) and NW (north west).

Calibrating the compass



The earth is divided into 15 magnetic zones. The compass is set for the geographical area to which the car was delivered. The compass should be calibrated if the car is moved across several magnetic zones.


- 1. Stop the car in a wide open area with the engine running at idling speed.
- Press and hold button (1) for at least 6 seconds. Following which, the character C is shown (the button is concealed so use a paper clip for example to press it in).
- Press and hold button (1) for at least 3 seconds. The number for the current magnetic zone is displayed.

02




Rearview and door mirrors


- Press the button (1) repeatedly until the number for the required magnetic zone (1– 15) is shown, refer to the map of magnetic zones for the compass.
- 5. Wait until the display returns to showing the character **C**.
- Following which, press and hold the button in for 9 seconds and select L for left-hand drive cars and R for right-hand drive.
- Drive slowly in a circle with a maximum speed of 10 km/h until a compass direction is shown on the display, which indicates that the calibration is complete.

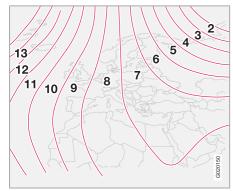


Magnetic zones, Europe.

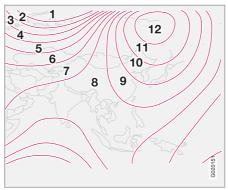


Magnetic zones, Asia.

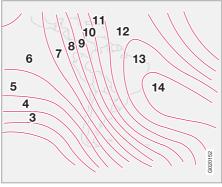

Magnetic zones, South America.

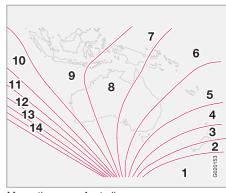

Magnetic zones, Australia.

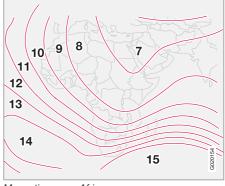


Magnetic zones, Africa.



Rearview and door mirrors

Door mirrors

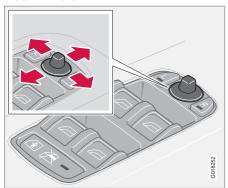

The controls for adjusting the two door mirrors are at the front of the driver's door armrest. The rearview mirrors can be operated in ignition position I and II.

- Press the L button for the left-hand door mirror or the R button for the right-hand door mirror. The light on the button illuminates.
- 2. Adjust the position with the joystick in the centre.
- 3. Press the **L** or **R** button again. The light goes out.

Retractable power door mirrors*

The mirrors can be retracted for parking/driving in narrow spaces. This can be carried out in ignition position I and II.

Retracting the mirrors

- 1. Press the L and R button at the same time.
- 2. Release the buttons. The mirrors automatically stop in the fully retracted position.

1

IMPORTANT

Do not use a scraper to remove ice from the mirrors as this could scratch the glass and the water and dirt-repellent coating* could be damaged. Use the defroster function instead, see page 85 or 89.

Λ

WARNING

Both door mirrors are the wide angled type to provide optimal vision. Objects may appear further away than they actually are.

Folding out the mirrors

- 1. Press the **L** and **R** button at the same time.
- Release the buttons. The mirrors automatically stop in the fully extended position.

Automatic retracting/extending When the car is locked/unlocked with the remote control or using the Keyless-system, see page 118, the door mirrors are automatically retracted/extended.



NOTE

The door mirrors will not be extended automatically during unlocking if they were retracted using the controls in the door.

If the car is locked with the remote control and is then started, the door mirrors will still be extended.

The function can be activated/deactivated under Car settings → Retract mirrors when locking, see page 75 for a description of the menu system.

Resetting to neutral

Mirrors that have been moved out of position by an external force must be reset to the neutral position for electric retracting and extending to work.

- Use the L and R buttons to retract the mirrors.
- Extend the mirrors again with the L and R button. The mirrors are now reset to the neutral.



Rearview and door mirrors

Home safe and approach lighting

The light* on the door mirrors illuminates when the approach lighting or home safe lighting is activated.

Blind Spot Information System, BLIS*

BLIS is an information system that under certain conditions can help to draw the driver's attention to vehicles moving in the same direction in the so-called "blind spot", see page 153.

Water and dirt-repellent coating*



The front side windows and/or door mirrors are treated with a coating

which improves the view in poor weather conditions. For information on maintenance, see page 191.

Rearview and door mirrors

In certain weather conditions, the function of the dirt-repellent coating is improved if the door mirror defrosters are used, see page 85 or 88.

Heat the door mirrors:

- If they are covered with ice or snow.
- In heavy rain and dirty road conditions.
- If they are misted.




IMPORTANT

Do not use a metal ice scraper to remove ice from the windows. The water and dirt-repellent coating could be damaged. Use the defroster to remove ice from the mirrors. An ice scraper could scratch the mirror glass!



Power sunroof*

Open positions

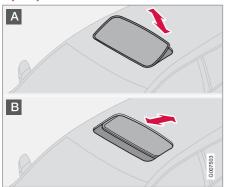

The sunroof controls are located in the roof panel. The sunroof can be opened in two positions:


- A Ventilation position, up at the rear edge
- B Sliding position, backwards/forwards

The ignition key must be in position I or II.

M WARNING

If there are children in the car:

Switch off the supply to the power sunroof by removing the ignition key if the driver leaves the car.

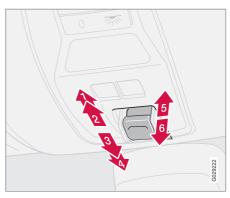

- Opening, automatic
- Opening, manual
- Closing, manual
- Closing, automatic
- Opening, ventilation position
- 6 Closing, ventilation position

Ventilation position

Open:

 Press the rear edge of the control (5) upward.

Close:

 Pull the rear edge of the control (6) downward.

From ventilation position to fully open sunroof:

Pull the control rearward to the end position (1) and release.

Sliding position

Automatic operation

Pull the control past the point of resistance

 (2) to the rear end position (1) or past the point of resistance (3) to the forward end position (4) and release. The sunroof opens/closes completely.

Manual operation Open:

 Pull the control rearward to the point of resistance (2). The sunroof moves toward the fully open position as long as the button is held in this position.

Close:


 Press the control forward to the point of resistance (3). The sunroof moves toward the closed position as long as the button is held in this position. 02

Power sunroof*

WARNING

The sunroof's pinch-protection function only operates during automatic closing, not manual closing.

Closing with remote control or lock button

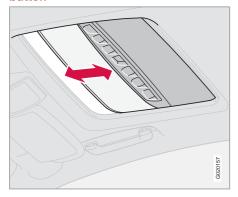

One long press on the lock button closes the sunroof and all the windows. The doors and the tailgate are locked.

If you need to interrupt closing:

Press the lock button again.

WARNING

Make sure that children or other passengers are not in danger of becoming trapped in any way when closing the sunroof with the remote control. Always operate the sunroof with caution.

Sunscreen

The sunroof features a manual, sliding interior sunscreen. The sunscreen slides back automatically when the sunroof is opened. Grip the handle and slide the screen forward to close it.


Pinch protection

The sunroof's pinch protection function is activated if the hatch is blocked by an object. If blocked, the sunroof will stop and automatically open to the previous position.

WARNING

The sunroof's pinch protection function only operates during automatic closing, not during manual closing.

Make sure that nobody is in danger of becoming trapped in any way when closing the sunroof.

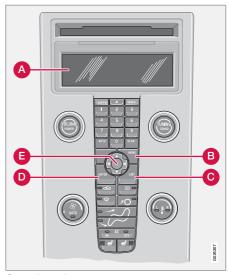

Control panel.



Personal preferences

Possible settings

Personal preferences can be set for some of the car's functions. This applies to locks, climate control and audio functions. For audio functions, see page 228.

Control panel

- A Display
- MENU
- EXIT
- ENTER
- Navigation

Use

The settings are shown on the display (A).

Open the menu to enter settings:

- 1. Press MENU (B).
- 2. Scroll, for example, to **Car settings** with the navigation button (E).
- 3. Press ENTER (D).
- 4. Select an alternative with the navigation button (E).
- 5. Press **ENTER** to activate the selection.

Close the menu:

Press EXIT (C) for approximately one second.

Clock, adjustment

The hour and minute are each adjusted separately.

- Use the numbers on the keypad or "arrow up" or "arrow down" on the navigation button (E).
- Select the number for adjustment using "arrow right" or "arrow left" on the navigation button.
- 3. Press ENTER to start the clock.



NOTE

If the car has a 12-hour clock then **AM/PM** is selected using "arrow up" or "arrow down" after the final minute number has been adjusted.

Climate settings

Automatic blower adjust

The fan speed can be set to **AUTO** mode in cars equipped with ECC:

Select from Low, Normal and High.

Recirculation timer

When the timer is active, the air recirculates for 3-12 minutes, depending on the outside air temperature.

 Select On/Off depending on whether or not you wish the recirculation timer to be active.

Reset all

Resets the climate function options to the factory settings.

Car settings

Retract mirrors when locking*

When the car is locked/unlocked with the remote control the door mirrors can be retracted/extended automatically. The On/Off options are available.

Reduced guard*

The deadlocks function can be temporarily deactivated and the alarm level reduced if someone wishes to remain in the car and the doors have to be locked from the outside. The **Activate once** and **Ask on exit** options are available, see pages 123 and 127.

Unlock confirm. light

The hazard warning flashers can provide feedback when the car is unlocked with the remote control. The On/Off options are available.

Lock confirm. light

The hazard warning flashers can provide feedback when the car is locked with the remote control. The On/Off options are available.



Personal preferences

Doors – auto lock

When the speed of the car exceeds 7 km/h the doors and tailgate can be locked automatically. The On/Off options are available. Pulling the door handle twice unlocks and opens the doors from the inside.

Doors unlock

There are two alternatives for unlocking:

- All doors one press of the remote control unlocks all doors and the tailgate.
- Driver's door first, then all others one press of the remote control unlocks the driver's door. A second press then unlocks all doors and the tailgate.

Keyless entry*

- All doors all doors are unlocked simultaneously.
- Doors on same side front and rear doors on the same side are unlocked simultaneously.
- Both front doors both front doors are unlocked simultaneously.
- Either front door any door or the tailgate can be unlocked separately.

Simultaneous closing/opening of all windows

This function can be selected for the lock button on the remote control and the front doors'

central locking button, as well as the outside door handle button on cars with the keyless system:

 Auto. close all windows - all windows and the sunroof are closed simultaneously with one long press on the lock button.

This function can be selected for the unlock button on the remote control and the front doors' central locking button:

 Auto. open all windows – all windows are opened simultaneously with one long press on the unlock button.

Approach lighting

Select the time the car's lights should remain on when the approach lighting button is pressed. The following alternatives are available: 30/60/90 seconds.

Home safe lighting

Select the time the car's lights should remain on when the left-hand stalk switch is pulled back after the ignition key has been removed. The following alternatives are available: 30/60/90 seconds.

Information

- VIN number (Vehicle Identification Number) is the car's unique identity number.
- Number of keys The number of keys registered for the car is shown.



HomeLink® EU*

General



HomeLink is a programmable remote control which can control up to three different devices (e.g. garage door, alarm system, outdoor lighting and indoor lighting etc.) and in doing so replace their remote controls. HomeLink is supplied built into the left-hand sun visor.

HomeLink's panel consists of three programmable buttons and one indicator lamp.



NOTE

HomeLink is designed to be inoperable if the car is locked from the outside.

Save the original remote controls for future programming (e.g. for purchasing a new car).

Erase the programming for the buttons when selling the car.

Metallic sun visors should not be used in cars equipped with HomeLink. This could have a negative effect on the HomeLink function.

Operation

When HomeLink is fully programmed it can be used in place of the separate original remote controls.

Press the programmed button to activate the garage door, alarm system etc. The indicator lamp illuminates for the time that the button is kept depressed.



NOTE

In the event that the ignition is not activated, HomeLink operates for 30 minutes after the driver's door has been opened.

The original remote controls can of course be used in parallel with HomeLink.

⋒ w≉

WARNING

If HomeLink is used to operate a garage door or gate, ensure that nobody is in the vicinity of the door or gate while it is in motion.

Do not use the HomeLink remote control for any garage door that does not have safety stop and safety reverse. The garage door must react immediately when it detects that something is preventing its movement, and stop directly and reverse. A garage door without these characteristics could cause personal injury. For further information, ring the HomeLink Hotline: 008000 466 354 65 (free of charge). They can also be contacted via the Internet: www.homelink.com.

Programming for the first time

The first step erases the memory in HomeLink and must not be carried out when only one individual button is being reprogrammed.

- Depress the two outer buttons and do not release until the indicator lamp starts to flash after approx. 20 seconds. The flashing indicates that HomeLink is set in "learn mode" and is ready to be programmed.
- Position the original remote control 2-8 cm from HomeLink. Monitor the indicator lamp.



HomeLink® EU*

The particular distance that is required between the original remote control and HomeLink depends on the programming of the device in question. Perhaps several attempts will be required at different distances. Maintain each position for approx. 15 seconds before trying a new one.

- Depress the button for the original remote control and the button to be programmed on HomeLink simultaneously. Do not release the buttons until the indicator lamp has changed over from slow to rapid flashing. The rapid flashing indicates successful programming.
- Test the programming by depressing the programmed button on HomeLink and watching the indicator lamp:
 - Constant glow: The indicator lamp illuminates with a constant glow when the button is kept depressed, this indicates that the programming is complete. The garage door, gate or similar should now be activated when the programmed HomeLink button is depressed.
 - Glow not constant: The indicator lamp flashes quickly for approx. 2 seconds and then changes over to a constant glow for approx. 3 seconds. This process is repeated for approx. 20 seconds

- and indicates that the device has a "rolling code". The garage door, gate or similar is not activated when the programmed HomeLink button is depressed. Continue the programming in accordance with the following.
- 5. Locate the "programming button 1" on the receiver for the garage door for example, normally located close to the antenna's bracket on the receiver. If you have difficulty in finding the button, look in the manufacturer's manual or call the HomeLink Hotline: 008000 466 354 65 (free of charge). They can also be contacted via the Internet: www.homelink.com
- Depress and release the "programming button". The button flashes for approx. 30 seconds and the next step must be carried out within this period.
- Depress the programmed button on HomeLink, while the "programming button" is still flashing, keep it depressed for approx. 3 seconds and then release. Repeat the press/hold/release sequence up to 3 times to conclude the programming.

Programming individual buttons

To reprogram an individual button, proceed in accordance with the following:

- Depress the required button on HomeLink and do not release until step 3 has been completed.
- When the indicator lamp on HomeLink starts to flash, after approx. 20 seconds, position the original remote control 2-8 cm from HomeLink. Monitor the indicator lamp.
 - The particular distance that is required between the original remote control and HomeLink depends on the programming of the device in question. Perhaps several attempts will be required at different distances. Maintain each position for approx. 15 seconds before trying a new one.
- Depress the button on the original remote control. The indicator lamp will start to flash. When the flashing has changed over from a slow to a rapid flashing - release both buttons. The rapid flashing indicates successful programming.
- Test the programming by depressing the programmed button on HomeLink and watching the indicator lamp:

¹ Button designation and colour vary depending on manufacturer.

HomeLink® EU*

- Constant glow: The indicator lamp illuminates with a constant glow when the button is kept depressed, this indicates that the programming is complete. The garage door, gate or similar should now be activated when the programmed HomeLink button is depressed.
- Glow not constant: The indicator lamp flashes quickly for approx. 2 seconds and then changes over to a constant glow for approx. 3 seconds. This process is repeated for approx. 20 seconds and indicates that the device has a "rolling code". The garage door, gate or similar is not activated when the programmed HomeLink button is depressed. Continue the programming in accordance with the following.
- 5. Locate the "programming button 2" on the receiver for the garage door for example, normally located close to the antenna's bracket on the receiver. If you have difficulty in finding the button, look in the manufacturer's manual or call the HomeLink Hotline: 008000 466 354 65 (free of charge). They can also be contacted via the Internet: www.homelink.com
- Depress and release the "programming button". The button flashes for approx. 30

- seconds and the next step must be carried out within this period.
- Depress the programmed button on HomeLink, while the "programming button" is still flashing, keep it depressed for approx. 3 seconds and then release. Repeat the press/hold/release sequence up to 3 times to conclude the programming.

Erasing programming

It is only possible to erase the programming for all the buttons on HomeLink, not for individual buttons.

- Depress the two outer buttons and do not release until the indicator lamp starts to flash after approx. 20 seconds.
 - > HomeLink is now set in so-called "learn mode" and is ready to be programmed once more, see page 77.

² Button designation and colour vary depending on manufacturer.

CLIMATE CONTROL







03

General information on climate control

Air conditioning

The climate control system cools or heats as well as dehumidifies the air in the passenger compartment. The car is equipped with either manual (AC) or electronic climate control (ECC, Electronic Climate Control).



NOTE

The air conditioning system can be switched off, but to ensure the best possible air in the passenger compartment and prevent the windows from misting, it should always be on.

Misting windows

Remove misting on the insides of the windows by first using the defroster function.

To reduce the risk of misting, clean the windows with a normal window cleaning agent.

Ice and snow

Remove ice and snow from the climate control air intake (the grille between the bonnet and the windscreen).

Fault tracing and repair

Entrust fault tracing and repair of the climate control system to an authorised Volvo workshop only.

Refrigerant

The air conditioning system contains R134a refrigerant. This refrigerant contains no chlorine, which means that it is harmless to the ozone layer. The system must only be charged with R134a refrigerant. Have an authorised Volvo workshop carry out this work.

Passenger compartment filter

All air entering the car's passenger compartment is only cleaned with one filter. This must be replaced at regular intervals. Follow the Volvo Service Programme for the recommended replacement intervals. If the car is used in a severely contaminated environment, it may be necessary to replace the filter more often.



NOTE

There are different types of passenger compartment filter. Make sure that the correct filter is fitted.

Display

There is a display above the climate control panel. This displays climate control settings.

Personal preferences

You can set preferences for two climate control functions:


- Fan speed in AUTO mode (applies only to cars with ECC).
- Recirculation timer for passenger compartment air.

For information about these settings, see page 75.



General information on climate control

Air vents in the dashboard

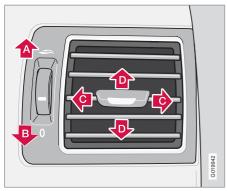

- M Open
- Closed
- Lateral airflow
- Vertical airflow

Aim the outer vents towards the side windows to remove misting from the front side windows.

During cold weather - Close the centre vents for optimum comfort and best demisting.

ECC*

Actual temperature

The temperature you select corresponds to the physical experience with reference to factors such as air speed, humidity and solar radiation in and around the car.

The system includes a sun sensor which detects the side from which the sun is shining into the passenger compartment. This means that the temperature can differ between the right and left-hand air vents despite the controls being set for the same temperature on both sides.

Sensor location

- The sun sensor is on the top side of the dashboard.
- The temperature sensor for the passenger compartment is behind the climate control panel.
- The outside temperature sensor is located on the door mirror.
- The humidity sensor is located in the interior rearview mirror.

\mathbf{i}

NOTE

Do not cover or block the sensors with clothing or other objects.

Side windows and sunroof

To ensure that the air conditioning works satisfactorily, close all side windows and the sunroof (if fitted).

Acceleration

The air conditioning system switches off temporarily at full throttle. You may briefly feel a temporary rise in temperature.

Condensation

In warm weather, condensation from the air conditioning may drip under the car. This is normal.

03 Climate control

Manual climate control, AC

Control panel



- Fan
- Recirculation
- 3 Defroster
- Air distribution
- 6 AC ON/OFF Air conditioning On/Off
- 6 Heated front left seat
- Heated front right seat
- Rear window and door mirror defrosters
- 9 Temperature

Functions

1. Fan



Increase or decrease the fan speed by turning the knob.

If the knob is turned anticlockwise and the fan indicator in the display goes out, the fan and the air conditioning are

switched off. The display shows the fan symbol and OFF.

2. Recirculation



Recirculation can be used to shut out bad air, exhaust fumes, etc. from the passenger compartment. The air in the passenger compartment is recirculated. No outside air is taken into the car. Recircu-

lation (together with the air conditioning system) cools the passenger compartment more quickly in hot weather. If the air in the car recirculates for too long then there is a risk of the windows misting.

03



Manual climate control, AC

Timer

The timer function reduces the risk of icing, misting and bad air (if recirculation is selected). See page 75, for activating/deactivating the function. When the Defroster (3) program is selected, recirculation is deactivated.

3. Defroster



Used to quickly remove misting and ice from the windscreen and side windows. Air flows to the windows at high fan speed. The light in the defroster button illuminates when the function is active.

The following also takes place when the defroster function is activated in order to provide maximum dehumidification in the passenger compartment:

- the air conditioning (AC) is automatically switched on (can be switched off with the AC button (5)
- recirculation is automatically disengaged.

When the defroster is switched off the climate control returns to the previous settings.

4. Air distribution



The airflow can be distributed to the windows, dashboard vents or floor by pressing the air distribution buttons.

A symbol on the display above the climate control

panel and an illuminated light in the relevant button indicate which function has been selected.

Refer to the table on page 91.

5. AC - On/Off



ON: The air conditioning is on. It is controlled by the system's AUTO function. This way, incoming air is cooled and dehumidified.

OFF: The air conditioning is

off.

When the defroster function is activated the air conditioning is automatically switched on (can be switched off with the **AC** button). A symbol above ON or the climate control panel respectively and an illuminated light in the relevant button indicate which function has been selected.

6. and 7. Heated front seats



(option in certain markets)

Higher heat:

- Press the button once - both lights illuminate.

Lower heat:

- Press the button once one light illuminates.
 Heat off:
- Press the button three times light not illuminated.

8. Rear window and door mirror defrosters



Heating is used to quickly remove misting and ice from the rear window and door mirrors. Press the button once to start simultaneous rear window and rearview mirror defrosting. The function is

active if one lamp is illuminated in the button.

The function is switched off manually or automatically. Switch off manually with one press on the button. Automatic switching off disconnects the rear window and door mirrors after 12 – 20 minutes depending on outside temperature.

03

During cold weather the defrosting also continues after 20 minutes in order to keep the rear window and door mirrors free of ice and mist¹. The intensity of the defrosting can be adapted to the outside temperature. This function must be switched off manually.

9. Temperature



Select cooling or heating for both driver and passenger side.

¹ Depending on market and options selected



Electronic climate control, ECC*

Control panel



- **AUTO**
- 2 Fan
- Recirculation/Air quality system
- 4 Defroster
- 6 Air distribution
- 6 AC ON/OFF Air conditioning On/Off
- Heated front left seat
- 8 Heated front right seat
- 9 Rear window and door mirror defrosters
- Temperature selector

Functions

1. AUTO



The **AUTO** function automatically regulates climate control and maintains the selected temperature. The AUTO function controls heating, air conditioning, fan speed, recirculation, and air

distribution.

If you select one or more manual functions, the other functions continue to be controlled automatically. All manual settings are switched off when **AUTO** is switched on. The display shows **AUTO CLIMATE**.

2. Fan



Turn the knob to increase or decrease fan speed. If **AUTO** is selected then fan speed is regulated automatically. The previously set fan speed is disengaged.

i NOTE

If the knob is turned anticlockwise and the fan indicator in the display goes out, the fan and the air conditioning are switched off. The display shows the fan symbol and OFF.

Electronic climate control, ECC*

3. Recirculation



The function is selected to shut out bad air, exhaust gases etc. from the passenger compartment. The air in the passenger compartment is recirculated, i.e. no outside air is taken into the car when

this function is activated. If the air in the car recirculates for too long, there is a risk of misting on the insides of the windows.

Timer


The timer function reduces the risk of icina. misting and bad air (if recirculation is selected). To activate/deactivate the function see page 75.



NOTE

When Defroster (4) is selected, recirculation is always deactivated.

3. Air quality system (option)

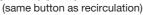

The air quality system consists of a multi-filter and a sensor. The filter separates gases and particles to reduce the levels of odours and pollution in the passenger compartment. When the sensor detects polluted outside air, the air intakes are closed and the air in the passenger compartment is recirculated. A green light (A) illuminates in the button when the air quality sensor is active.

Activating the air quality sensor:

Press **AUTO** (1) to activate the air quality sensor (normal setting).

Or:

- Switch between three functions by pressing repeatedly the recirculation button.
- Air quality sensor engaged the light (A) illuminates.
- No recirculation engaged, provided it is not required for cooling in hot weather - light not illuminated.
- Recirculation engaged the light (M) illuminates.

Keep the following in mind:

- As a rule, the air quality sensor should always be engaged.
- Recirculation is limited in cold weather to avoid misting.

The defroster functions for the front, side and rear windows can be used to demist the windows.

4. Defroster



Used to quickly remove misting and ice from the windscreen and side windows. Air flows to the windows at high fan speed. The light in the defroster button illuminates when the function is active.

The following also takes place when the defroster function is activated in order to provide maximum dehumidification in the passenger compartment:

- the air conditioning (AC) is automatically switched on (can be switched off with the AC button (6)
- recirculation is automatically disengaged.

When the defroster is switched off the climate control returns to the previous settings.

5. Air distribution



The airflow can be distributed to the windows, dashboard vents or floor by pressing the air distribution buttons.



Electronic climate control, ECC*

A symbol on the display above the climate control panel and an illuminated light in the relevant button indicate which function has been selected.

Refer to the table on page 91.

6. AC - On/Off (ON/OFF)



ON: The air conditioning is on. It is controlled by the system's AUTO function. This way, incoming air is cooled and dehumidified.

OFF: Off

When the defroster function is activated the air conditioning is automatically switched on (can be switched off with the **AC** button).



NOTE

The climate control system's demisting function with humidity sensor is significantly reduced with the air conditioning in deactivated mode (**OFF**), as well as with manually selected air distribution and fan speed.

7 and 8. Heated front seats*





Higher heat:

Press the button once – both lights illuminate.

Lower heat:

 Press the button once – one light illuminates.

Heat off:

- Press the button three times light not illuminated.
- Rear window and door mirror defrosters



Heating is used to quickly remove misting and ice from the rear window and door mirrors. Press the button once to start simultaneous rear window and rearview mirror defrosting. The function is

active if one lamp is illuminated in the button.

The function is switched off manually or automatically. Switch off manually with one press on the button. Automatic switching off disconnects the rear window and door mirrors after 12 – 20 minutes depending on outside temperature.

During cold weather the defrosting ¹ also continues after 20 minutes in order to keep the rear window and door mirrors free of ice and mist. The intensity of the defrosting can be adapted to the outside temperature. This function must be switched off manually.

10. Temperature selector



The temperatures on the driver and passenger sides can be set independently.

Press the button once to activate one side only. Press again to activate the other

side. Press the button a third time to activate both sides.

The active side is indicated by the button's light and in the display above the climate control panel.

When the car is started, the most recent setting is resumed.

¹ Depending on market

03 Climate control

Electronic climate control, ECC*



i NOTE

Heating or cooling cannot be hastened by selecting a higher or lower temperature than the actual desired temperature.

03



Air distribution

| Air distribution | Use: | Air distribution | Use: |
|---|---|--|---|
| Air to windows. Some air flows from the air vents. The air is not recirculated. Air conditioning is always engaged. | To remove ice and misting quickly. | Air to the floor and windows. Some air flows from the dash- board air vents. | To ensure comfortable conditions and good demisting in cold or humid weather. |
| Air to windscreen and side windows. Some air flows from the air vents. | To prevent misting and icing in a cold and humid climate. (Not for low fan speed.) | Air to floor and from dash- board air vents. | In sunny weather with cool outside temperatures. |
| Airflow to windows and from dashboard air vents. | To ensure good comfort in warm, dry weather. | Air to floor. Some air flows to the dashboard air vents and windows. | To warm the feet. |
| Airflow to the head and chest from the dashboard air vents. | To ensure efficient cooling in warm weather. | Airflow to windows, from dashboard air vents and to the floor. | To provide cooler air for the feet or warmer air to the upper body in cold weather or hot, dry weather. |

Fuel-driven engine block heater and passenger compartment heater*

General information about heaters

The parking heater heats the engine and passenger compartment and can be started directly or with the timer.

Two different times can be selected using the timer. Here, time refers to the time when the car is heated and ready. The car's electronic system calculates when heating should be started based on the outside temperature.

The heater is cannot start if the outside temperature exceeds $25\,^{\circ}$ C. At $-10\,^{\circ}$ C or lower the maximum running time of the parking heater is 50 minutes.



WARNING


The car must be outdoors when the petrol or diesel heater is used.



NOTE

When the parking heater is active there may be smoke from underneath the car, which is perfectly normal.

Refuelling

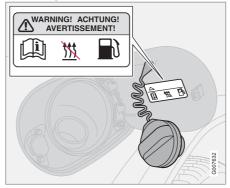

Warning decal on fuel filler flap.

Λ

WARNING

Fuel which spills out could be ignited. Switch off the fuel-driven heater before starting to refuel.

Check on the information display that the parking heater is switched off. When it is running, the information display shows **PARK HEAT ON**.

Parking on a hill

If the car is parked on a steep hill, the front of the car should point downhill to ensure that there is a supply of fuel to the parking heater.

Battery and fuel

If the battery has insufficient charge or the fuel level is too low, the parking heater is switched off automatically and a message appears on the information display.

 Acknowledge the message by pressing the indicator stalk **READ** button once.



IMPORTANT


Repeated use of the parking heater combined with short journeys may discharge the battery and impair starting.

The car should be driven for the same time as the heater is used to ensure that the car's battery is recharged adequately to replace the energy consumed by the heater when it is used on a regular basis.



Fuel-driven engine block heater and passenger compartment heater*

Activating the heater

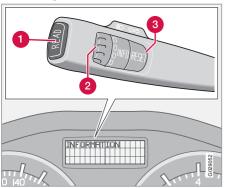

- READ button
- 2 Thumbwheel ¹
- RESET buttor!

Symbols and display messages



When one of the timer's settings or DIRECT START is activated, the information symbol in the combined instrument panel illuminates and the information display shows

an explanatory text.

| Display | Specification |
|---------------------------------|---|
| FUEL HEATER ON | The heater is switched on and running. |
| TIMER IS SET FOR FUEL HEATER | Reminder that the heater will start at the set time after the car has been left, when the ignition key is removed from the ignition switch. |

| Display | Specification |
|--|---|
| HEATER STOP- PED - LOW BAT- TERY | The heater has been stopped by the car's electronics in order to facilitate starting the engine. |
| HEATER STOP- PED LOW FUEL LEVEL | The heater has been stopped by the car's electronics in order to facilitate starting the engine as well as 50 km driving. |

Direct start and immediate stop

- Scroll with the thumbwheel to DIRECT START.
- Press the **RESET** button to select between ON and OFF.

ON: Parking heater switched on manually or with programmed timer.

OFF: Parking heater switched off.

With the direct start of the heater it will be activated for 50 minutes.

¹ No function in cars without trip computer, fuel-driven parking heater as well as stability and traction control system.



Fuel-driven engine block heater and passenger compartment heater*

Heating of the passenger compartment will begin as soon as the engine coolant has reached the correct temperature.



NOTE

The car can be started and driven while the parking heater is running.

Setting the timer

The time when the car shall be used and heated is specified with the timer.

Select between TIMER 1 and TIMER 2.

- Scroll with the thumbwheel to PARK HEAT TIMER 1.
- Briefly press the **RESET** button so that the hours setting starts to flash.
- Select the required hour using the thumbwheel.
- Briefly press RESET to move to the flashing minutes setting.
- 5. Select the required minute using the thumbwheel.
- 6. Briefly press **RESET** to confirm the setting.
- 7. Press **RESET** to activate the timer.

After setting **TIMER 1** a second start time can be programmed with **TIMER 2** by scrolling with the thumbwheel.

Set the alternative time in the same way as TIMER 1.

Deactivating a timer-started heater

A timer-started heater can be switched off manually before the set time has elapsed. Proceed as follows:

- 1. Press the **READ** button.
- Use the thumbwheel to scroll to the text PARK HEAT TIMER 1 or PARK HEAT TIMER 2.

The text **ON** flashes on the display.

3. Press RESET.

The text **OFF** is shown with a constant glow and the heater is switched OFF.

A timer-started heater can be switched off in accordance with the instructions in the section "Direct start and immediate stop".

Clock/timer

The heater's time is connected to the car's clock.



i) NOTE

All timer programming will be cleared if the car's clock is reset.

Fuel-driven auxiliary heater* (diesel)

Auxiliary heater (diesel)

In diesel-engined cars the auxiliary heater may be required for achieving the correct temperature in the passenger compartment during cold weather.

The heater starts automatically when extra heat is required when the engine is running.

The heater is switched off automatically when the correct temperature is reached or when the engine is switched off.



NOTE

The auxiliary heater cannot be switched on or off manually but is only controlled by the car's electronics.

When the auxiliary heater is active there may be smoke from underneath the car, which is perfectly normal.

INTERIOR





Front seats

Seating position



The driver's and passenger seats can be adjusted to the optimum sitting and driving positions.

- Forward/backward: lift the handle to adjust the distance to the steering wheel and pedals. Check that the seat is locked after changing position.
- Raise/lower the front of the seat cushion (driver's and passenger seat*), pump up/ down.
- Raise/lower the seat (driver's and passenger seat*), pump up/down.


- 4 Lumbar support 1 (driver's and passenger seat*), turn the wheel.
- Backrest rake: turn the wheel.
- 6 Control panel for power seat*.

⚠ WARNING

Adjust the position of the driver's seat and adjust the seatbelt, see page 16, before setting off, never while driving.

Check that the seat is locked in position.

Tipping the front seat backrest*

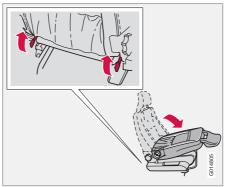

The passenger seat backrest can be folded forward to make room for long loads.

- 1. Move the seat as far back as possible.
- Adjust the backrest to an upright position 90 degrees.
- 3. Lift the catches on the rear of the backrest while folding it forwards.
- 4. Push the seat forward so that the head restraint "locks" in under the glovebox.

Floor mats*

Volvo supplies floor carpets which are especially produced for your car.


MARNING

The floor mat at the driver's seat must be firmly fitted and secured in the attachment clips to prevent it from being trapped around and under the pedals.

¹ Also applies to power seat.

Front seats

Power seat*

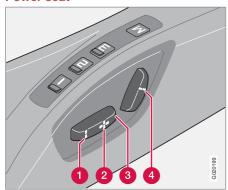


The seats can be adjusted for a certain time after unlocking the door with the remote control without the key being inserted into the ignition switch. The seat can always be adjusted in ignition position I or II.

- 1 Front edge of seat cushion up/down
- Seat, forwards/backwards
- Seat, up/down
- Backrest rake

An overload protection is deployed if one of the seats is blocked. If this happens, turn off the ignition and wait a short time before adjusting

the seat again. Only one of the seat's settings can be adjusted at a time.

Memory function

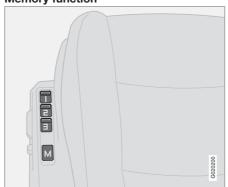

Buttons for memory function.

Store setting

- Adjust seat.
- 2. Press and hold button **M** while pressing button **1**, **2** or **3** simultaneously.

Using a stored setting

Press one of the memory buttons 1–3 until the seat stops. If you release the button then the movement of the seat will stop.

Emergency stop

If the seat accidentally begins to move, press any of the buttons to stop the function.

Λ w

WARNING

Risk of crushing. Make sure that children do not play with the controls.

Check that there are no objects in front of, behind or under the seat during adjustment.

Ensure that none of the rear seat passengers is in danger of becoming trapped.

Memory in the remote control

The settings for the driver's seat are stored in the memory for the remote control with which the car is locked. When the car is unlocked with the same remote control the driver's seat adopts the stored settings when the driver's door is opened.




NOTE

Remote control memory is independent of seat memory.

Interior lighting

Reading lamps and interior lighting

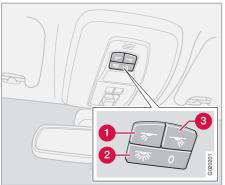

Controls in roof console for front reading lamps and passenger compartment lighting.

- 1 Reading lamp left-hand, On/Off
- 2 Interior lighting
- Reading lamp right-hand, On/Off


All lighting in the passenger compartment can be switched on in ignition position I and II as well as when the engine is running. The lighting can also be activated within 30 minutes after:

- the engine has been switched off and the ignition is in position **0**
- the car has been unlocked but the engine has not been started.

Front roof lighting

The front reading lamps are switched on or off by pressing the relevant button in the roof console.

Rear roof lighting

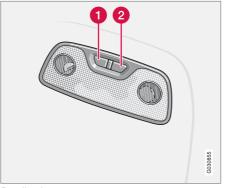

Reading lamps, rear.


- Reading lamp left-hand rear, On/Off
- 2 Reading lamp right-hand rear, On/Off

The lamps are switched on or off by pressing the relevant button.

Courtesy lighting

Courtesy lighting (and passenger compartment lighting) is switched on and off respectively when a side door is opened or closed.

Vanity mirror*

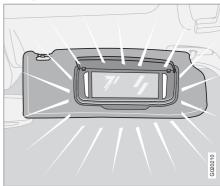

The lamp is automatically switched on and off respectively when the cover is opened or closed.

Glovebox lighting

Glovebox lighting is switched on and off respectively when the lid is opened or closed.

Interior lighting

Cargo area lighting

The lighting in the cargo area is switched on and off respectively when the tailgate is opened or closed.

Automatic lighting

Using the switch (2), see page 100, three positions can be selected for the lighting the passenger compartment:

- Off right-hand side (marked with 0) depressed, automatic lighting switched off.
- Neutral position automatic lighting activated. The dimmer function is active.
- On left-hand side depressed, passenger compartment lighting on.

Neutral position

When the switch (2) is in neutral position passenger compartment lighting is switched on and off automatically in accordance with the below.

The passenger compartment lighting is switched on and remains on for 30 seconds if:

- the car is unlocked with the key or remote control
- the engine is stopped and the ignition key is turned to position 0.

Passenger compartment lighting is switched off when:

- the engine is started.
- the car is locked with the key or remote control.


Passenger compartment lighting comes on and remains on for 5 minutes if one of the doors is open.

If any lighting is switched on manually and the car is locked then it will be switched off automatically after 5 minutes.

04

Storage spaces in the passenger compartment

Storage spaces

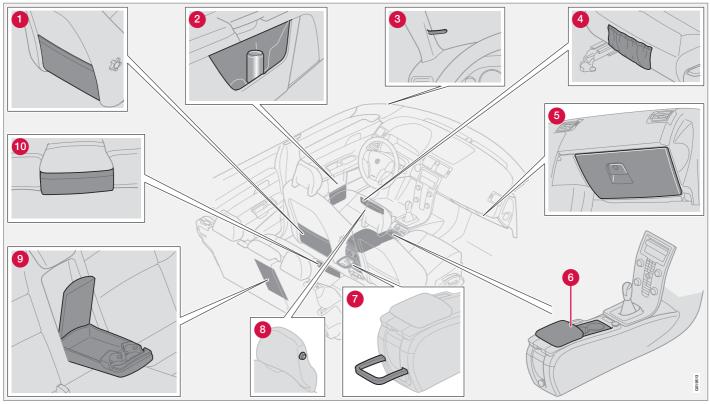



Storage spaces in the passenger compartment

- Storage pocket on rear of front seats.
- Storage compartment in door panel with cup holder.
- 3 Ticket clip
- 4 Storage pocket on front edge of front seat cushions.
- Glovebox
- 6 Storage compartment (e.g. for CD discs) and cup holder (or storage compartment*).
- Bottle holder*
- 8 Coat hanger, only for light garments.
- Storage compartment and cup holder.
- Storage pocket* on front edge of centre rear seat cushion.


₩A

WARNING

Ensure that no hard, sharp or heavy objects lie or protrude in such a way that they could cause injury during heavy braking.

Always secure large and heavy objects with a seatbelt or cargo retaining straps.


Glovebox

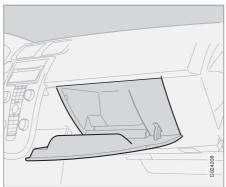

The owner's manual and maps can be kept here for example. There are also holders for coins, pens and fuel cards.

The glovebox can be locked with the remote control's detachable key blade. Further information is available on page 115.

Coat hanger

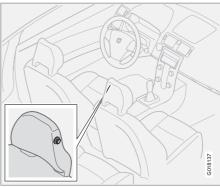


The coat hanger is located on the passenger seat head restraint. Only hang light garments on the hanger.


04

Storage spaces in the passenger compartment

Storage under the front armrest

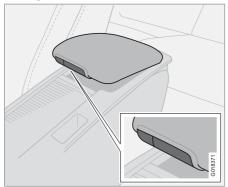


There is a storage space under the armrest. There is also a smaller storage space in the detachable armrest. Press the small button and lift the armrest to open the shallow compartment. Press the large button and lift the armrest to open the deeper compartment.

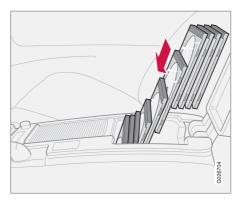

In the deeper compartment there is space for 10 normal CD cases. The cases must be stored vertically on the top edge for all 10 to have space.

Cup holder in centre console

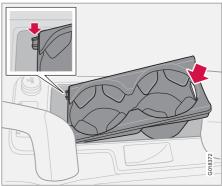

There is space for a double cup holder under the roller cover. The space can be used for storage by lifting out the cup holder. Lift at the rear edge of the cup holder where there is a recess.

If the cup holder is being fitted - first align its two guide lugs in the two recesses in the front edge of the space and then press down the rear edge of the cup holder.

Close the roller cover by gripping its front edge from below and pulling forward.



Storage spaces in the passenger compartment

Storage compartment behind the gear lever




When there are no buttons for parking assistance and BLIS, see page 151 and page 153, the space can be used as a storage compartment.

Bottle holder*



A bottle holder for larger bottles is located on the rear of the tunnel console.

Ashtray*

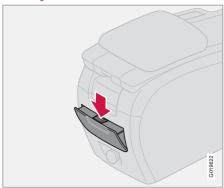

An ashtray is located towards the rear of the tunnel console.


Open the ashtray by pulling the top edge of the cover.

Emptying the ashtray:

- 1. Press in the catch, see preceding illustration, and tilt the cover up.
- 2. Then lift the ashtray out.


Rear seat

Head restraint, rear

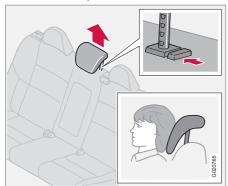

All head restraints can be adjusted vertically to suit the height of the passenger. The upper edge of the head restraint should be aligned with middle of the back of the head. Raise the head restraint as necessary. To lower the head restraint, press the button by the right-hand pillar at the same time as pushing down the head restraint. To remove the head restraint, press the button by the right-hand pillar while lifting out the head restraint.

Tipping the rear seat backrest

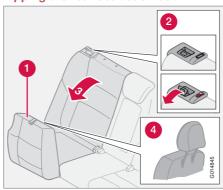


Lowering the backrest.

- Rear edge of seat cushion
- 2 Lock catch
- Lowering the backrest
- Location of head restraint under seat cushion



! IMPORTANT

The head restraints could be damaged if they are not removed for loading. The head restraint in the centre must also be removed for heavy loads.

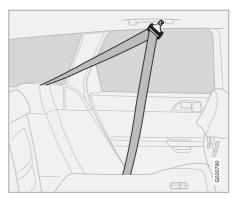

The rear seat backrests can be tipped forwards together, or individually, to make it easier to transport long objects. To avoid damaging the seatbelts when folding the backrests up or down, these should be hooked onto the grab handles.

- 1. Hang the seatbelts on the hooks before lowering or raising the backrests.
- 2. Lift the rear edge of the seat cushion (1) to fold the seat cushions forward.
- Pull the lock (2) catch up and forward to release the backrest. A red indicator on the lock catch shows that the backrest is no longer locked in place.

Rear seat

- Fold the backrests (3) forward halfway and remove the head restraints on the outside seats. The centre seat's head restraint must be removed for a fully level floor.
- Place the head restraints in the plastic sleeves on the undersides (4) of the raised seat cushions.



NOTE

When the backrest has been raised, the red indicator should no longer be showing. If it is still showing then the backrest is not locked in place.




WARNING

Remember to take down the seatbelts once you have raised the backrest.



Safety net*

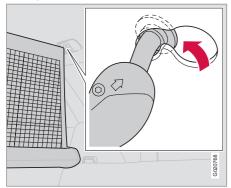

The retractable safety net storage cassette is mounted on the rear of the backrest.

Using the safety net with raised backrests

- Pull out the safety net horizontally backward. Extend the right hand attachment and hold it extended. Insert the attachment into the rear keyed recess in the roof panel. Press the attachment forward in the keyway. The attachment must be pressed so far that the flange rides over the restriction between the front and rear holes.
- 2. Perform the same procedure on the other side. The attachments on the net spring

- shut. Pull the net over towards the left bracket to fit it in place.
- Check that the attachments on the safety net are securely fastened in the keyed recesses in the roof panel.

Using the safety net with lowered backrests

The safety net can also be used when the backrests are lowered. In this case, use the front attachment points in the roof panel.

Removing the safety net

- 1. Pull one of the net's attachments rearward to the large hole and pull it out.
- 2. Detach the other attachment in the same way.


Removing the safety net storage cassette.

- 1. Lower the entire backrest.
- 2. Press the cassette outward to release it from the mounting brackets.

M WARNING

Loads in the cargo area must be firmly secured even if the safety net is correctly fitted.

Safety grille*

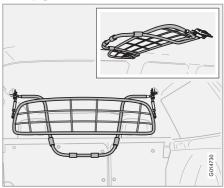

The safety grille is designed to help prevent loads or pets from being thrown forward in the passenger compartment in the event of sudden braking. For safety reasons, the grille must always be correctly fastened and secured.

Folding up

If the safety grille is in the way it can be folded up to the roof:

- 1. Take hold of the bottom of the safety grille.
- Pull straight backward and upward. Then release. The gas struts prevent the grille from dropping down.

To fold down the grille, do the reverse.

Removing

Remove the safety grille as follows:

- Fold the rear seat backrest forward slightly (to relieve the load from the gas struts).
- 2. Remove the caps from the nuts on either side that secure the safety grille.
- 3. Unscrew the nuts until the threads are flush with the edge of the nuts.
- Turn the grille backward in the car slightly to release it from the trim. Do not angle the grille too much as it can become wedged, making it difficult to pull out.
- 5. Repeat for the other mounting and then carefully lift the grille out of the car.


Fitting

To fit the safety grille:

- 1. Follow the instructions in the reverse order.
- 2. Tighten the two nuts to 24 Nm.

If unsure about installing or removing the safety grille, consult an authorised Volvo workshop.

Cargo cover*

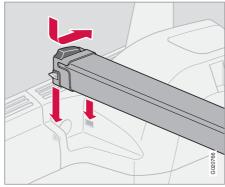


Cargo cover.

Fitting the cargo cover

Fit the cargo cover as follows:

- 1. Move the front section of the cargo cover backwards/over the cassette.
- Following which, fit the cargo cover in its tracks along the side panels, furthest into the cargo area.
- Push the button forward so that the catches are retracted. Following which, press the cargo cover down in the track.

- 4. The button springs back when the cargo cover is correctly located.
- Repeat the procedure on the opposite side.

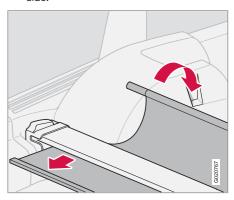

- 6. Check that the cargo cover is fitted firmly in the cargo area.
- Fit the front section of the cargo cover in the wedge shaped tracks on the side panels, against the rear seat.
- 8. The cargo cover is now ready for use.



Do not place objects on the cargo cover or on its front section.




Use

Pull the cargo cover over the cargo area and hook it into the tracks in the rear pillars in the cargo area.

Removing the cargo cover

- 1. Lift up the front section of the cargo cover, move it backwards and then allow it to hang free.
- 2. Move the button forwards, lift up one end of the cargo cover. Repeat on the opposite side. Following which, pull out the cargo cover.

Using the safety net together with the cargo cover

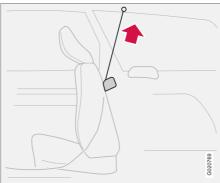


- 1. Tip the backrests slightly forward to access the safety net cassette. Start with the 40% section.
- 2. Extend the safety net rearward.
- 3. Fold the backrests back up.
- 4. Hook the net into the attachment points in the roof panel as described for raised backrests.



NOTE


When the backrest has been raised, the red indicator should no longer be showing. If it is still showing then the backrest is not locked in place.

Load retaining eyelets*

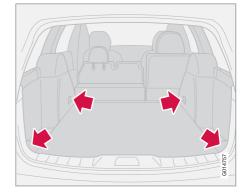

The load retaining eyelets are used to fasten straps or nets to anchor items in the cargo area.

Electrical socket in cargo area*

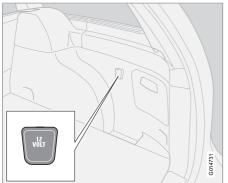

Fold down the cover to access the electrical socket. This socket works regardless of whether or not the ignition is on.



NOTE

Do not use the electric socket with the engine switched off as there is a risk of the battery becoming discharged.

Bag holder*



The bag holder holds shopping bags in place and prevents them from tipping over and spilling their contents in the cargo area.

- 1. Open the hatch in the cargo area.
- 2. Secure the shopping bags with the strap.

| Remote control with key blade | 114 |
|-------------------------------|-----|
| Active locks | |
| Keyless drive* | 118 |
| Battery in remote control | 121 |
| Locking and unlocking | 122 |
| Child safety locks | 125 |
| Alarm* | 126 |

LOCKS AND ALARM







05



Remote control with key blade

Remote control

The car is supplied with two remote controls. They also serve as ignition keys.

The remote controls contain detachable metal key blades for mechanical locking/unlocking of the driver's door and glovebox.

The key blades' unique code is available at authorised Volvo workshops, who can order new key blades.

A maximum of six remote controls/key blades can be programmed and used for one single car.

Turn signal indication during locking/unlocking

When the car is unlocked using the Keyless Drive system or the remote control, two short flashes of the direction indicators serve to indicate that unlocking was correctly performed.

For locking, the indication takes place with one long flash and only if all locks are locked, after the doors and the tailgate have been closed.

Personal preferences can be used to deactivate indication via the direction indicators. There will then be no visual indication as to whether the lock status is correct, see page 75.


Loss of a remote control

If you lose a remote control, take the car and the other remote controls to an authorised Volvo workshop. The code of the missing remote control must be erased from the system as a theft prevention measure.

Immobiliser

The remote controls are fitted with coded chips. The code must be accepted by the reader (receiver) in the ignition switch. The car can only be started if the correct remote control with the correct code is used.

Remote control functions

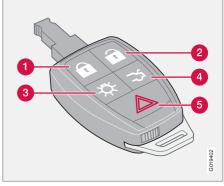

- Locking Locks all doors and the tailgate.

 Press and hold to also close the side windows and sunroof.
- Unlocking Unlocks the doors and the tailgate. Press and hold to open the side windows.
- Approach lighting Switches on the lighting at a distance lights up the area around a car parked in a dark location. Press the button once to switch on the interior lighting, position/parking lamps, number plate lighting and door mirror lamps (option). The lighting is switched off automatically after



Remote control with key blade


30, 60 or 90 seconds. For information on setting the delay time, see page 75.

- **Tailgate** Press the button once to unlock the tailgate only. ¹
- Panic function Used to attract attention in an emergency. Press and hold the red button for at least three seconds or press it twice within three seconds to activate the direction indicators and the horn. The function can be turned off with the same button once it has been active for at least 5 seconds. Otherwise the function switches off automatically after 30 seconds.



The narrow section of the remote control is particularly sensitive - this contains the chip. The car cannot be started if the chip is damaged.

Detachable key blade

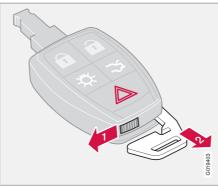

Using the remote control's detachable key blade:

- the driver's door can be opened manually if central locking is not activated with the remote control, see page 115, see page 119.
- access to the glovebox can be blocked, see page 116.

Removing the key blade

To remove the key blade from the remote control:

Slide the spring-loaded catch to the side.

Pull out the key blade at the same time.

Inserting the key blade

Be careful when inserting the key blade into the remote control.

- Hold the remote control with the narrow end pointing down and lower the key blade into its slot.
- 2. Lightly press the key blade to lock it in position. You should hear a "click".

Unlocking doors with the key blade

If central locking cannot be activated with the remote control, e.g. if the batteries are discharged, then the driver's door can be unlocked and opened as follows:

- 1. Insert the key blade in the driver's door keyhole.
- 2. Turn the blade 45 degrees clockwise and open the door.




When the driver's door is unlocked using the key blade and is opened, the alarm is triggered. It is deactivated by inserting the remote control in the ignition switch. see page 127.

¹ The function unlocks the boot lid – it does not open.

05

Remote control with key blade

Locking the glovebox

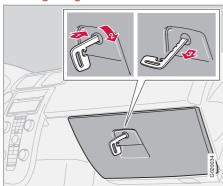

The glovebox can only be locked/unlocked using the remote control's detachable key blade. (For information on removing the key blade, see page 115.)

- Insert the key blade in the glovebox lock.
- Turn the key blade 90 degrees clockwise. The keyhole is horizontal in the locked position.
- Pull out the key blade.
- Unlocking takes place in reverse order.




i) NOTE

The remote control cannot unlock the glovebox without the key blade.


This function is particularly useful for when the car is left for service, at a hotel or similar.

Active locks

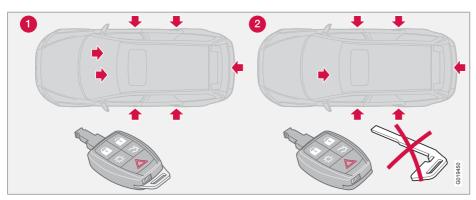

- 1 Active locks for remote control with key blade.
- 2 Active locks for remote control without key blade.

Keyless lock and ignition system

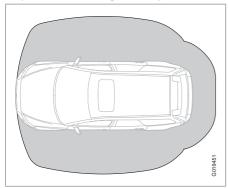

Keyless function range

The keyless drive system allows the car to be unlocked, driven and locked without the need for a key. You simply need to have the remote control with you in a pocket or a bag.

The system makes it easier and more convenient to open the car, for example with shopping bags in one hand and a child in the other. It saves you having to take out or look for the remote control.

The two remote controls incorporate the keyless drive function. You can order additional remote controls. The keyless drive system can handle up to six remote controls.

Remote control max. 1.5 m from the car

In order to open a door or the tailgate, a remote control must be no more than approx. 1.5 m from the car door handle or tailgate.

This means that the person who wishes to open a door must have the remote control with him or her. It is not possible to open a door if the remote control is on the other side of the car.

The grey area in the illustration indicates the range covered by the system's antennas.

If someone leaves the car and takes a keyless drive remote control with them, a warning message appears on the information display and a reminder signal sounds. The warning message disappears when the remote control is brought back to the car or when the ignition dial is turned to position **0**. The warning is only issued if the ignition dial is in position **I** or **II** after someone has opened and closed a door.

The warning message and reminder signal disappear when the remote control is brought back to the car after one of the following actions:

- a door has been opened and closed
- the ignition dial has been turned to position
 0
- the READ button has been pressed.

Never leave any remote control in the car

If a remote control with keyless drive function is left in the car, it is made passive when the car is locked. This prevents unauthorised entry.


If someone breaks into the car and finds the remote control, it can be activated and used again. It is therefore important to handle all remote controls with equal care.

Interference to remote control function

Electromagnetic screening and fields can interfere with the keyless drive system. To avoid this: do not place the remote control near mobile phones, metallic objects or, for example, in a metal briefcase.

If interference is experienced nonetheless, use the remote control and key blade in the normal way, see page 114.

Locking

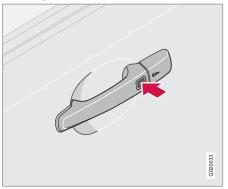

Cars with the keyless system have a button on the outside door handles.

When the remote control is within the range covered by the system's antennas, the doors and the tailgate are locked as follows:

 Push in the lock button on one of the door handles.

All doors must be closed before the lock button is pushed in. Otherwise they will not lock.

When the car is locked, the lock buttons on the inside of the doors retract.

|

NOTE

On cars with the keyless drive system and automatic transmission the gear selector must be moved to the **P** position and the ignition dial turned to the **0** position. Otherwise the car cannot be locked or alarmed.

Unlocking

When the remote control is within the range covered by the system's antennas:


- 1. Open the doors by pulling the relevant handle.
- 2. Open the tailgate by pressing under the tailgate opening button and lift the tailgate.

If for some reason the keyless drive function in the remote control is not operating, the car can be unlocked using the remote control functions, see page 114.

Power seat – remote control with memory function

If several people with keyless drive remote controls get into the car, then the driver's seat will be adjusted for the person who opens the door first.

Unlocking doors with the key blade

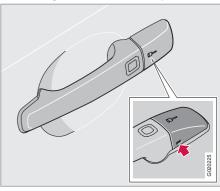

If central locking cannot be activated with the remote control, e.g. if the batteries are discharged, then the driver's door can be opened as follows:


- To access the keyhole: Carefully prize out the plastic cover in the handle by inserting the key blade in the hole on the bottom of the cover.
- 2. Unlock the door using the key blade.



NOTE

When the driver's door is unlocked using the key blade and is opened, the alarm is triggered. It is deactivated by inserting the remote control in the ignition switch. see page 127.

Antenna location

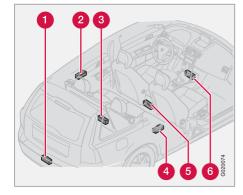

The keyless system has a number of integrated antennae located around the car:

- Rear bumper, inside centre
- Door handle, left-hand rear
- Cargo area, central and furthest in under the floor

- Door handle, right-hand rear
- 6 Centre console, under the rear section
- 6 Centre console, under the front section

∧ w

WARNING

People with pacemaker operations should not come closer than 22 cm to the keyless system's antennae with their pacemaker. This is to prevent interference between the pacemaker and the keyless system.

Personal preferences


The Keyless Drive system can have personal preferences applied, see page 75.

Battery in remote control

Weak remote control battery

When the battery runs down and full functionality cannot be guaranteed, the information symbol (a) and KEY BATTERY LOW VOLTAGE or CAR KEY - CHANGE BATTERY appear on the display.

Replacing the remote control battery

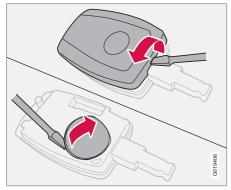

If the locks repeatedly fail to respond to signals from the remote control at a normal distance, the battery should be replaced (type CR 2450, 3 V).

 Place the remote control with the keypad downward and prize up the cover using a small screwdriver.

- 2. Remove the cover.
- Carefully examine how the battery's (+) and (-) sides are fitted (there is a diagram under the cover).
- Prize out and change the battery. Avoid touching the battery and its terminals with your fingers.
- 5. Refit the cover and press it in.

Dispose of the old battery in an environmentally-responsible manner.

Locking and unlocking

Locking/unlocking the car from outside

For cars with the Keyless system, see page 118.

Unlocking

The remote control unlock button can unlock the car in two different ways (select in personal preferences, see page 75):

- one press unlocks the doors and the tailgate
- one press unlocks the driver's door and a second press unlocks the other doors and the tailgate.

Locking

The remote control locks the doors and the tailgate simultaneously. Door lock buttons and inside door handles are disengaged*.

The fuel filler flap cannot be opened if the car is locked with the remote control.



NOTE

The car can be locked even if a door or the tailgate is open. When the door is closed there is a risk that the keys will be locked in*.

\triangle

WARNING

Be aware that you can be locked in the car if it is locked from the outside with the remote control. You cannot then leave the car using any of the controls inside the car.

Global opening

One long press on the unlock or lock button opens or closes all windows simultaneously (also closes the sunroof).

The function can be used to quickly air the car in hot weather for example.

Different personal settings can be made, see page 75.

Tailgate

Unlocking

Unlocking tailgate only:

 Press the remote control button to unlock the tailgate.


Locking

If the doors are locked when the tailgate is closed then it remains unlocked. Lock with the remote control or from inside to lock both doors and the tailgate.

Automatic relocking

If none of the doors or the tailgate is opened within two minutes of unlocking, all are locked again automatically (does not apply to locking from inside). This function prevents the car from being left unlocked unintentionally. For cars with alarms, see page 127.

Locking/unlocking the car from inside

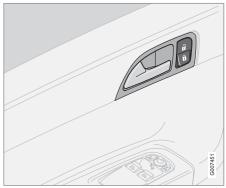

The doors and the tailgate can be locked or unlocked simultaneously using the lock button by the door handle.

Locking and unlocking

Unlocking

Press the upper section of the lock button.
 Press and hold to also open all side windows.

The door cannot be unlocked by pulling up the lock button.

Locking

Press the lower section of the lock button.
 Press and hold to also close all windows and the sunroof.

All doors can be locked with each respective door's lock button.

Opening the doors

When the doors are locked from the inside:

 Pull the handle twice to unlock and open the doors.

Automatic locking

When the speed of the car exceeds 7 km/h the doors and tailgate can be locked automatically.

When the function is activated and the doors have been locked they can be opened in two ways:

- pull one of the door handles twice
- press the unlock button by the door handle.

The function can be activated/deactivated by means of personal preferences, see page 75.


Deadlocks

When deadlocked, the doors cannot be opened from the inside if they are locked with the remote control.

The deadlocks are activated with the remote control and are set after a 25 second delay after the doors have been locked.

The car can only be unlocked from the deadlock mode with the remote control. The driver's door can also be unlocked with the detachable key blade.

Temporary deactivation

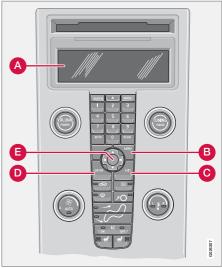

Active menu options are indicated with a cross.

- A Display
- MENU
- EXIT
- ENTER
- Navigation

|

05



Locking and unlocking

If someone is going to stay in the car but the doors must be locked from the outside, then the deadlocks function can be temporarily switched off.

This is carried out as follows:

- Access the menu system under Car settings (for a detailed description of the menu system, see page 75).
- 2. Select Reduced guard.
- Select Activate once: The instrument panel display shows the message Reduced guard - See manual and the deadlocks function is switched off when the car is locked.

or

Select Ask on exit: Each time the key is turned to position 0 the audio system display shows the message Press ENTER to reduce guard until engine is started.

EXIT to cancel - select one of the options:

 If the deadlocks function shall be switched off: Press ENTER and lock the car.

If the car is equipped with an alarm with movement and tilt detectors* then these are switched off at the same time, see page 127.

The next time the key is turned to position II the system is reset to zero and the instrument

panel display shows the message Full guard at which the deadlocks function and the alarm's movement and tilt detectors* are reengaged.

or

 If the locking system shall not be changed: Select no options at all and lock the car. Or press EXIT and lock the car.



NOTE

If the car is equipped with an alarm:

Remember that the car's alarm is armed when the car is locked.

If any of the doors are opened from the inside then the alarm will be triggered.




WARNING

Do not allow anyone to remain in the car without first deactivating the deadlocks to avoid the risk of anyone being locked in.

Child safety locks

Manual select, child lock, rear doors

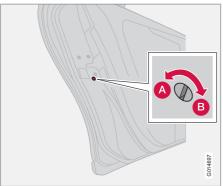

Manual child lock in left-hand rear door.

A The door cannot be opened from inside.

B The door can be opened from inside.

The child safety lock controls are found on the trailing edge of the rear doors and are only accessible when the doors are open.

To activate or deactivate the child safety locks:

- 1. Remove the remote control key blade.
- 2. Turn the control using the key blade.

Electrical locking of the rear doors and power windows*



Driver's door control panel.

When the electric child safety lock is active then the rear:

- windows can only be opened with the driver's door control panel
- doors cannot be opened from inside.
- Child safety locks are activated in key position I or II.
- 2. Press the switch on the driver's door.

A message appears on the information display.

The lamp in the button illuminates when the lock is active.



NOTE

Cars with electric child safety locks do not also have manual child locks.

Alarm*

Alarm system

When the alarm is armed, it continually monitors all alarm inputs.

The alarm is triggered if:

- a door, the bonnet or tailgate opens.
- a non-approved key is used in the ignition or if an attempt is made to force the lock.
- a movement is detected in the passenger compartment (if fitted with a movement detector).
- the car is raised or towed away (if fitted with a tilt detector).
- a battery cable is disconnected.
- anyone tries to disconnect the siren.

Alarm indicator



A red LED on the instrument panel indicates the alarm system's status:

- LED not lit the alarm is not armed.
- The LED flashes once every other second
 Alarm is armed.
- The LED flashes rapidly after disarming the alarm and until the ignition is switched on - the alarm has been triggered.

If there is a fault in the alarm system, a message appears on the display. Contact an authorised Volvo workshop.



NOTE

Do not attempt to repair or modify alarm system components. All such attempts could affect the terms of insurance.

Arming the alarm

 Press the lock button on the remote control. A long flash from the car's direction indicators confirms that the alarm is armed and that the doors are locked.



IMPORTANT

The alarm is fully armed when the car's direction indicators have made one long flash and the LED on the instrument panel flashes once every other second.

Disarming the alarm

 Press the unlock button on the remote control. Two short flashes from the car's direction indicators confirm that the alarm is disarmed and that the doors are unlocked.

Alarm*

Automatic re-arming of the alarm

This function prevents you accidentally leaving the car without the alarm on.

If none of the doors or the tailgate are opened within two minutes of disarming the alarm (and the car has been unlocked with the remote control), the alarm is automatically rearmed. The car is locked at the same time.

Deactivating a triggered alarm

 Press the unlock button on the remote control or insert the key in the ignition switch.


Confirmation is given by two short flashes from the direction indicators.

Alarm signals

When the alarm is triggered, the following happens:

- A siren sounds for less than 25 seconds.
 The siren has its own battery which is used if the car battery has insufficient charge or is disconnected.
- The direction indicators flash for five minutes or until the alarm is deactivated.


Remote control not working

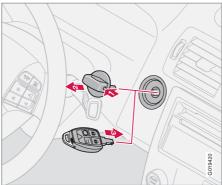

If for some reason the remote control is not working, the alarm can still be switched off and the car started as follows:

- Open the driver's door with the key blade.
 The alarm is triggered and the siren sounds.
- On cars with the keyless drive system: First remove the knob by pressing in the catch (1) and pulling out (2).
- 3. Insert the remote control into the ignition switch (3). The alarm is deactivated. The alarm light flashes rapidly until the ignition key is turned to position II.

Reduced alarm level

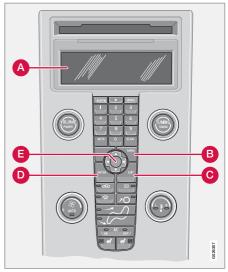

Active menu options are indicated with a cross.

- A Display
- B MENU
- EXIT
- **ENTER**
- Navigation

05



Alarm*

To avoid inadvertently triggering of the alarmfor example when leaving a dog in the car or during a ferry crossing - the movement and tilt detectors can be temporarily switched off.

This is carried out as follows:

- Access the menu system under CAR SETTINGS (for a detailed description of the menu system, see page 75).
- 2. Select REDUCED GUARD
- Select Activate once: The instrument panel display shows the message Reduced guard - See manual and the movement and tilt detectors are switched off when the car is locked.

or

Select Ask on exit: Each time the key is turned to position 0 the audio system display shows the message ENTER reduces protection until the engine is started again. EXIT cancels - select one of the options:

 If the movement and tilt detectors shall be deactivated: Press ENTER and lock the car.

If the car is equipped with the deadlocks function then it is switched off at the same time, see page 123.

The next time the key is turned to position II the system is reset to zero and the instrument panel display shows the message FULL GUARD at which the movement and tilt detectors and the deadlocks function are reengaged.

or

 If the detectors shall not be switched off: Select no options at all and lock the car. Or press EXIT and lock the car.

Testing the alarm system

Testing the movement detector in the passenger compartment

- 1. Open all the windows.
- Arm the alarm. Activation of the alarm is confirmed by the lamp flashing slowly.
- 3. Please wait 30 seconds.
- Test the movement detector in the passenger compartment, such as by lifting out a bag from a seat. A siren should sound and all direction indicators should flash.
- Deactivate the alarm by unlocking the car with the remote control.

Test of alarm for doors

1. Arm the alarm.

- 2. Please wait 30 seconds.
- 3. Unlock the driver's door with the key blade.
- Open one of the doors. A siren should sound and all direction indicators should flash.
- Deactivate the alarm by unlocking the car with the remote control.

Test of alarm for bonnet

- Sit in the car and deactivate the movement detector.
- Arm the alarm. Remain in the car and lock the doors with the button on the remote control.
- 3. Please wait 30 seconds.
- Open the bonnet with the handle under the dashboard. A siren should sound and all direction indicators should flash.
- Deactivate the alarm by unlocking the car with the remote control.



| General | 132 |
|---|-----|
| Refuelling | 134 |
| Starting the engine | 135 |
| Starting the engine – Flexifuel | 137 |
| Keyless drive* | 139 |
| Manual gearbox | 140 |
| Automatic gearbox | 142 |
| All-wheel drive | 146 |
| Brake system | 147 |
| DSTC – Stability and traction control system* | 149 |
| Park Assist* | 151 |
| BLIS* – Blind Spot Information System | 153 |
| Towing and recovery | 157 |
| Start assistance | 159 |
| Driving with a trailer | 160 |
| Towing equipment* | 162 |
| Detachable towbar* | 164 |
| Loading | 168 |
| Adjusting headlamp pattern | 169 |
| | |

STARTING AND DRIVING





General

Economical driving

Driving economically means driving smoothly while thinking ahead and adjusting your driving style and speed to the prevailing conditions. For more advice on reducing environmental impact. see page 12.

- Get the engine warmed up as soon as possible.
- Do not let the engine idle, but drive at light loads as soon as it is possible.
- A cold engine consumes more fuel than a warm one.
- Avoid braking too hard.
- Do not drive with unnecessary loads in the car.
- Do not use winter tyres when the roads are dry.
- Remove load carriers when they are not being used.
- Avoid driving with open windows.

Slippery driving conditions

Practise driving on slippery surfaces under controlled conditions to learn how the car reacts.

Engine and cooling system

Under special conditions, for example when driving in hilly terrain, extreme heat or with heavy loads, there is a risk that the engine and cooling system will overheat.

Avoid overheating the cooling system

- Maintain a low speed when driving with a trailer up long, steep ascents.
- Do not turn the engine off immediately you stop after a hard drive.
- Remove any auxiliary lamps from in front of the grille if driving in extreme high temperatures.

Avoid overheating the engine

Do not exceed engine speeds of 4500 rpm (diesel engines: 3500 rpm) if driving with a trailer or caravan in hilly terrain. The oil temperature could then become too high.

Open tailgate

Avoid driving with the tailgate open. If it is necessary to drive with the tailgate open for a short distance:

- 1. Close all windows.
- 2. Set the air distribution to the windscreen and floor and run the fan at high speed.



Do not drive with the tailgate open. Toxic exhaust fumes can be drawn into the car through the cargo area.

Driving in water

The car can be driven through water at a maximum depth of 25 cm at a maximum speed of 10 km/h. Extra caution should be exercised when passing through flowing water.



IMPORTANT

Engine damage can occur if water enters the air filter.

In greater depths, water can enter the transmission. This reduces the lubricating ability of the oils and shortens the service life of the systems.

General

When driving in water, maintain a low speed and do not stop the car. When the water has been passed, depress the brake pedal lightly and check that full brake function is achieved. Water and mud for example can make the brake linings wet resulting in delayed brake function.

Clean the electric contacts of the electric engine block heater and trailer coupling after driving in water and mud.



IMPORTANT

Do not let the car stand with water over the sills for any long period of time. This could cause electrical malfunctions.

In the event of stalling in water, do not try to restart. Tow the car from the water.

Do not overload the battery

The electrical functions in the car load the battery to varying degrees. Avoid having the ignition key in position II when the engine is turned off. Use ignition position I instead, as less power is consumed.

Note that the 12 volt outlet in the cargo area supplies power even when the remote control has been removed from the ignition switch.

Examples of functions that use a lot of power:

- ventilation fan
- windscreen wipers
- audio equipment (high volume)
- parking lights

Also, be aware of different accessories that load the electrical system. Do not use functions which use a lot of power when the engine is switched off.

If the battery voltage is low, a message appears on the display. The energy-saving function shuts down certain functions or reduces the load on the battery by, for example, slowing the ventilation fan and switching off the audio system.


Charge the battery by starting the engine.

06



Refuelling

Opening the fuel filler flap

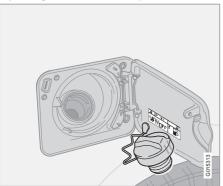

Don not forget to switch off the fuel-driven heater before refuelling!

Open the fuel filler flap with the button on the lighting panel, see page 54. The engine must be switched off before the flap can be opened. The fuel flap is located on the rear right wing.

Closina

Push in the flap until you hear a click.

Fuel cap

- 1. Turn the fuel cap until an obvious resistance is felt.
- Turn past the resistance until it comes to a stop.

- 3. Take out the cap.
- Hang up the cap on the inside of the fuel filler flap.



NOTE

Put the petrol cap back on after refuelling. Turn until one or more clear clicks are heard.

Filling up with fuel

Do not overfill the tank but fill until the pump nozzle cuts out.



NOTE

Excess fuel in the tank can overflow in hot weather.

Fuel of a lower quality than that specified should not be used as engine power and fuel consumption can be negatively affected, see page 273.

△

WARNING

Fuel which spills on to the ground can be ignited by the exhaust fumes.

Switch off the fuel-driven heater before starting to refuel.

Never carry an activated mobile phone when refuelling. The ring signal could cause spark build-up and ignite petrol fumes, leading to fire and injury.

Petrol

IMPORTANT

Do not add cleaning additives to the petrol, unless recommended by Volvo.

For more information on petrol, see page 273.

Diesel

At low temperatures (–5 °C to –40 °C), a paraffin precipitate may form in the diesel fuel, which can lead to ignition problems. For more information, see page 274.



IMPORTANT

Use special winter grade fuel during cold months.



Starting the engine

Before starting the engine

Apply the parking brake.

Automatic gearbox

Move the gear selector in position P or N.

Manual gearbox

Put the gear lever in neutral and hold the clutch pedal fully depressed. This is particularly important in very cold conditions.



WARNING

Never remove the ignition key from the steering lock while driving or when the car is being towed. The steering lock could otherwise be activated, making it impossible to steer the car.

The ignition key must be in position **II** when the car is being towed.



NOTE

The idling speed can be noticeably higher than normal for certain engine types during cold starting. This is in order that the emissions system can reach normal operating temperature as quickly as possible, which minimises exhaust emissions and protects the environment.

Starting the engine

Petrol

 Turn the ignition key to position III. If the engine does not start within 5 – 10 seconds, release the key and try again.

Diesel

- 1. Turn the ignition key to position II.
 - > An indicator symbol in the combined instrument panel shows that engine preheating is underway, see page 47.
- 2. Turn the ignition key to position **III** when the indicator symbol goes out.

Autostart (5-cylinder)

With the autostart function, there is no need to hold the ignition key (or ignition dial on cars with Keyless Drive, see page 118) in position III until the engine has started.

Turn the ignition key to the start position and then release. The starter motor then works automatically until the engine has started.



NOTE

If the diesel engine is started in extreme cold without waiting for engine preheating, then the automatic start sequence can be delayed for a couple of seconds.

Ignition switch and steering lock

0 - Locked position



The steering lock is activated when the key is removed from the lock.

I - Radio position



Certain electrical components can be switched on. The engine's electrical system is not activated.

II - Driving position



The key position when driving. The car's electrical system is energised.

06



Starting the engine

III - Start position



The starter motor is engaged. When the key is released it springs back automatically to the driving position, once the engine has started.

A ticking sound may be heard if the key is between positions. Turn the key to position II and back to eliminate the sound.

When the steering lock is activated

If the front wheels are positioned so that there is tension in the steering lock, a warning message may be shown on the information display and the car prohibited from starting.

- Remove the key and turn the steering wheel to release the tension.
- Hold the steering wheel in this position.
 Reinsert the key and make a new attempt to start the car.

\wedge

WARNING

Never remove the ignition key from the ignition switch while driving or when the car is being towed. The steering lock would be activated, making it impossible to steer the car.

\triangle

WARNING

Always remove the ignition key from the ignition when leaving the car, especially if there are children in the car.

Make sure the steering lock is activated when the car is left to reduce the risk of theft.

Ignition keys and electronic immobiliser

The ignition key must not hang with other keys or metal objects on the same key ring. The electronic immobiliser could be activated accidentally.



Starting the engine – Flexifuel

General information about starting with Flexifuel

The engine is started in the same way as in a petrol-engined car, see page 135.



NOTE

The immobiliser is activated in the event of repeated start attempts. Before a new start attempt is made the key/dial must first be turned back to position I or 0.

In the event of starting difficulties

If the engine does not start at the first start attempt, proceed as follows:

- 1. Depress the accelerator pedal 1/3 to 1/2.
- 2. Turn the ignition key/dial to position ${\bf III}.$
- When the engine has started, ease the accelerator pedal gradually as the engine speed increases.

If the engine has not started after 10 seconds, second attempt

 Turn the ignition key/dial to position III until the engine starts, but not longer than 60 seconds.

If the engine still does not start


 Please wait for one minute, fully depress the accelerator pedal and repeat the previous procedure.



IMPORTANT

If the engine does not start despite repeated start attempts, contact an authorised Volvo workshop.

Engine block heater*

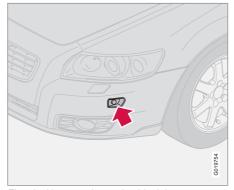

Electrical input to the engine block heater.

When the temperature is expected to be lower than $-10\,^{\circ}\text{C}$ and the car has been refuelled with bioethanol E85, an engine block heater should

be used for about 2 hours to facilitate the quick starting of the engine.

The lower the temperature, the longer the time required with the engine block heater. At -20 °C the heater should be used for approx. 3 hours.

Cars intended for E85 have an electric engine block heater*. Starting and driving with a preheated engine involves significantly lower emissions and reduced fuel consumption. For this reason you should aim to use the engine block heater throughout the winter months.



WARNING

The engine block heater is powered by high voltage. Fault tracing and repair of an electric engine block heater and its electrical connections must only be carried out by an authorised Volvo workshop.



NOTE

Points to remember for carrying reserve fuel:

In the event of stalling due to an empty fuel tank, bioethanol E85 from a reserve fuel can may make the engine difficult to start in extreme cold. This is avoided by filling the reserve fuel can with 95 octane petrol.



06 Starting and driving

Starting the engine - Flexifuel

For more information on Flexifuel's bioethanol E85 fuel, see page 273.

Fuel adaptation

If the fuel tank is filled with petrol after the car has been driven on bioethanol E85 (or vice versa) then the engine may run slightly unevenly for a time. For this reason it is important to allow the engine to accustom itself (adapt) to the new fuel mixture.

Adaptation takes place automatically when the car is driven for a short period at an even speed.




IMPORTANT

After the fuel mixture in the tank has been changed an adaptation should be made by driving at an even speed for about 15 minutes.

If the battery has been discharged or disconnected then a slightly longer period of driving is required for the adaptation as the memory for the electronics has been cleared.



General

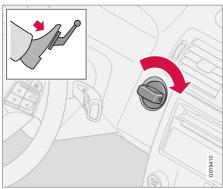

The keyless drive system allows the car to be unlocked, driven and locked without the need for a key, see page 118.

The ignition switch ignition dial is used in the same way as the key. One precondition for starting the car is that the car's remote control is located inside the passenger compartment or the cargo area.

Starting the car

 Depress the clutch pedal (cars with manual gearbox) or brake pedal (cars with automatic gearbox).


Petrol engine

Press in and turn the ignition dial to position III.

Diesel engine

- First turn the ignition dial to position II and wait until the diesel indicator symbol in the combined instrument panel goes out, see page 47.
- 2. Following which, turn the ignition dial to position **III.**

Starting with the remote control

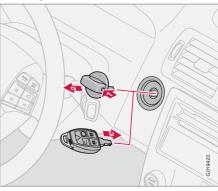


If the remote control battery is discharged then the Keyless Drive function does not work. In which case, start the car by using the remote control as ignition dial.

- 1. Press in the catch in the ignition dial.
- 2. Pull the ignition dial out from the ignition switch.
- Insert the remote control into the ignition switch and start in the same way as with the ignition dial.

Manual gearbox

Gear positions - five-speed

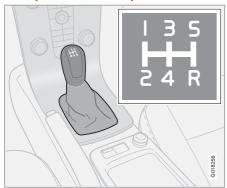

For the best possible fuel economy, use the highest gear possible as often as possible.

- Depress the clutch pedal fully during each gear change.
- Take your foot off the clutch pedal between gear changes.
- Follow the shifting pattern indicated.

Reverse gear inhibitor - five-speed




The reverse gear inhibitor hinders the possibility of mistakenly attempting to engage reverse gear during normal forward travel.

Only engage reverse gear when the car is stationary.

 To engage reverse gear, the gear lever must first be put in position N. Reverse gear cannot therefore be engaged directly from fifth gear due to the reverse gear inhibitor.

Gear positions - six-speed (petrol)

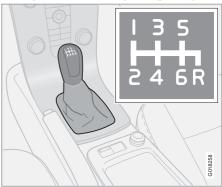

For the best possible fuel economy, use the highest gear possible as often as possible.

- Depress the clutch pedal fully during each gear change.
- Take your foot off the clutch pedal between gear changes.
- Follow the shifting pattern indicated.

It may be difficult to find the positions for fifth and sixth gear when the car is stationary as the reverse gear inhibitor (which blocks sideways movement towards reverse) is then not activated.



Manual gearbox

Reverse gear inhibitor - six-speed (petrol)



The reverse gear inhibitor hinders the possibility of mistakenly attempting to engage reverse gear during normal forward travel.


Only engage reverse gear when the car is stationary.



NOTE

Reverse gear is electronically blocked if the car is travelling faster than approx. 20 km/h.


Gear positions - six-speed (diesel)

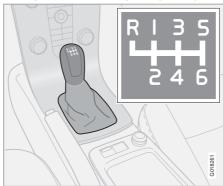

For the best possible fuel economy, use the highest gear possible as often as possible.

- Depress the clutch pedal fully during each gear change.
- Take your foot off the clutch pedal between gear changes.
- Follow the shifting pattern indicated.

Reverse gear inhibitor - six-speed (diesel)

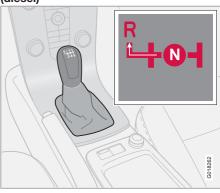

The reverse gear inhibitor hinders the possibility of mistakenly attempting to engage reverse gear during normal forward travel.


Only engage reverse gear when the car is stationary.

Engage reverse gear by pressing down the gear lever and moving it to the left.



Automatic gearbox

Geartronic automatic gear positions

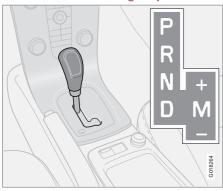

- left-hand position: Automatic gear changing.
- M right-hand position: Manual gear changing.

P - Parking position

Select position **P** when you wish to start the engine or park the car.



IMPORTANT

The car must be stationary when position **P** is selected.



NOTE

The brake pedal must be depressed to move the gear lever from the **P** position.

The gearbox is mechanically blocked when the **P** position is engaged. Always apply the parking brake when parking the car.

R - Reverse

The car must be stationary when position ${\bf R}$ is selected.

N - Neutral

No gear is engaged and the engine can be started. Apply the parking brake when the car is stationary with the gear selector in position ${\bf N}$.



NOTE

The brake pedal must be depressed to move the gear selector from the ${\bf N}$ position if the car has been stationary for more than 3 seconds.

D – Drive

 ${f D}$ is the normal driving position. The car automatically shifts up and down depending on the level of acceleration and speed. The car must be stationary when the gear selector is moved to position ${f D}$ from position ${f R}$.

Geartronic manual gear positions

The driver can also change gear manually using the Geartronic automatic gearbox. The car engine-brakes when the accelerator pedal is released.

Manual gearshift mode is obtained by moving the lever from position **D** to the right-hand end position at **M**. The information display shifts the indication from **D** to one of the figures **1–6**, depending which gear is engaged just then, see page 45.

- Move the lever forwards towards + (plus) to change up a gear and release the lever, which returns to its rest position at M.
- Pull the lever back towards (minus) to change down a gear and release the lever.

The manual gearshift mode ${\bf M}$ can be selected at any time while driving.

To return to automatic driving mode: move the lever to the left-hand end position at **D**.

Geartronic automatically shifts down if the driver allows the speed to decrease lower than a level suitable for the selected gear, in order to avoid jerking and stalling.

Kick-down

When the accelerator pedal is pressed all the way to the floor (beyond the position normally regarded as full acceleration) a lower gear is

Automatic gearbox

immediately engaged. This is known as kickdown.

If the accelerator is released from the kickdown position, the gearbox automatically changes up.

Kick-down is used when maximum acceleration is needed, such as for overtaking.


Safety function

To prevent overrevving the engine, the gearbox control program has a protective downshift inhibitor which prevents the kick-down function.

Geartronic does not permit downshifting/kickdown which would result in an engine speed high enough to damage the engine. Nothing happens if the driver still tries to shift down in this way at high engine speed – the original gear remains engaged.

When kick-down is activated the car can change one or more gears at a time depending on engine speed. The car changes up when the engine reaches its maximum speed in order to prevent damage to the engine.

Mechanical gear selector inhibitor

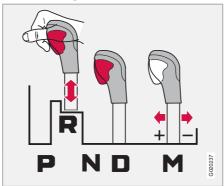

The gear selector can be moved forward and back freely between ${\bf N}$ and ${\bf D}$. Other positions are locked with a latch that is released with the inhibitor button on the gear selector.

With the inhibitor button depressed the lever can be moved forwards or backwards between **P**, **R**, **N** and **D**.

Automatic gear selector inhibitor

Cars with an automatic gearbox have special safety systems:

Keylock

To remove the ignition key, the gear selector must be in the ${\bf P}$ position. The key is locked in all other positions.

Parking position (P)

Stationary car with engine running:

 Hold your foot on the brake pedal when moving the gear selector to another position.

Electric gear inhibitor – Shiftlock Parking position (P position)

To be able to move the gear selector from the **P** position to other gear positions, the ignition key must be in position **II** and the brake pedal must be depressed.


Shiftlock - Neutral (N position)

If the gear selector is in the $\bf N$ position and the car has been stationary for at least three seconds (irrespective of whether the engine is running) then the gear selector is locked in the $\bf N$ position.

To be able to move the gear selector from the **N** position to another gear position, the brake pedal must be depressed and the ignition key must be in position **II**.

Automatic gearbox

Disengaging the gear selector inhibitor

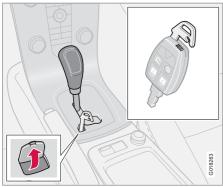

In certain cases, it may be necessary to move the car when it is not driveable, for example if the battery is flat. Proceed as follows to move the car:

- There is a small cover behind P-R-N-D on the gear selector panel. Open it at the rear edge.
- Fully insert the key blade from the remote control.
- Hold the key blade down and at the same time move the gear lever out of the P position.

Cold start

When starting in low temperatures, the gear changes can sometimes feel hard. This is due

to the gearbox oil's viscosity at low temperatures. To reduce engine emissions, the gearbox shifts up later than normal when the engine is started at low temperatures.



NOTE

Depending on the engine temperature when the engine is started, the idle speed after a cold start may be higher than normal for certain engine types.

Text message and action

In some situations the display can show a message at the same time as a symbol is illuminated.

Automatic gearbox

| Symbol | Display | Driving characteristics | Action |
|--------|--------------------------------|--|---|
| ñ | TRANSM. OVERHEAT BRAKE TO HOLD | Difficulty in maintaining even speed at constant engine speed. | Gearbox overheated. Keep the car stationary using the foot brake ^A . |
| À | TRANSM. OVERHEAT PARK SAFELY | Significant pulling in the car's traction. | Gearbox overheated. Park the car immediately in a safe manner ^A . |

A For fastest cooling: run the engine at idling speed with the gear lever in the N or P position, until the message clears.

The table shows two steps with an increased degree of seriousness should the gearbox become too hot. In parallel with the display text the driver is also advised that the car's electronics are temporarily changing the driving characteristics. Follow the instructions on the information display where appropriate.



NOTE

The table's examples are no indication that the car is defective but instead show that a safety function has been activated intentionally to prevent damage to one of the car's components.

For more possible display messages with their respective proposals for solutions concerning automatic transmission, see page 50.

A display text clears automatically after the action has been carried out or after one press on the indicator stalk **READ** button.

06



06 Starting and driving

All-wheel drive

All-wheel drive - AWD*

All-wheel drive is always engaged.

All-wheel drive means that all four road wheels are driven at the same time. Power is automatically distributed between front and rear wheels. An electronically controlled clutch system distributes the power to the pair of wheels that grips best. This provides the best traction and prevents wheel spin.

Under normal driving conditions, the majority of power is transmitted to the front wheels.

All-wheel drive improves driving safety in rain, snow and icy conditions.

Brake system

Brake servo

If the car is rolling or is being towed with the engine turned off, the brake pedal must be pressed about five times harder than when the engine is running. If the brake pedal is depressed when the engine is started, you will feel the pedal drop. This is normal and due to the brake servo becoming active. This may be more noticeable if the car has Emergency Brake Assistance (EBA).



WARNING

The brake servo only works when the engine is runnina.



NOTE

If braking with the engine switched off, press the brake pedal sharply once, not repeatedly.

Brake circuits



This symbol illuminates if a brake circuit is not working.

If a fault should occur in one of the circuits, it is still possible to brake

the car. The brake pedal will travel further and may feel softer than normal. Harder pressure on the pedal is needed to produce the normal braking effect.

Dampness can affect braking characteristics

Brake components become wet when the car is driven in heavy rain, through pools of water or when the car is washed. This may alter brake pad friction characteristics so that there is a delay before braking effect is noticed.

Press the brake pedal lightly from time to time if driving for long stretches in rain or slushy snow, as well as after setting off in very damp or cold weather. This warms up the brake pads and dries off any water. This precaution is also recommended before parking the car for a long period in such weather conditions.

If the brakes are used heavily

When driving in the Alps or other roads with similar characteristics, the car's brakes are heavily loaded even if the brake pedal is not being depressed especially hard.

Because speed is often low, the brakes are not cooled as effectively as when driving on flat roads at higher speed.

So as not to overload the brakes, shift down when driving downhill instead of using the foot brake. Use the same gear driving downhill as you would use driving uphill. This uses engine braking more efficiently so the foot brake is only required for brief periods.

Bear in mind that driving with a trailer puts an additional load on the car's brakes.

Anti-lock braking system (ABS)



The anti-lock braking system (ABS) prevents the wheels from locking up during braking.

This means the ability to steer is maintained and it is easier to swerve to avoid a hazard for example.

After the engine has been started, the ABS will perform a brief self-test at a speed of about 20 km/h. This can be felt and heard as pulses in the brake pedal.

To get the most out of the ABS:

- 1. Depress the brake pedal with full force. Pulses will be felt.
- 2. Steer the car in the direction of travel. Do not release the pressure on the pedal.

Practice braking with the ABS system in a traffic-free area and in different weather conditions

The ABS symbol illuminates for two seconds if there was a fault in the ABS system when the engine was last running.



Brake system

Emergency Brake Assistance - EBA

(Emergency Brake Assistance) For sudden braking, full-strength braking is provided instantaneously. The EBA function senses when heavy braking is underway by registering how quickly the brake pedal is depressed. Continue braking without easing off on the brake pedal. The function is suspended when the pressure on the brake pedal eases. This function is always active. It cannot be disengaged.



WARNING

If the BRAKE and ABS warning symbols illuminate at the same time, there may be a fault in the brake system. If the level in the brake fluid reservoir is normal at this stage, drive carefully to the nearest authorised Volvo workshop and have the brake system checked.

If the brake fluid is below the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The reason for the loss of brake fluid must be investigated.



NOTE

When EBA is activated the brake pedal lowers slightly more than usual, depress (hold) the brake pedal as long as necessary. If the brake pedal is released then all braking ceases.



DSTC - Stability and traction control system*

General

The Dynamic Stability and Traction Control system (STC/DSTC) improves the car's traction and helps the driver to avoid skidding.

A pulsing sound may be noticed during braking or acceleration when the system is in action. The car may accelerate slower than expected when the accelerator pedal is depressed.

The car is equipped with either STC or DSTC depending on market. The table shows the integral functions of the respective systems.

| Function/system | STC | DSTC |
|-------------------------|-----|------|
| Active Yaw Control | | Χ |
| Spin Control | Χ | Χ |
| Traction control system | X | X |

Active Yaw Control

The function limits the driving and brake force of the wheels individually in order to stabilise the car.


Spin Control

The function prevents the driving wheels from spinning against the road surface during acceleration.

Traction control system

The function is active at low speed and transfers power from the driving wheel that is spinning to the one that is not.

Reduced operation

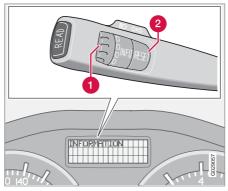

- 1 Thumbwheel
- RESET button¹

The stability system is activated automatically each time the car is started.

System operation during skidding and acceleration can be partially deactivated. Operation during skidding is then delayed and so allows

more skidding which provides greater freedom for dynamic driving. Traction in deep snow or sand is improved at the same time as acceleration is no longer limited.

Operation

- Turn thumbwheel until the STC/DSTC menu is shown.
 - **DSTC ON** means that the system function is unchanged.
 - **DSTC SPIN CONTROL OFF** means that system operation is reduced.
- Press and hold the RESET button until the STC/DSTC menu is changed.

At the same time the symbol <u>a</u> illuminates as a reminder that the system has been reduced.

The system remains reduced until the engine is next started.



Suppressing system function may alter the driving characteristics of the car.

¹ No function in cars without trip computer, fuel-driven parking heater as well as stability and traction control system.

DSTC - Stability and traction control system*



(i) NOTE

DSTC ON is shown for several seconds on the display and the symbol & illuminates each time the engine is started.

Messages on the information display

ANTI-SPIN TEMPORARILY OFF means that the system has been temporarily reduced due to excessive brake temperature. The function is reactivated automatically when the brakes have cooled.

ANTI-SKID SERVICE REQUIRED system disabled due to a fault.

Stop the car in a safe place and turn off the engine.

If the message remains when the engine is restarted, drive to an authorised Volvo workshop.

Symbols in the combined instrument panel



DSTC system

Information

If the symbols (i) and (a) are displayed at the same time, read the message on the information display.


If the symbol (a) appears alone then it may appear as follows:

- Flashing light means that the STC/DSTC system is now being activated.
- Constant glow for two seconds means system check when the engine is started.
- Constant glow after starting the engine or while driving means that there is a fault in the STC/DSTC system.
- Constant glow after deactivation reminds that the STC/DSTC system has been reduced.



Park Assist*

General information on parking assistance

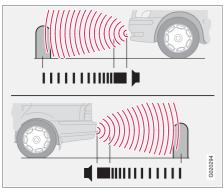

Parking assistance front and rear

Parking assistance is used as an aid to parking. A signal indicates the distance to a detected obstacle.

\wedge

WARNING

Parking assistance does not relinquish the driver's own responsibility during parking. The sensors have blind spots where obstacles cannot be detected. Be aware of children or animals near the car.

Variants

Parking assistance is available in two variants:

- Rear only.
- Both front and rear.

Function

The frequency of the signal increases the shorter the distance to an obstacle, in front of or behind the car. If the volume of another audio source from the audio system is high, then this is automatically lowered.

The tone becomes constant at a distance of about 30 cm. If there are obstacles within this distance both behind and in front of the car, the signal alternates between left and right-hand speakers.

Rear parking assistance only

The system is automatically engaged when the car is started.

Rear parking assistance is activated when reverse gear is engaged and the message Park Assist active, Exit to deactivate is shown on the audio system display.

If the system is switched off, the display shows **Park Assist deactivated Enter to activate** as soon as reverse gear is engaged. To change the settings, see page 75.

The distance covered behind the car is about 1.5 metres. The signal comes from the rear loudspeakers.

Limitations


The system must be deactivated when reversing with a trailer, or bike carrier on the towbar or similar. Otherwise the trailer or bike carrier would trigger the sensors.



NOTE

Rear parking assistance is deactivated automatically when towing a trailer if a Volvo genuine trailer cable is used.

Parking assistance both front and rear

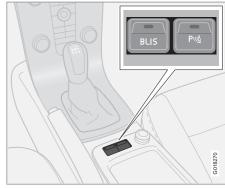

Button for Off/On (here right-hand button).

The system is automatically engaged when the car is started and the switch's On/Off lamp is

Park Assist*

illuminated. If parking assistance is switched off with the button, the lamp goes out.

Front

Front parking assistance is active at speeds below 15 km/h. The system is deactivated at higher speeds. When the speed is below 10 km/h the system is reactivated.

The distance covered to the front of the car is about 0.8 metres. The signal for obstacles in front comes from the front loudspeakers.

Limitations

Front parking assistance cannot be combined with extra lights because the sensors are affected by the extra lights.

Rear

Rear parking assistance is activated when reverse gear is engaged.

The distance covered to the rear of the car is about 1.5 metres. The signal for obstacles behind comes from the rear loudspeakers.

Limitations

See the previous section Rear parking assistance only.

Fault indicator



If the information symbol illuminates with constant glow and the display shows PARK ASSIST SERVICE REQUIRED then parking assistance is disengaged. For

attention, contact an authorised Volvo workshop.


1

IMPORTANT

In certain conditions the parking assistance system may produce incorrect warning signals that are caused by external sound sources that emit the same ultrasonic frequencies that the system works with.

Examples of such sources include horns, wet tyres on asphalt, pneumatic brakes and exhaust noises from motorcycles etc.

Cleaning the sensors

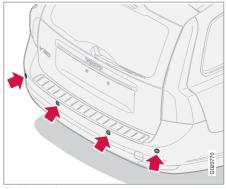

Parking assistance sensors

The sensors must be cleaned regularly to ensure that they work properly. Clean them with water and car shampoo.




NOTE

Dirt, ice and snow covering the sensors may cause incorrect warning signals.



BLIS* – Blind Spot Information System

General

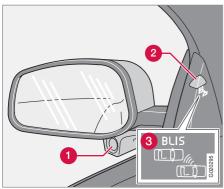

Rearview mirror with BLIS system.

- BLIS camera
- 2 Indicator lamp
- BLIS symbol

M WARNING

The system is a supplement to, not a replacement for, a safe driving style and use of the rearview mirrors. It can never replace the driver's attention and responsibility. The responsibility for changing lanes safely always rests with the driver.

BLIS is an information system that under certain conditions can help to draw the driver's attention to vehicles moving in the same direction in the so-called "blind spot".

The system is designed to work most effectively when driving in dense traffic on multi-lane highways.

BLIS is based on camera technology. The cameras (1) are located under the door mirrors.

When a camera has detected a vehicle inside the blind spot zone the indicator lamp (2) illuminates with a constant glow.


i

NOTE

The lamp illuminates on the side of the car where the system has detected the vehicle. If the car is overtaken on both sides at the same time then both lamps illuminate.

BLIS advises the driver with a message if a fault arises in the system. If for example the system's cameras are obscured then the BLIS indicator lamp flashes and a message is shown in the information display. In such cases, check and clean the lenses. If necessary, the system can be switched off temporarily by pressing the **BLIS** button, see page 154.

Blind spots

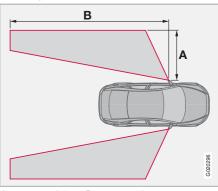

 $A = approx. \ 3.0 \ m, \ B = approx. \ 9.5 \ m.$

When BLIS operates

The system operates when the car is driven at a speed above 10 km/h.

Overtaking

The system is designed to react if you overtake another vehicle at a speed of up to 10 km/h faster than the other vehicle.

The system is designed to react if you are overtaken by a vehicle travelling up to 70 km/h faster than your vehicle.

06



BLIS* – Blind Spot Information System



WARNING

BLIS does not work in sharp bends.

BLIS does not work when the car is reversing.

A wide trailer coupled to the car can conceal other vehicles in adjacent lanes. It can prevent the vehicle in the screened area from being detected by BLIS.

Daylight and darkness

In daylight the system reacts to the shape of the surrounding vehicles. The system is designed to detect motor vehicles such as cars, trucks, buses and motorcycles.

In darkness the system reacts to the headlamps of surrounding vehicles. Vehicles with headlamps that are switched off are not detected by the system. This means for example that the system does not react to a trailer without headlamps which is towed behind a car or truck.

\triangle

WARNING

The system does not react to bicycles or mopeds.

The BLIS cameras can be disrupted by intensive light or when driving in the dark when there are no light sources (e.g. street lighting or other vehicles). The system may then interpret the lack of light as if the cameras have been blocked.

In both cases a message is shown on the information display.

When driving in such conditions system performance may be temporarily reduced and a text message is shown, see page 155.

If the message disappears automatically then BLIS has returned to normal functionality.

The BLIS cameras have limitations similar to the human eye, i.e. they "see" worse in heavy snowfall or thick fog for example.

Activating/deactivating



Button for activating/deactivating (here left-hand button).

BLIS is activated when the engine is started. The indicator lamps in the door panels flash three times when BLIS is activated.

The system can be deactivated/activated by pressing the **BLIS** button.

When BLIS is deactivated the light in the button goes out and a text message is shown on the dashboard display.

When BLIS is activated the light in the button illuminates, a new text message is shown on the display and the indicator lamps in the door panels flash three times. Press the **READ** but-



BLIS* – Blind Spot Information System

ton to clear the text message. For more information on messages, see page 50.

BLIS system message

| DEIG System message | | | | | | | | |
|--------------------------|---|--|--|--|--|--|--|--|
| Text on the dis- play | Specification | | | | | | | |
| BLIS ON | BLIS system on. | | | | | | | |
| BLIS REDUCED FUNCTION | The BLIS camera is disrupted by fog or strong sunlight, for example, shining directly into the camera. | | | | | | | |
| | The camera resets itself when the environment has returned to normal. | | | | | | | |
| BLIS CAMERA BLOCKED | One or both cameras blocked. | | | | | | | |
| | Clean the lenses. | | | | | | | |
| BLIS SERVICE REQUIRED | Blind spot system disengaged. | | | | | | | |
| | Contact an authorised Volvo workshop. | | | | | | | |
| BLIS OFF | BLIS system off. | | | | | | | |



IMPORTANT

Repair of the BLIS system components must only be performed by an authorised Volvo workshop.

Cleaning

In order to work most effectively the BLIS camera lenses must be clean. The lenses can be cleaned with a soft cloth or damp sponge. Clean the lenses carefully so that they are not scratched.



IMPORTANT

The lenses are electrically heated to melt ice or snow. If necessary, brush snow away from the lenses.

Limitations

In some situations the BLIS indicator lamp may illuminate despite there being no other vehicle within the blind spot.



NOTE

If the BLIS indicator lamp illuminates on isolated occasions despite there being no other vehicle within the blind spot then this does not mean that a fault has arisen in the system.


In the event of a fault in the BLIS system the display shows the text BLIS SERVICE REQUIRED.

Here are several examples of situations where the BLIS indicator lamp may illuminate even if there is no other vehicle within the blind spot.



Reflection from shiny wet road surface.

BLIS* – Blind Spot Information System

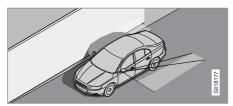

Own shadow on large, light, smooth surface, e.g. noise barrier or concrete road surface.



Low sun in the camera.

Towing and recovery

Start assistance

Use a donor battery if the battery is discharged and the engine does not start. Do not tow the car to bump start it, see page 159.



IMPORTANT

Bump starting the car can damage the catalvtic converter.

Towing

Find out the highest legal speed for towing before towing the car.

- 1. Turn the ignition key to position II and unlock the steering lock so that the car can be steered, see page 136.
- 2. The ignition key must remain in position II while the car is being towed.
- 3. Ensure the towrope is always taut by gently depressing the brake pedal to avoid violent jerks.

WARNING

The steering lock stavs in the position it was in when the power was cut off. The steering lock must be unlocked before towing.

The ignition key must be in position II. Never remove the ignition key from the ignition switch while driving or when the car is being towed.



NOTE

If the car is de-energised then the steering lock must be unlocked using a donor battery before towing can be started.



WARNING

The brake servo and power steering do not work when the engine is switched off. The brake pedal must be pressed about five times harder than normal, and the steering will be considerably heavier than normal.

Manual gearbox

Move gear lever into neutral and release the parking brake.

Automatic gearbox

Move the gear selector to position N and release the parking brake.

IMPORTANT

Note that the car must always be towed with the wheels rolling forward.

Cars with automatic gearbox must not be towed at speeds above 80 km/h or further than 80 km.

2.0D

2.0D with automatic gearbox should not be towed. As the transmission fluid cannot be maintained at the correct operating temperature by the engine-driven circulation pump the risk of damage to the gearbox is great.

However, the car can be towed for a short distance at low speed to move it from a dangerous position - not further than 30 km and not faster than 30 km/h.




IMPORTANT

Towing at temperatures below freezing point is strongly advised against.

06

Towing and recovery

Towing eye

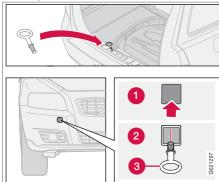

Use the towing eye if the car needs to be towed on the road. The towing eye is attached in the recess on the right-hand side of the front or rear bumper.

Fitting the towing eye

- 1. Take out the towing eye that is located under the floor hatch in the cargo area.
- Release the cover (1) on the bumper by pressing on the marking on the lower edge of the cover.
- 3. Screw in the towing eye (3) firmly, right in up to the flange. Use the wheel wrench to tighten the towing eye.

After use, unscrew the towing eye and return it to its place.

Refit the cover on the bumper.



IMPORTANT

The towing eye is only designed for towing on roads, not for pulling the car unstuck or out of a ditch. Call a recovery service for recovery assistance



NOTE

On certain cars with fitted towbar the towing eye cannot be secured in the rear mounting. In which case, secure the tow rope in the towbar.

For this reason it is advisable to store the towbar's towball in the car, see page 162.

Recovery

 $\label{eq:call-all-covery} \textbf{Call a recovery service for recovery assistance}.$

The car must always be towed with the wheels rolling forward.




IMPORTANT

Cars with automatic gearbox must only be towed with drive wheels raised from the road.



Start assistance

Starting with a donor battery

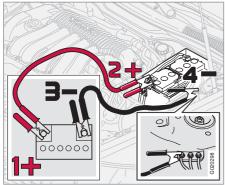

If the battery in the car has become flat, you can "borrow" electric current from either a separate battery or the battery in another car. Always make sure the crocodile clips on the jump leads are attached securely to eliminate sparks during the start attempt.

When jump starting the car, the following steps are recommended to avoid risk of explosion:

- 1. Turn the ignition key to position **0**.
- 2. Ensure that the other battery is 12 volt.
- If the donor battery is in another car, switch off the engine in the other car and ensure that the cars do not touch one another.

- 4. Connect the red jump lead between the positive terminal on the donor battery (1+) and the positive terminal in your car (2+).
- 5. Connect one end of the black jump lead to the donor battery's negative terminal (3-).
- Connect the other end of the black jump lead to the earthing point (4–) by the lefthand strut tower.
- Start the engine of the "donor car". Let the engine run a few minutes at a speed slightly higher than idle 1500 rpm.
- 8. Start the engine of the car with the flat battery.
- Remove the jump leads, first the black and then the red. Make sure that none of the clamps on the black jump lead comes into contact with the battery's positive terminal or the clamp connected to the red jump lead.

1

IMPORTANT

Do not touch the crocodile clips during the start procedure. There is a risk of sparks forming.

MARNING

The battery can generate oxyhydrogen gas, which is highly explosive. One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode.

The battery contains sulphuric acid, which can cause serious burns. If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water.

If acid splashes into the eyes, seek medical attention immediately.

Driving with a trailer

General

The load capacity is affected by extra accessories mounted on the car, such as a towbar, load carriers, space box, the passengers' combined weight etc. as well as the load on the towball. The load capacity of the car is reduced by the number of passengers and their weight.

If the towing bracket is fitted by an authorised Volvo workshop, then the car is delivered with the necessary equipment for driving with a trailer.

- The car's towing bracket must be of an approved type.
- If the towbar is retrofitted, check with your Volvo dealer that the car is fully equipped for driving with a trailer.
- Distribute the load on the trailer so that the weight on the towing bracket follows the specified maximum towball load.
- Increase the tyre pressure to the recommended pressure for a full load. For tyre pressure decal location, see page 176.
- Clean the towing bracket regularly and grease the towball ¹.
- Do not tow a heavy trailer when the car is brand new. Please wait until it has been driven at least 1000 km.

- The brakes are loaded much more than usual on long and steep downhill slopes.
 Downshift to a lower gear and adjust your speed.
- The engine is loaded more heavily than usual when driving with a trailer.
- The engine and gearbox can overheat if the car is driven with a heavy load in hot weather. If the temperature gauge for the engine's cooling system goes into the red zone, stop and let the engine idle for a few minutes. The automatic gearbox responds through a built-in protection system. See the message on the information display. If the car overheats, the air conditioning may be switched off temporarily.
- In the interests of safety, speed should be restricted to 80 km/h, even if the laws of certain countries allow for higher speeds.
- Move the gear selector to park position P
 when parking an automatic car with a
 hitched trailer. Always use the parking
 brake. Block the wheels with chocks when
 parking a car with hitched trailer on a hill.

Trailer weights

Information on permitted trailer weights, see page 260.

$\overline{\mathbb{A}}$

WARNING

Follow the stated recommendations for trailer weights. Otherwise, the car and trailer may be difficult to control in the event of sudden movement and braking.



NOTE

The stated maximum permitted trailer weights are those permitted by Volvo. National vehicle regulations can further limit trailer weights and speeds. Towbars can be certified for higher towing weights than the car can actually tow.

Automatic gearbox, driving with a trailer

Parking on a hill

- 1. Apply the parking brake (handbrake).
- 2. Move the gear selector to parking position **P**

¹ Does not apply to the towball if using a stabiliser hitch.



Driving with a trailer

Starting on a hill

- 1. Move the gear selector to driving position **D**.
- 2. Release the parking brake (handbrake).

Steep inclines

- Select an appropriate manual gear position when climbing steep inclines or at low speeds. This prevents the gearbox from changing up and keeps the gearbox oil cooler.
- Do not use a higher manual gear than the engine can "handle". It is not always economical to drive in high gears.
- Avoid driving with a trailer on inclines of more than 15%.

Diesel 1.6D engine with manual gearbox, driving with a trailer

If the car is driven with a major load in a hot climate, the engine cooling fan can be replaced with one of a greater capacity than the standard model. Check with your nearest Volvo dealer regarding the options for your car.

Towing equipment*

Towbar

If the car is equipped with a detachable towbar, the towball mounting instructions must be followed carefully, see page 164.

WARNING

If the car is fitted with a Volvo detachable towbar:

- Follow the assembly instructions for the towball section carefully.
- The towball section must be locked with the key before setting off.
- Check that the indicator window shows green.

Important checks


• The towball section's towball must be cleaned and greased regularly.



NOTE

If a towball hitch with vibration damper is used, it is not necessary to grease the towball.

Storing the towball section

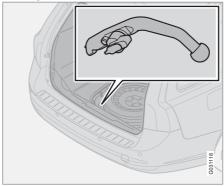


Towball section storage location

1

IMPORTANT

Always remove the towball section after use and store it in the appointed location in the car, firmly fastened with its strap.


Trailer cable

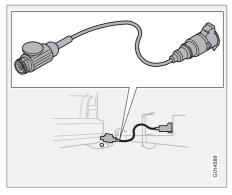



An adapter is required if the car's towing bracket has 13 pin electrics and the trailer has 7 pin electrics. Use an adapter cable approved by Volvo. Make sure the cable does not drag on the ground.

Towing equipment*

Specifications

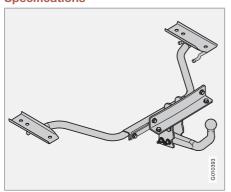

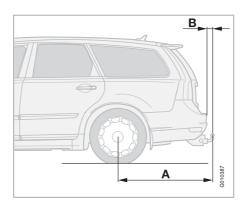

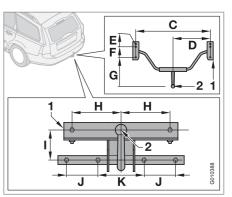


Dimensions for mounting points (mm)


| | A | В | С | D | E | F | G | Н | I | J | K |
|--------------------------------|--------|-------------|-----|-----|----|-----|-----|-----|-----|-----|-----|
| Fixed towbar standard 1 | | 81 | 964 | 482 | 40 | 141 | 542 | 150 | 113 | 100 | 140 |
| Fixed towbar with Nivomat | | 76 | | | | | | | | | |
| Detachable towbar standard | 1115 | 81 | 904 | 402 | 40 | 141 | 342 | 150 | 63 | 100 | 140 |
| Detachable towbar with Nivomat | 1111 | 77 | | | | | | | 03 | | |
| 1 | Side m | Side member | | | | | | | | | |
| 2 Ball centre | | ntre | | | | | | | | | |

Detachable towbar*


Fitting the towball

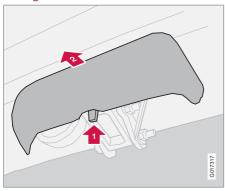

Remove the protective cover by first pressing in the catch and then pulling the cover straight back.

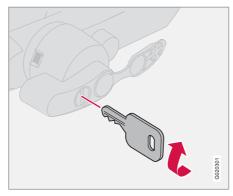


Ensure that the mechanism is in the unlocked position by turning the key clockwise.

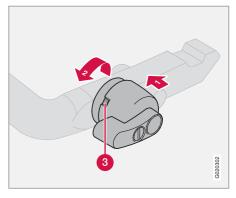


3. Check that the indicator window (3) shows red. If the window does not show red, press in (1) and turn the locking wheel anticlockwise (2) until you hear a click.


Detachable towbar*

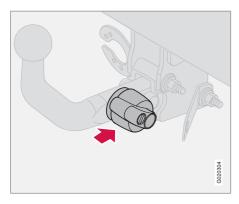

 Insert the towball section until your hear a click.

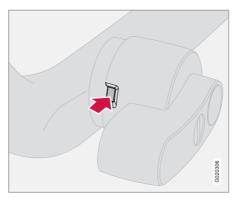


5. Check that the indicator window shows green.

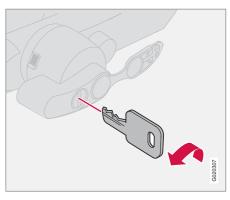

6. Turn the key anticlockwise to locked position. Remove the key from the lock.

Detachable towbar*

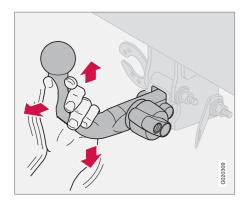


7. Check that the towball section is secure by pulling it up, down and back.

WARNING

If the towball section is not fitted correctly then it must be removed and refitted in accordance with the previous instructions.

IMPORTANT

Only grease in the ball for the towing hitch, the remainder of the towball section should be clean and dry.

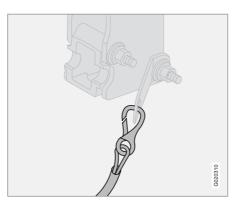


8. Safety cable.

MARNING


Be sure to attach the trailer's safety cable to the correct place.

Removing the towball

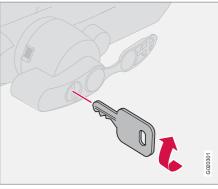


 Insert the key and turn it clockwise to the unlocked position.


Detachable towbar*

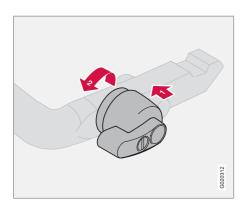

2. Push in the locking wheel (1) and turn it anticlockwise (2) until you hear a click.

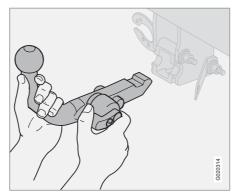

Turn the locking wheel down fully, until it comes to a stop. Hold it in this position while pulling the towball rearward and upward.

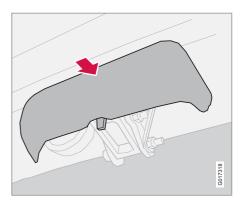

4. Push on the protective cover.



WARNING

Secure the towbar's loose towball safely if it is stored in the car, see page 162.

Loading

General

The load capacity is affected by extra accessories mounted on the car, such as load carriers, space box and towbar, as well as the load on the towball.

The load capacity of the car is reduced by the number of passengers and their weight. For information on permitted weights, see page 260.



WARNING

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

Loading the cargo area

Stop the engine and apply the parking brake when loading or unloading long objects. The gear lever or gear selector can be knocked out of position by long loads, which could set the car in motion.

To increase the size of the cargo area, the head restraints can be removed and the seats folded down, see page 106.

Place the load firmly against the backrest in front.

- The head rests can be removed so that they are not damaged.
- Put wide loads in the centre.
- Heavy objects should be placed as low as possible. Avoid placing heavy loads on a lowered backrest
- Cover sharp edges with something soft to avoid damaging the upholstery or the glass surface of the tailgate.
- Secure all loads to the load retaining eyelets with straps or web lashings.

Λ

WARNING

A loose object weighing 20 kg can, in a frontal collision at a speed of 50 km/h, carry the impact of an item weighing 1000 kg.

Δ

WARNING

Never load cargo above the backrest.

The protection provided by the inflatable curtain in the headlining may be compromised or eliminated by high loads.

Always secure the load. During heavy braking the load may otherwise shift, causing injury to the car's occupants.

Load carriers*

To avoid damaging the car and for maximum possible safety while driving, it is recommended to use load carriers specially designed for your car by Volvo.

Carefully follow the mounting instructions supplied with the carriers.

- Check periodically that the load carriers and load are properly secured. Lash the load securely with retaining straps.
- Distribute the load evenly over the load carriers. Put the heaviest objects at the bottom.
- The size of the area exposed to the wind, and therefore fuel consumption, increase with the load's size.
- Drive gently. Avoid quick acceleration, heavy braking and hard cornering.


WARNING

The car's centre of gravity and driving characteristics are altered by roof loads.



Adjusting headlamp pattern

Correct light pattern for left or righthand traffic

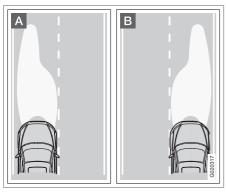


- A Headlamp pattern for left-hand traffic.
- B Headlamp pattern for right-hand traffic.

The headlamp pattern can be adjusted using a control in each headlamp housing to avoid dazzling oncoming motorists.


The correct pattern will also better illuminate the verge.

Halogen headlamps

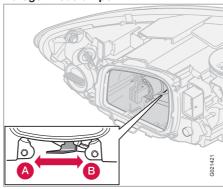

- A Left-hand traffic.
- B Right-hand traffic.

Headlamps with Bi-Xenon® lights

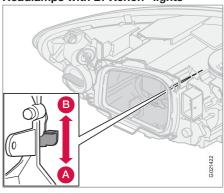

- A Left-hand traffic.
- B Right-hand traffic.



On cars with Bi-Xenon® headlamps, their replacement must be carried out by an authorised Volvo workshop. The headlamps must be handled with extreme care due to the Bi-Xenon® lamp's high-voltage unit.

General.172Tyre pressure.176Warning triangle* and spare wheel.179Changing wheels.181Emergency puncture repair*.183

WHEELS AND TYRES





Driving characteristics and tyres

The tyres greatly affect the car's driving characteristics. The type of tyre, dimensions, tyre pressure and speed rating are important for how the car performs.

When changing tyres, ensure that tyres of the same type and dimensions, and preferably also the same make, are fitted to all four wheels. Follow the recommended tyre pressures specified on the tyre pressure label, see page 176.

Designation of dimensions

The dimensions are stated on all car tyres. Example: 205/55R16 91 W.

| 205 | Section width (mm) |
|-----|---|
| 55 | Ratio between section height and width (%) |
| R | Radial ply |
| 16 | Rim diameter in inches (") |
| 91 | Tyre load index (in this case 615 kg) |
| W | Speed rating for maximum permitted speed (in this case 270 km/h). |

Speed ratings

The car is approved as a whole, which means that dimensions and speed ratings must not differ from those specified on the vehicle registration document. The only exception to these conditions is winter tyres (both those with metal studs and those without). If such a tyre is chosen, the car must not be driven faster than the speed rating of the tyre (for example, class Q can be driven at a maximum of 160 km/h).

Remember that traffic regulations determine how fast a car can be driven, not the speed class of the tyres.

Note! Maximum permitted speeds indicated.

| Q | 160 km/h (used only on winter tyres) |
|---|--------------------------------------|
| Т | 190 km/h |
| Н | 210 km/h |
| V | 240 km/h |
| W | 270 km/h |
| Υ | 300 km/h |

New tyres



Tyres are perishable. After a few years they begin to harden at the same time as the friction capacity/characteristics gradually deteriorate. For this reason, aim to get as fresh tyres as possible when


you replace them. This is especially important with regard to winter tyres. The week and year of manufacture, the tyre's DOT marking (Department of Transportation), are stated with four digits, for example 1502. The tyre in the illustration was manufactured in week 15 of 2002.

Tyre age

All tyres older than six years should be checked by an expert even if they seem undamaged. The reason for this is that tyres age and decompose, even if they are hardly ever or never used. The function can therefore be affected due to the tyre's constituent materials being broken down. In such a case the tyre should then not be used. This also applies to spare tyres, winter tyres and tyres saved for future use. Examples of external signs which indicate that the tyre is unsuitable for use are cracks or discoloration.

The age of the tyre can be determined by the DOT marking, see previous illustration.

More even wear and maintenance

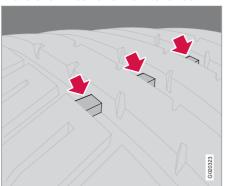

Tread wear indicators.

The correct tyre pressure results in more even wear, see page 176. Driving style, tyre pressure, climate and road condition affect how quickly your tyres age and wear. To avoid differences in tread depth and to prevent wear patterns arising, the front and rear wheels can be switched with each other. A suitable distance for the first change is approx. 5000 km and then at 10000 km intervals. Contact an authorised Volvo workshop if you are uncertain about tread depth.

Wheels should be stored lying down or hanging up, and not standing up.

Tyres with tread wear indicators

Tread wear indicators are narrow treadless bands across the width of the tread. On the side of the tyre are the letters TWI (Tread Wear Indicator). When the tyre's tread depth is down to 1.6 mm, the tread depth will be level in height with the tread wear indicators. Change to new tyres as soon as possible. Remember that tyres with little tread depth provide very poor grip in rain and snow.

Winter tyres

Volvo recommends winter tyres with specific winter tyre dimensions. Tyre dimensions are dependent on engine variant. When driving on winter tyres, they must be fitted to all four wheels.



NOTE

Ask a Volvo dealer which rim and tyre types are most suitable.

Studded tyres

Studded winter tyres should be run in gently for 500 – 1000 km so the studs settle properly into the tyre. This gives the tyre, and especially the studs, a longer service life.



NOTE

The legal provisions for the use of studded tyres vary from country to country.

Tread depth

Road conditions with ice, slush and low temperatures place considerably higher demands on tyres than summer conditions. It is therefore recommended not to drive on winter tyres that have a tread depth of less than 4 mm.

Snow chains

Snow chains may only be used on the front wheels. This also applies to all-wheel-drive cars.


Never drive faster than 50 km/h with snow chains. Avoid driving on bare ground as this wears out both the snow chains and tyres. Never use quick-fit snow chains as the space between the brake discs and the wheels is too small.



IMPORTANT

Use Volvo genuine snow chains or equivalent chains designed for the car model, and tyre and rim dimensions. Consult an authorised Volvo workshop.

Rims and wheel nuts

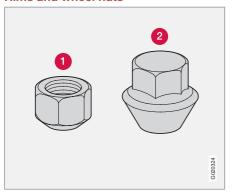

- 1 Standard wheel nuts.
- Bulge acorn wheel nuts.

Only use rims that are tested and approved by Volvo and which are Volvo genuine accessories. There are two types of wheel nut, depending on whether the rims are made of steel or aluminium. Tighten the wheel nuts to 110 Nm. Check the torque with a torque wrench.



IMPORTANT

The wheel nuts should be tightened to 110 Nm. Overtightening can damage the nuts and the bolts.

Steel rims - standard wheel nuts (1)

Steel rims are normally mounted with the standard wheel nuts, but the bulge acorn variety may also be used.

Λ

WARNING

Never use standard nuts for aluminium rims. The wheel could come loose.

Aluminium rims – bulge acorn wheel nuts (2)

Only use the bulge acorn variety of nuts with aluminium rims. These differ markedly from other nut types as they have a rotating conical washer.



NOTE

These nuts may also be used with steel rims.

Locking wheel nuts

Locking wheel nuts can be used on both aluminium and steel rims. If steel rims with locking wheel nuts are used in combination with wheel covers, the locking wheel nut should be mounted on the bolt nearest the air valve. Otherwise the wheel cover cannot be fitted to the rim.

Spare wheel Temporary Spare*

The spare wheel is only intended to be used for the short time it takes to get the normal wheel replaced or repaired. Replace the spare wheel with a normal wheel as soon as possible. The car's handling may be altered by the use of the spare wheel.


Never drive faster than 80 km/h with a spare wheel on the car.



IMPORTANT

The car must never be driven fitted with more than one "Temporary Spare" wheel.

Summer and winter wheels

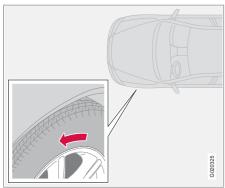

The arrow shows the tyre's direction of rotation.

When summer and winter wheels are changed the wheels should be marked with which side of the car they were mounted on, for example **V** for left and **H** for right. Tyres with a tread pattern which are designed to only turn in one direction have the direction of rotation marked with an arrow.

The tyre must always rotate in the same direction throughout its lifespan. Tyres should only be switched between front and rear positions, never between left and right-hand sides, or vice versa.

If the tyre is mounted incorrectly, the car's braking characteristics and capacity to force


rain, snow and slush out of the way are adversely affected.

Tyres with the greatest tread depth should always be fitted to the rear of the car (to decrease the risk of skidding).

Contact an authorised Volvo workshop if you are uncertain about tread depth.

Tyre pressure

Recommended tyre pressure

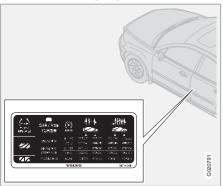

The tyre pressure label on the driver's side door pillar shows which pressures the tyres should have at different load and speed conditions.



NOTE

Full load in the car equates to the number of seats with seatbelts.

Stated on the label:

- Tyre pressure for the car's recommended wheel size
- ECO pressure
- Spare wheel pressure (Temporary Spare).

Checking the tyre pressure

Check the tyre pressure regularly.



NOTE

Tyre pressure decreases over time, this is a natural phenomenon. Tyre pressure also varies depending on ambient temperature.

Even after several kilometres of driving, the tyres warm up and the pressure increases. So air must not be released if the pressure is checked when the tyres are warm. While the pressure must be increased if it is too low.

Inadequately inflated tyres increase fuel consumption, shorten tyre lifespan and impair the car's roadholding. Driving on tyres with tyre pressure that is too low can also result in the tyres overheating and disintegrating.

For information on the correct tyre pressure, refer to the tyre pressure table. The specified tyre pressures refer to "cold tyres". ("Cold tyres" means the tyres are the same temperature as the ambient temperature.)

Fuel economy, ECO pressure

At speeds under 160 km/h, the general tyre pressure for full load is recommended in order to obtain optimum fuel economy.

Tyre pressure affects travelling comfort, road noise and steering characteristics.

07 Wheels and tyres



Tyre pressure

Tyre pressure table

| Variant | Tyre size | Speed | Load, 1 | - 3 persons | Max. load | | |
|----------------------------|--|--------|-----------------------------|-------------|-------------|------------|--|
| | | (km/h) | Front (kPa) ^A | Rear (kPa) | Front (kPa) | Rear (kPa) | |
| 1.6 | 195/65 R15 91V | 0-160 | 210 | 210 | 250 | 250 | |
| 1.8 1.8F 2.0 1.6D | 195/65 R15 91Q/T/H/V M+S 205/55 R16 91V/W 205/55 R16 91Q/T/H/V M+S | 160+ | 250 | 210 | 280 | 260 | |
| | 205/50 R17 93W Extra Load | 0-160 | 220 | 220 | 250 | 250 | |
| | 205/50 R17 93Q/T/H/V M+S Extra Load 215/45 R18 93W Extra Load | 160+ | 260 | 220 | 280 | 260 | |
| 2.4 2.4i 2.0D | 205/55 R16 91 V/W | 0-160 | 210 | 210 | 250 | 250 | |
| | 205/55 R16 91Q/T/H/V M+S | 160+ | 250 | 210 | 280 | 260 | |
| | 205/50 R17 93W Extra Load | 0-160 | 220 | 220 | 250 | 250 | |
| | 205/50 R17 93Q/T/H/V M+S Extra Load 215/45 R18 93W Extra Load | 160+ | 260 | 220 | 280 | 260 | |



07 Wheels and tyres

Tyre pressure


| Variant | Tyre size | Speed | Load, 1 | - 3 persons | Max. load | | |
|--------------------------|--|--------|-----------------------------|-------------|-------------|------------|--|
| | | (km/h) | Front (kPa) ^A | Rear (kPa) | Front (kPa) | Rear (kPa) | |
| T5 | 205/55 R16 91 V/W 205/55 R16 91Q/T/H/V M+S | 0-160 | 210 | 210 | 250 | 250 | |
| | | 160+ | 260 | 210 | 280 | 260 | |
| | 205/50 R17 93W Extra Load | 0-160 | 220 | 220 | 250 | 250 | |
| | 205/50 R17 93Q/T/H/V M+S Extra Load 215/45 R18 93W Extra Load | 160+ | 270 | 220 | 290 | 270 | |
| D5 | 205/55 R16 91 V/W | 0-160 | 230 | 220 | 250 | 250 | |
| | 205/55 R16 91Q/T/H/V M+S 205/50 R17 93W Extra Load 205/50 R17 93Q/T/H/V M+S Extra Load 215/45 R18 93W Extra Load | 160+ | 270 | 220 | 290 | 270 | |
| All | All | 0-160 | 250 ^B | 250 | 250 | 250 | |
| Spare wheel ^C | T125/85R16 99M | 0-80 | 420 | 420 | 420 | 420 | |

A In certain countries there is the "bar" unit beside the SI unit "Pascal": 1 bar = 100 kPa.

B ECO pressure see page 176.
C Temporary Spare.


Warning triangle* and spare wheel

Warning triangle

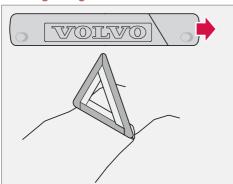

Follow the regulations in force for the use of a warning triangle*. Place the warning triangle in a suitable place with regard to the traffic.

- Undo the case containing the warning triangle, it is secured with Velcro straps. Take the warning triangle from the case.
- 2. Lower the warning triangle's support legs. Ensure the warning triangle and its case are firmly secured in the cargo area after use.

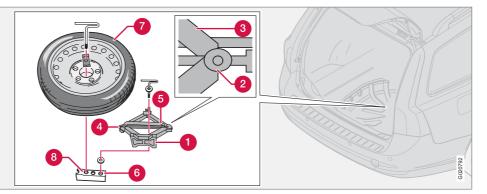

Spare wheel and jack

The car's original jack

The original jack must only be used for changing wheels. The jack's thread should always be well greased. The spare wheel, jack and wheel wrench are found under the floor in the cargo area.


Taking out the spare wheel

- 1. Fold the rear edge of the floor mat forward.
- 2. Release the spare wheel and lift it out.
- 3. Take out the jack and the wheel wrench.

Putting the spare wheel and jack into the cargo area

- Crank the jack (1) to halfway. The marking on the plate (2) should line up with the marking on the arm (3) so that the jack can fit lying down in the holder.
- 2. Fold in the handle (4) and place the wheel wrench (5) on the jack.
- Put the jack (1) back in the hole on the right (6). Fasten the spare wheel (7) in the hole on the left (8).

Tools - returning into place

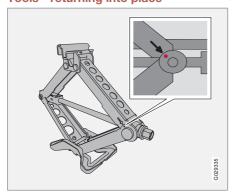

Jack return location for cars with spare wheel.

Tools and jack* must be returned into place in the correct manner after use.

- For cars equipped with spare wheel, the jack must be cranked to the correct position, see the preceding illustration.
- For cars equipped with emergency puncture repair kit, the jack must be fully cranked together and returned into the foam block.

! IMPORTANT

INIPORTANT

Tools and jack must be stored in the intended location in the car's cargo area when not in use.


First aid*

A case with first aid equipment is located in the cargo area.



Changing wheels


Removing wheels

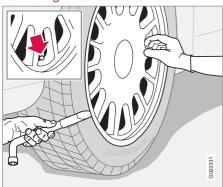


Set up the warning triangle if a wheel must be changed at a busy location. Make sure that the car and jack are on a firm horizontal surface.

Check that the jack is not damaged, that the threads are thoroughly lubricated and that it is free from dirt.

 Take out the spare wheel*, jack* and wheel wrench* that are located under the carpet in the cargo area.

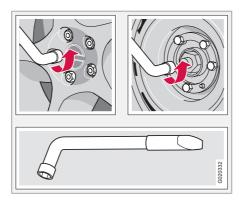

- Apply the parking brake and engage first gear, or position P if the car has an automatic gearbox.
- Place chocks in front of and behind the wheels which will remain on the ground. Use heavy wooden blocks or large stones.
- Cars with steel rims have removable wheel covers. Prize off the wheel cover with the end of the wheel wrench, or pull it off by hand.
- Loosen the wheel nuts ½-1 turn anticlockwise with the wheel wrench.

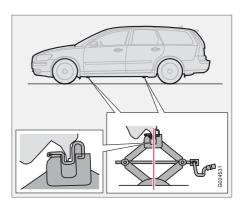

WARNING

Never position anything between the ground and the jack, nor between the jacking point and the jack.

6. There are two jacking points on each side of the car. There is a recess in the plastic cover at each point. Crank the foot of the jack down so it is pressed squarely on the ground. Check that the jack is seated correctly in the intended jacking point, as illustrated, and that the base is located directly under it.



07 Wheels and tyres

Changing wheels

 Lift the car so that the wheel is free.
 Remove the wheel nuts and lift off the wheel.

Fitting the wheel

- Clean the contract surfaces on the wheel and hub.
- 2. Put on the wheel. Tighten the wheel nuts.
- 3. Lower the car so that the wheel cannot rotate.
- Tighten the wheel nuts crosswise. It is important that the wheel nuts are tightened properly. Tighten to 110 Nm. Check the torque with a torque wrench.
- 5. Put on the wheel cover (steel rim).

Λ

WARNING

Never crawl under the car when it is raised on the jack.

Passengers must leave the car when it is raised on the jack.

Ensure that passengers wait with the car - or preferably a crash barrier - between them and the road.

Emergency puncture repair*

Emergency puncture repair, general information

The emergency puncture repair kit is used to seal a puncture as well as to check and adjust the tyre pressure. It consists of a compressor and a bottle with sealing fluid. The kit works as a temporary repair. The sealing fluid bottle must be replaced before its expiration date and after use.

The sealing fluid effectively seals tyres punctured in the tread.



NOTE

The emergency puncture repair kit is only intended for sealing tyres with a puncture in the tread.



NOTE

The jack is an option on cars equipped with emergency puncture repair kit.

The emergency puncture repair kit has limited capacity to seal tyres which have punctures in the wall. Do not seal tyres with the emergency puncture repair kit if they have larger slits, cracks or similar damage.

12V sockets for the compressor are located by the centre console in the front, by the rear seat

and in the cargo area*. Choose the electrical socket that is nearest the punctured tyre.

Λ

WARNING


You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Contact an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Taking out the emergency puncture repair kit

The emergency puncture repair kit with compressor and tools are stored under the floor in the cargo area.

- Fold away the rear edge of the floor mat, forward from the back.
- 2. Lift up the emergency puncture repair kit.


Overview

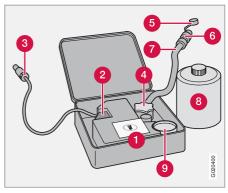

- Decal, maximum permitted speed
- 2 Switch
- Cable
- 4 Bottle holder (orange cap)
- 6 Protective cap
- 6 Pressure reducing valve
- Air hose
- 8 Sealing fluid bottle
- 9 Pressure gauge

Emergency puncture repair*

Sealing punctured tyres

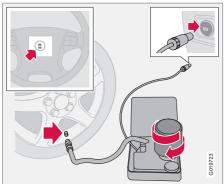

For information on the function of the parts, see preceding illustration.

- Open the lid of the emergency puncture repair kit.
- Detach the decal for maximum permitted speed and affix it to the steering wheel.

M WARNING

The sealing fluid can irritate the skin. In the case of contact with skin, wash away the fluid with soap and water.

3. Check that the switch is in position **0** and locate the cable and the air hose.



i) NOTE

Do not break the bottle seal. The seal is broken when the bottle is screwed in.

4. Unscrew the orange cap and unscrew the bottle's stopper.

\wedge

WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

- 5. Screw the bottle into its holder.
- Unscrew the wheel's dust cap and screw in the air hose valve connection to the bottom of the thread on the tyre's air valve.

\wedge

WARNING

Do not leave children in the car without supervision when the engine is running.

7. Plug the cable into the 12 V socket and start the car.

WARNING

Never stand next to the tyre when the compressor is running. If cracks or unevenness arise then the compressor must be switched off immediately. The journey should not be continued. Contact an authorised tyre centre.



i) NOTE

When the compressor starts, the pressure can increase up to 6 bar but the pressure drops after approximately 30 seconds.

8. Flick the switch to position I.

1

IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

9. Inflate the tyre for 7 minutes.



WARNING

If the pressure is below 1.8 bar then the hole in the tyre is too big. The journey should not be continued. Contact an authorised tyre centre.

 Switch off the compressor to check the pressure on the pressure gauge. Minimum



Emergency puncture repair*

pressure is 1.8 bar and maximum is 3.5 bar.

- 11. Switch off the compressor and unplug the cable from the 12 V socket.
- 12. Detach the hose from the tyre valve and fit the valve cap.
- 13. As soon as possible, drive approximately 3 km at a maximum speed of 80 km/h so that the sealing fluid can seal the tyre.

Rechecking the repair and pressure

- 1. Reconnect the equipment.
- 2. Read the tyre pressure on the pressure gauge.
- If it is below 1.3 bar then the tyre is insufficiently sealed. The journey should not be continued. Contact a tyre centre.
- If the tyre pressure is higher than 1.3 bar, the tyre must be inflated to the pressure specified on the tyre pressure decal. Release air using the pressure reducing valve if the tyre pressure is too high.

M WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

5. Switch off the compressor. Detach the air hose and cable. Refit the dust cap.



NOTE

The sealing fluid bottle and the hose must be replaced after use. Replacement must be performed by an authorised Volvo workshop.

WARNING

Check the tyre pressure regularly.

- Return the emergency puncture repair kit to the cargo area.
- Drive to the nearest authorised Volvo workshop for the replacement/repair of the damaged tyre. Advise the workshop that the tyre contains sealing fluid.

MARNING

You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Contact an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Inflating the tyres

The car's original tyres can be inflated by the compressor.

- The compressor must be switched off.
 Make sure that the switch is in position 0
 and locate the cable and air hose.
- Unscrew the wheel's dust cap and screw in the air hose valve connection to the bottom of the thread on the tyre's air valve.

Inhaling car exhaust fumes could result in danger to life. Never leave the engine running in sealed areas or areas that lack sufficient ventilation.

Do not leave children in the car without supervision when the engine is running.

- Connect the cable to one of the car's 12 V sockets and start the car.
- 4. Start the compressor by flicking the switch to position **I**.

07 Wheels and tyres

Emergency puncture repair*



IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

- Inflate the tyre to the pressure specified on the tyre pressure decal. (Release air using the pressure reducing valve if the tyre pressure is too high.)
- Switch off the compressor. Detach the air hose and cable.
- 7. Refit the dust cap.

Changing the sealing fluid canister

Replace the bottle before the expiration date has passed. Treat the old bottle as environmentally hazardous waste.



WARNING

The bottle contains 1.2-Ethanol and natural rubber-latex.

Harmful if ingested. Could result in allergic reaction in the event of skin contact.


Avoid contact with the skin and eyes.

Store out of the reach of children.



NOTE

Leave the container at a collection point for storing dangerous waste.

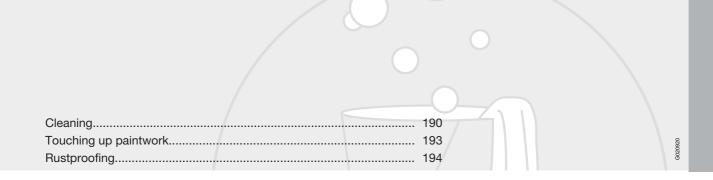

CAR CARE







08 Car care

Cleaning

Washing the car

Wash the car as soon as it becomes dirty. Use car shampoo. Dirt and road salt can lead to corrosion.

- Do not park the car in direct sunlight. Washing a car with hot paintwork can cause permanent paintwork damage. Wash the car in a car wash with waste water separator.
- Thoroughly rinse dirt off the underbody of the car.

1

IMPORTANT

Rinse the entire car to remove loose dirt. When using a pressure washer: Make sure that the nozzle of the pressure washer is not closer than 30 cm to the bodywork. Do not spray directly onto the locks.

- Wash using a sponge, car shampoo and plenty of lukewarm water.
- If the dirt is difficult to dislodge, wash the car using a cold degreasing agent.
- Dry the car using a clean, soft chamois or a water scraper.

\triangle

WARNING

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.



IMPORTANT

Dirty headlamps have impaired functionality. Clean them regularly, when refuelling for example.



NOTE

Outside lighting such as headlamps, fog lamps and rear lamps may temporarily have condensation on the inside of the lens. This is a natural phenomenon, all outside lighting is designed to withstand this. Condensation is normally vented out of the lamp when it has been switched on for a time.

Cleaning the wiper blades

Asphalt, dust and salt residue on wiper blades, as well as insects, ice etc. on the windscreen, impair the service life of wiper blades.



NOTE

Wash the wiper blades and windscreen regularly with lukewarm soap solution or car shampoo.

Do not use any strong solvents.

Removing bird droppings

Wash away bird droppings from the paintwork as soon as possible. Bird droppings contain chemicals that affect and discolour paintwork very quickly. This discoloration can only be removed by a specialist.

Chromed wheels



IMPORTANT

Rim cleaning agents can cause stains on chrome-plated wheels. Wash using a sponge, car shampoo and plenty of lukewarm water.

Automatic car washes

An automatic car wash is a simple and quick way of washing the car, but it can never replace a proper handwashing. The brushes of an automatic car wash cannot reach everywhere.



IMPORTANT

Washing by hand is gentler to the paintwork than an automatic car wash. Paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

Cleaning

Testing the brakes



WARNING

Always test the brakes after washing the car, including the parking brake, to ensure that moisture and corrosion do not attack the brake linings and reduce braking performance.

Lightly depress the brake pedal now and then when driving long distances in rain or slush. This heats and dries the brake pads. Do the same thing after starting in very damp or cold weather.

Exterior plastic, rubber and trim components

A special cleaning agent available from Volvo dealers is recommended for cleaning coloured plastic parts, rubber and trim components (such as glossy trim mouldings). When using such a cleaning agent the instructions must be followed carefully.



IMPORTANT

Avoid waxing and polishing on plastic and rubber.

Polishing glossy trim mouldings could wear away or damage the glossy surface.

Polishing agent that contains abrasive must not be used.

Polishing and waxing

Polish and wax the car if the paintwork is dull or to give the paintwork extra protection.

The car does not need to be polished until it is at least one year old. However, the car can be waxed before this time. Do not polish or wax the car in direct sunlight.

Wash and dry the car thoroughly before you begin polishing or waxing. Clean off asphalt and tar stains using Volvo tar remover or white spirit. More stubborn stains can be removed using fine rubbing paste designed for car paintwork.

Polish first with a polish and then wax with liquid or solid wax. Follow the instructions on the packaging carefully. Many preparations contain both polish and wax.



IMPORTANT

Paint treatment such as preserving, sealing, protection, lustre sealing or similar could damage the paintwork. Paintwork damage caused by such treatment is not covered by Volvo warranty.

Cleaning door mirrors and front door windows with water-repellent coating*

Never use products such as car wax, degreaser or similar on mirror/glass surfaces as this could ruin their water-repellent properties.

Take care when cleaning so as not to damage the glass surface.

To avoid damaging glass surfaces when removing ice – only use plastic ice scrapers.

There is natural wear of the water-repellent coating.



NOTE

Treatment with a special finishing agent available from Volvo dealers is recommended in order to maintain the water-repellent properties. This should be used first after three years and then each year.

Cleaning

Cleaning the interior

Treating stains on fabric upholstery

A special cleaning agent, available from Volvo dealers, is recommended for cleaning the fabric upholstery. Other chemicals can impair the fire retardant qualities of the upholstery.



IMPORTANT

Sharp objects and Velcro may damage the fabric upholstery.

Treating stains on leather upholstery

Volvo leather upholstery is chromium-free and approved in accordance with the Oeko-Tex 100 standard.

The leather is refined and processed so that it retains its natural characteristics. It is given a protective coating, but regular cleaning is required in order to maintain both characteristics and appearance. Volvo offers a comprehensive product for the cleaning and treatment of leather upholstery which, when used in accordance with the instructions, preserves the leather's protective coating.

After a period of use the natural appearance of the leather will nevertheless emerge, depending more or less on the surface texture of the leather. This is a natural maturing of the leather and shows that it is a natural product.

To achieve best results Volvo recommends cleaning and application of the protective cream once to four times per year (or more if required). Ask a Volvo dealer about Volvo's Leather care product.



IMPORTANT

Never use strong solvents. Such products may damage fabric, vinyl and leather upholsterv.



IMPORTANT

Note that materials with colour that runs when dry (new jeans, suede garments etc.) may discolour the upholstery material.

Washing instructions for leather upholsterv

- 1. Pour the leather cleaner on the dampened sponge and squeeze out a strong foam.
- 2. Work the dirt away with gentle circular movements.
- 3. Dab accurately with the sponge on the stains. Allow the sponge to absorb the stain. Do not rub.
- 4. Wipe off with soft paper or a cloth and allow the leather to dry completely.

Protective treatment of leather upholsterv

- 1. Pour a small amount of the protective cream on the felted cloth and massage in a thin layer of cream with gentle circular movements on the leather.
- 2. Allow the leather to dry for 20 minutes before use.

The leather has now been given improved protection against stains and improved UV protection.

Treating stains on interior plastic, metal and wood parts

A special cleaning agent, available from Volvo dealers, is recommended for cleaning interior parts and surfaces. Do not scrape or rub stains. Never use strong stain removers.

Cleaning seatbelts

Use water and a synthetic detergent. A special textile cleaning agent is available from your Volvo dealer. Make sure the seatbelt is dry before allowing it to retract.

Touching up paintwork

Paintwork

Paint is an important part of the car's rustproofing and should therefore be checked regularly. To avoid the onset of rust, damaged paintwork should be rectified immediately. The most common types of paintwork damage are stone chips, scratches, and stains on the edges of wings and doors.


Colour code



Data plate.

It is important that the correct colour is used. The colour code number (1) is shown on the data plate, see page 258.

Stone chips and scratches

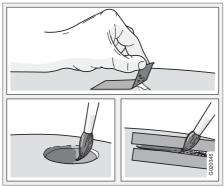

Before touching up paintwork, the car must be clean and dry and at a temperature above 15 °C.

Materials

- Primer in a can
- Paint in a can or touch-up pen
- Brush
- Masking tape.

Minor stone chips and scratches

If the stone chip has not penetrated to the bare metal and there is an undamaged colour coat, you can paint straight after cleaning the damaged area.

If the stone chip has penetrated to the bare metal

- Apply a piece of masking tape over the damaged surface. Then remove the tape to remove any loose paint.
- Stir the primer well and apply using a fine brush or a matchstick. Apply paint using a brush once the primer is dry.
- 3. For scratches, proceed as above, but mask around the damaged area to protect the undamaged paintwork.
- After a few days, polish the touched-up areas. Use a soft rag and a small amount of lapping paste.

08 Car care

Rustproofing

Inspection and maintenance

Your car has already received a thorough and complete rustproofing at the factory. Parts of the body are made of galvanised sheet metal. The underbody is protected by a wear-resistant anti-corrosion compound. A thin, penetrating rustproofing fluid was sprayed into the members, cavities and closed sections.

Maintain the car's rustproofing.

- Keep the car clean. Hose down the underbody. If using a pressure washer, keep the nozzle at least 30 cm from the painted surfaces.
- Regularly check and touch-up the rustproofing treatment as necessary.

The car's rustproofing does not normally require treatment for approximately 12 years. After this period, it should be treated at three-year intervals. If the car needs further treatment, please contact an authorised Volvo workshop.



MAINTENANCE AND SERVICE







Volvo service

Volvo service programme

Before the car left the factory, it was thoroughly test driven. It was checked again in accordance with Volvo Car Corporation regulations before it was handed over to you.

To keep your Volvo as safe and reliable as possible, follow the Volvo service programme specified in the Service and Warranty Booklet. Have an authorised Volvo workshop carry out service and maintenance work. Volvo workshops have the personnel, special tools and service literature to guarantee the highest quality of service.



IMPORTANT

For the Volvo warranty to apply, check and follow the instructions in the Service and Warranty Booklet.

Special service measures

Certain service measures which affect the car's electrical system can only be performed using electronic equipment specially developed for your car. For this reason, always contact an authorised Volvo workshop before beginning or performing service work that affects the electrical system.



Self-maintenance

Before starting work on the car

Battery

Check that the battery cables are correctly connected and tightened.

Never disconnect the battery when the engine is running (e.g. if replacing the battery).

Never use a quick charger to charge the battery. The battery cables must be disconnected when charging the battery.

The battery contains acid that is both corrosive and toxic. It is therefore important to handle the battery in an environmentally correct manner. Let your Volvo dealer assist you.

Λ

WARNING

High output from the ignition system. The voltage in the ignition system is highly dangerous. The ignition must therefore always be switched off for work in the engine compartment.

Do not touch the spark plugs or ignition coils when the ignition is on or the engine is hot.

Check regularly

Check the following at regular intervals, for example, when refuelling:

- Coolant The level must be between the MIN and MAX marks on the expansion tank.
- Engine oil The level must be between the MIN and MAX marks.
- Power steering fluid The level must be between the MIN and MAX marks.
- Washer fluid The reservoir should be well filled. Use washer antifreeze at temperatures around freezing.
- Brake and clutch fluid The level must be between the MIN and MAX marks.

WARNING


Bear in mind that the radiator fan may start automatically some time after the engine has been switched off.

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.



Bonnet and engine compartment


Opening the bonnet

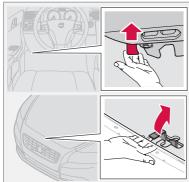

- Pull the handle on the far left under the dashboard. You will hear when the catch releases.
- Insert your hand under the centre of the front edge of the bonnet and press the safety catch to the right.
- 3. Open the bonnet.



Check that the bonnet locks properly when closed.

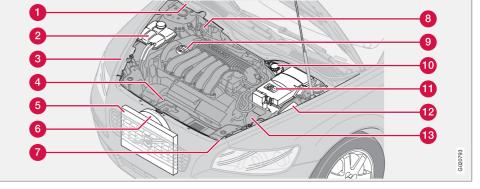


Engine compartment

- 1 Washer fluid reservoir (4-cyl.)
- Coolant expansion tank
- 3 Reservoir for the power steering fluid (concealed behind the headlamp)
- 4 Engine oil dipstick*
- 6 Radiator
- Radiator fan
- Washer fluid reservoir (5-cyl.)
- 8 Brake and clutch fluid reservoir (right-hand drive)

- Filler opening for engine oil*
- Brake and clutch fluid reservoir (left-hand drive)
- Battery
- Relay and fuse box
- (B) Air filter*

Engine compartment decal for oil grade

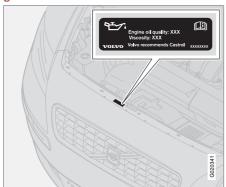


! IMPORTANT


Always use oil of the prescribed grade, see the engine compartment decal. Check the oil level frequently and change the oil regularly. The engine will be damaged if lower grade oil is used or if the car is driven with the oil level too low.

Using oil of a higher than specified grade is permitted. If the car is driven in adverse conditions, Volvo recommends using an oil of a higher grade than that specified on the decal, see page 265.

Checking the engine oil and oil filter

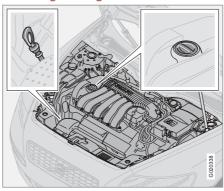

Dipstick, petrol engines.

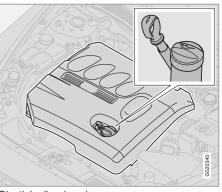

Dipstick, diesel engines.

Volvo recommends Castrol oil products. Change the oil and oil filter in accordance with the intervals specified in the Service and Warranty Booklet.





IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil (see the engine compartment decal) for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.


Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Volvo uses different systems for warning of low oil level or low oil pressure. Certain variants have an oil pressure sensor, and then the lamp for oil pressure is used. Other variants have an oil level sensor, and then the driver is informed via the warning symbol in the centre of the instrument unit as well as by display texts. Certain models have both of the variants. Contact an authorised Volvo dealer for more information.

Checking the oil level in a new car is especially important before the first scheduled oil change. The Service and Warranty Booklet specifies the odometer readings for oil changes.

Volvo recommends checking the oil level every 2 500 km. The most accurate measurements are made on a cold engine before starting. The measurement will be inaccurate if taken immediately after the engine is switched off. The dipstick will indicate that the level is too low because the oil has not had time to flow down into the oil sump.

Checking the oil

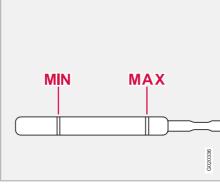

The oil level must be within the area marked on the dipstick.

Checking the oil in a cold engine

- 1. Wipe the dipstick clean before checking the level.
- Check the oil level using the dipstick. The level must be between the MIN and MAX marks.
- If the level is close to the MIN mark, start by topping up with 0.5 litres. Top up until the oil level is nearer the MAX than the MIN mark on the dipstick, see page 265 for capacities.

Checking the oil in a warm engine

- Park the car on a level surface, switch off the engine and wait 10 – 15 minutes to allow the oil time to run back to the sump.
- Wipe the dipstick clean before checking the level.
- Check the oil level using the dipstick. The level must be between the MIN and MAX marks.

If the level is close to the **MIN** mark, start by topping up with 0.5 litres. Top up until the oil level is nearer the **MAX** than the **MIN** mark on the dipstick, see page 265 for capacities.





WARNING


Do not spill oil onto the hot exhaust manifold due to the risk of fire.



IMPORTANT

Never fill above the **MAX** mark. Oil consumption may increase if too much oil is poured into the engine.

Washer fluid, topping up

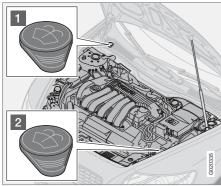

Location of washer fluid reservoir 1.

The windscreen and headlamp washers share a common reservoir.

For capacities, see the table Fluids on page 269.

- Filler cap on 4-cylinder engines and diesel.
- 2 Filler cap on 5-cylinder engines.

Add washer antifreeze during the winter so that the fluid does not freeze in the pump, reservoir and hoses.




NOTE

Mix the washer antifreeze and water before filling the reservoir.

TIP! Clean the wiper blades when topping up washer fluid.

Checking and topping up the coolant

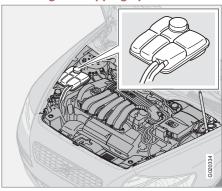

When topping up the coolant, follow the instructions on the packaging. It is important that the mixture of coolant concentrate and water is correct for the prevailing weather conditions. Never top up with water only. The risk of freezing increases with both too little and too much coolant concentrate.

¹ Depending on engine alternative.

09

Oils and fluids



IMPORTANT

- A high content of chlorine, chlorides and other salts may cause corrosion in the cooling system.
- Always use coolant with anti-corrosion agent as recommended by Volvo.
- Ensure that the coolant mixture is 50% water and 50% coolant.
- Mix the coolant with approved quality tap water. In the event of any doubt about water quality, used ready-mixed coolant in accordance with Volvo recommendations.
- When changing coolant/replacing cooling system components, flush the cooling system clean with approved quality tap water or flush with ready-mixed coolant.
- The engine must only be run with a wellfilled cooling system. High temperatures can occur, causing a risk of damage (cracks) to the cylinder head.

For capacities and for standards regarding water quality, see page 269.

Check the coolant regularly

The level must lie between the MIN and MAX marks on the expansion tank. If the system is not filled sufficiently, high local temperatures could occur, causing a risk of damage (cracks) to the cylinder head. Top up the coolant when the level falls to the MIN mark.



WARNING


Coolant can be very hot. If the coolant requires topping up when the engine is at operating temperature, unscrew the expansion tank cap slowly to gently release the overpressure.



NOTE

The engine must only be run with a wellfilled cooling system. High temperatures can occur, causing a risk of damage (cracks) to the cylinder head.

Checking and topping up the brake and clutch fluid

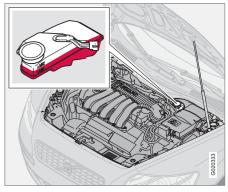

Brake and clutch fluid have a common reservoir 2. The fluid level must be between the MIN and MAX marks. Check the level regularly. Change the brake fluid every other year or at every other regular service.

For capacities and recommended fluid grade. see the table Fluids on page 269.

The fluid should be changed annually on cars driven in conditions requiring hard, frequent braking, such as driving in mountains or tropical climates with high humidity.

² Location dependent on whether car is left or right-hand drive.





WARNING

If the brake fluid is under the MIN level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The reason for the loss of brake fluid must be investigated.

Checking and topping up the power steering fluid



i NOTE

Check the level frequently.


The fluid does not require changing. For capacities and recommended fluid grade, see page 265.

If a fault should arise in the power steering system or if the car is without power and must be towed, it can still be steered. However, the steering will be much heavier than normal and it will require more effort to turn the steering wheel.



Wiper blades

Wiper blades

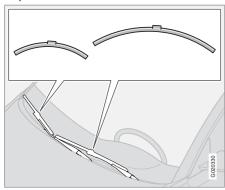



The wiper blades are different lengths. The blade on the driver's side is longer than on the other side.


Cleaning

For cleaning wiper blades and windscreen, see page 190.




Check the wiper blades regularly. Neglected maintenance shortens the service life of the wiper blades.

Replacing the wiper blades, windscreen

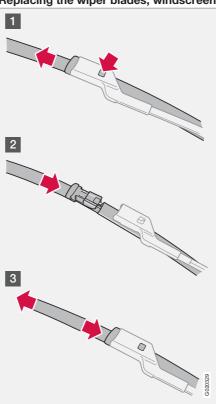

- 1. Turn up the wiper arm.
- Press the button located on the wiper blade mounting and pull straight out (1), parallel with the wiper arm.
- 3. Slide in (2) the new wiper blade until a "click" is heard.
- 4. Check (3) that the blade is firmly installed.
- 5. Fold down the wiper arm.

Changing the rear window wiper blade

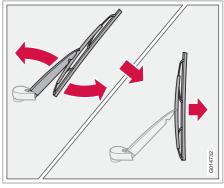

- 1. Fold out the wiper arm.
- 2. Detach the wiper blade by pulling it towards the rear window.

- Wiper blades
- 3. Press the new wiper blade into position. Check that it is firmly installed.
- 4. Lower the wiper arm.



Battery

Battery care

The service life and function of the battery is influenced by factors such as the number of starts, discharging, driving style, driving conditions and climatic conditions.



NOTE

An expended battery must be recycled in an environmentally correct manner as it contains lead.



WARNING

Batteries can generate oxyhydrogen gas, which is highly explosive. One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode. The battery contains sulphuric acid, which can cause serious burns. If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water. If acid splashes into the eyes, seek medical attention immediately.



NOTE

The life of the battery is shortened if it becomes discharged repeatedly.

Symbols on the battery



Use protective goggles.



Further information in the Owner's Manual.



Store the battery out of the reach of children.



The battery contains corrosive acid.



Avoid sparks and naked flames.



Risk of explosion.

Changing the battery

Removing the battery

- 1. Switch off the ignition and remove the key.
- Wait at least 5 minutes before touching any electrical terminals. The car's electrical system has to store information in the control modules.
- 3. Remove the cover.
- 4. Disconnect the negative battery lead.
- 5. Disconnect the positive battery lead.
- Undo the front wall of the battery box using a screwdriver.
- 7. Release the clamp securing the battery.
- 8. Remove the battery.



Battery

Fitting the battery

- 1. Fit the battery into position.
- 2. Fit the clamp securing the battery.
- 3. Reinstall the front wall of the battery box.
- 4. Connect the positive lead.
- 5. Connect the negative lead.
- 6. Refit the cover over the battery.



General

All bulb specifications are given on page 277.

The following list contains bulbs and pointsource lamps that are specialised or unsuitable for changing except at a workshop:

- General interior lighting in the roof
- Reading lamps and glovebox lighting
- Direction indicators, door mirror and approach lighting
- Brake light
- Bi-Xenon[®] headlamp

\wedge

WARNING


On cars with Bi-Xenon® headlamps, the replacement of the Bi-Xenon® lamp must be carried out by an authorised Volvo workshop. The headlamps must be handled with extreme care due to the Bi-Xenon® lamp's high-voltage unit.



IMPORTANT

Never touch the glass part of the bulbs with your fingers. Grease and oil from your fingers are vaporised by the heat, coating the reflector and then causing damage.

Changing front bulbs

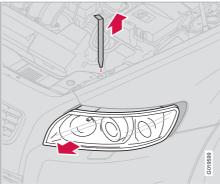

All front bulbs (except for fog lamps) are changed by first removing the lamp housing from the engine compartment.

Removing the lamp housing


- 1. Remove the ignition key and turn the light switch to position **0**.
- 2. Withdraw the lamp housing's locking pin.



IMPORTANT

Do not pull the electrical cable, only the connector.

- Pull the lamp housing to the side and then forward.
- Unplug the connector by pressing down the clip with a thumb while moving out the connector with the other hand.

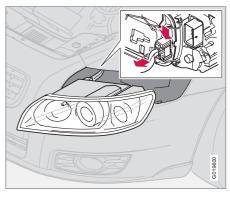

Lift out the lamp housing and place it on a soft surface to avoid scratching the lens.

Fitting the lamp housing


- Plug in the connector and refit the lamp housing and locking pin. Check that the pin is correctly inserted.
- 2. Check the lighting.

The lamp housing must be plugged in and secured in place before the lighting is turned




on or the ignition key inserted into the ignition switch.

Dipped beam

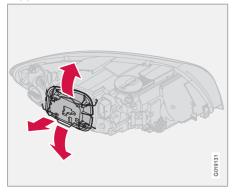

Removing the cover and bulb:


- 1. Undo the whole lamp housing, see page 210.
- Bend aside the catches and remove the cover.
- 3. Unplug the connector from the bulb.
- Release the spring clip securing the bulb. Press it in/down.
- 5. Pull out the bulb.

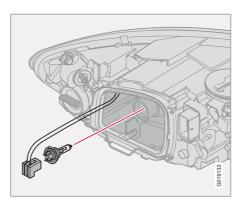

Fitting a new bulb

- Fit the new bulb. It can only fit in one position.
- 2. Press the spring clip in/up and then slightly to the right in order to snap it into position.
- 3. Press the connector back on.
- 4. Refit the plastic cover.
- 5. Refit the lamp housing, see page 210.

Main beam, halogen

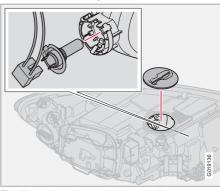

The illustration shows a halogen bulb.

- 1. Undo the whole lamp housing, see page 210.
- 2. Undo the cover, located above the lamp housing, by turning it anticlockwise.



NOTE

If the car has ABL or GDL bulbs then the main beam bulb has another socket. In which case, pull the bulb straight out.

 Left-hand headlamp: turn the bulb holder anticlockwise.




Right-hand headlamp:

turn the bulb holder clockwise.

- Withdraw the bulb holder and change the bulb.
- 5. Refit the bulb holder. It can only be refitted in one position.
- 6. Refit the cover, located above the lamp housing, by turning it clockwise.
- 7. Refit the lamp housing, see page 210.

Position/parking lamps

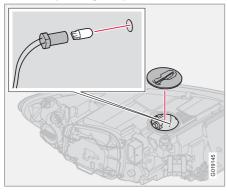

1. Undo the lamp housing, see page 210.


- 2. Undo the cover, located above the lamp housing, by turning it anticlockwise.
- Withdraw the bulb holder and change the bulb.
- Press the bulb holder back on. A "click" is heard when the bulb holder is fitted correctly.
- 5. Refit the cover, located above the lamp housing, by turning it clockwise.
- 6. Refit the lamp housing, see page 210.



NOTE

A lamp equipped with the Active Bi Xenon® Light (option) has a position lamp (LED) that cannot be replaced.


Direction indicators

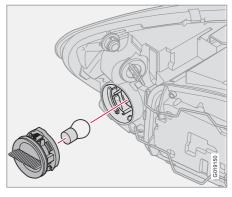

- 1. Undo the lamp housing, see page 210.
- 2. Twist the bulb holder anticlockwise and remove it.
- 3. To remove the bulb from the bulb holder, press the bulb in and turn it anticlockwise.
- 4. Fit a new bulb and refit the bulb holder into the lamp housing.
- 5. Refit the lamp housing, see page 210.




Side marker lamps

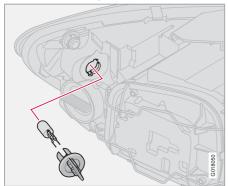

- 1. Undo the lamp housing, see page 210.
- Twist the bulb holder anticlockwise and withdraw it. Replace the bulb.
- 3. Refit the bulb holder. It can only fit in one position.
- 4. Refit the lamp housing, see page 210.


Fog lamps

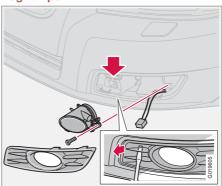

- 1. Switch off all lights and turn the ignition key to position **0**.
- Undo the cover by inserting a screwdriver as illustrated (vertically) and continue to press vertically in order to undo the clip inside the cover.
- 3. Grip the edge of the cover and pull straight out.
- 4. Unscrew the lamp housing screw and remove it.
- 5. Turn the bulb anticlockwise and remove it.

- 6. Fit a new bulb by turning clockwise. (The profile of the bulb holder corresponds to the profile of the foot of the bulb.)
- 7. Refit the bulb holder. The **TOP** mark on the bulb holder must always be upward.

Removing the bulb holder

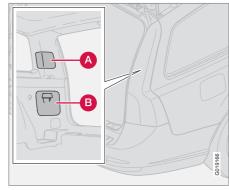

All bulbs in the rear lamp cluster are replaced from inside the cargo area.

- 1. Switch off all lights and turn the ignition key to position **0**.
- Remove the cover (A or B) in the left/righthand panel to access the bulbs.




- 3. These bulbs are located in separate bulb holders.
- Unplug the connector from the bulb holder.
- 5. Squeeze together the catches and remove the bulb holder.
- Replace the bulb.
- Plug in the connector.
- 8. Press the bulb holder into place and refit the cover (A or B).



NOTE

If the error message BULB FAILURE/ **CHECK STOP LAMP** remains after a faulty bulb has been replaced then consult an authorised Volvo workshop.

Location of the bulbs in the rear light cluster

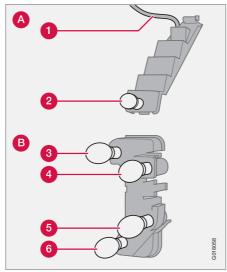

Bulb holder.




IMPORTANT

The cable for the brake light's LED lamps is moulded into the upper bulb holder. It shall not be removed.

- Brake light (LED)
- Position lamps
- Rosition/parking lamps
- Direction indicators
- 6 Reversing lamp
- Rear fog lamp (one side)

Number plate lighting

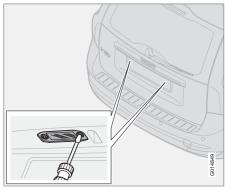


- 1. Switch off all lights and turn the ignition key to position 0.
- Remove the screws with a screwdriver.
- 3. Detach the lens carefully.



- Replace the bulb.
- Refit and screw in the lens.


Courtesy lighting

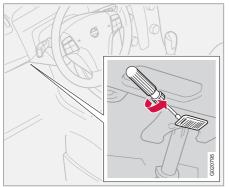

There is courtesy lighting under the dashboard on the driver and passenger sides.


- Insert a screwdriver and gently turn so that the lens detaches.
- 2. Remove the blown bulb.
- 3. Fit a new bulb.
- 4. Refit the lens.

Cargo area

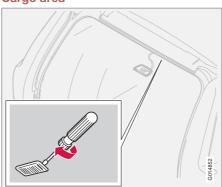

- 1. Insert a screwdriver and gently turn so that the lamp housing comes loose.
- 2. Remove the blown bulb.
- 3. Fit a new bulb.

Vanity mirror lighting*

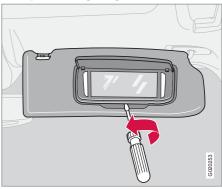

Removing the mirror glass

- Insert a screwdriver underneath the lower edge, in the centre. Carefully prize up the lug on the edge.
- Insert the screwdriver under the edge on both the left and right side (at the black rubber points) and carefully prize so that the lens releases at the lower edge.
- 3. Carefully detach and lift aside the entire mirror glass and cover.
- 4. Remove the blown bulb and replace it with a new one.



09

09 Maintenance and service

Replacing bulbs

Fitting the mirror glass

- 1. First, press the three lugs at top edge of mirror glass back into position.
- 2. Then press the three lower lugs back into position.



General

All electrical functions and components are fused to protect the car's electrical system from damage by short circuiting and overloading.

The fuses are in two different locations in the car:

- Relay/Fuse box in the engine compartment
- Relay/Fuse box in the passenger compartment.

Changing

If an electrical component or function does not work, it may be because the component's fuse was temporarily overloaded and blew.

- 1. Look in the fuse diagram to locate the fuse.
- 2. Pull out the fuse and check from the side to see whether the curved wire has blown.
- 3. If this is the case, replace it with a new fuse of the same colour and amperage.

Each fuse box has space for several spare fuses. If the same fuse fails repeatedly then there is a fault in the component. In which case, contact an authorised Volvo workshop to have the system checked.

\wedge


WARNING

Never use a foreign object, or a fuse with an amperage higher than that specified when replacing a fuse. This could cause significant damage to the electrical system and possibly lead to fire.

09

Fuses


Relay/fuse box in the engine compartment

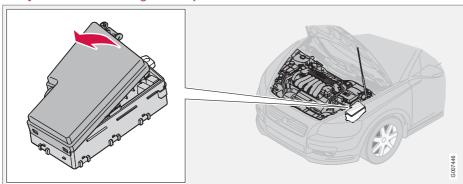

The fuse box has 36 fuse positions. Be sure to replace a blown fuse with a new fuse of the same colour and amperage.

- 19 36 are of the "Mini Fuse" type.
- Fuses 7 18 are of the "JCASE" type and should be replaced by an authorised Volvo workshop.
- 1 6 are of the "Midi Fuse" type and may only be replaced by an authorised Volvo workshop.

On the inside of the cover are tweezers to assist removing and fitting fuses.

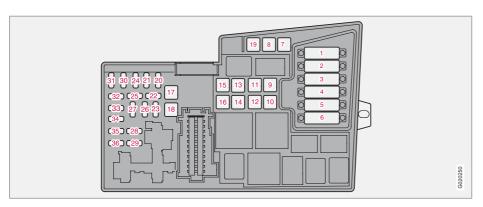

| 1. | Radiator fan 50 | |
|----|---|------|
| 2. | Power steering (excl. 1.6 litre engine) | 80 A |
| 3. | Supply to passenger compartment fuse box | 60 A |
| 4. | Supply to passenger compartment fuse box | 60 A |
| 5. | Climate control element, additional heater PTC* | 80 A |
| 6. | Glow plugs (4-cyl. diesel) | 60 A |
| | Glow plugs (5-cyl. diesel) | 70 A |

| 7. | ABS pump 30 | |
|-----|------------------------------|------|
| 8. | ABS valves | 20 A |
| 9. | Engine functions | 30 A |
| 10. | Ventilation fan | 40 A |
| 11. | Headlamp washers | 20 A |
| 12. | Supply to heated rear window | 30 A |
| 13. | Starter motor relay | 30 A |
| 14. | Trailer wiring* | 40 A |
| 15. | Reserve - | |

| 16. | Supply to infotainment system | 30 A |
|-----|---|------|
| 17. | Windscreen wipers | 30 A |
| 18. | Supply to passenger compartment fuse box | 40 A |
| 19. | Reserve | - |
| 20. | Horn | 15 A |
| 21. | Fuel-driven additional heater, passenger compartment heater | 20 A |
| 22. | Reserve | - |



09 Maintenance and service


Fuses

09

| Engine control module ECM (5-cyl. petrol) transmission (TCM) | 10 A |
|---|---|
| Transmission (TCM) (4-cyl.diesel aut.) | 15 A |
| Heated fuel filter, PTC element oil trap (5-cyl. diesel) | 20 A |
| Reserve | - |
| Ignition switch | 15 A |
| A/C compressor | 10 A |
| Reserve | - |
| Fog lamp, front | 15 A |
| Engine control module ECM (1.6 I petrol, 2.0 I diesel) | 3 A |
| Voltage regulator, alternator 4-cyl. | 10 A |
| Injectors (5-cyl. petrol), lambda-sond (4-cyl. petrol), charge air cooler (4-cyl. die- sel), mass air flow sensor and turbo control (5-cyl. diesel) | 10 A |
| | (5-cyl. petrol) transmission (TCM) Transmission (TCM) (4-cyl.diesel aut.) Heated fuel filter, PTC element oil trap (5-cyl. diesel) Reserve Ignition switch A/C compressor Reserve Fog lamp, front Engine control module ECM (1.6 l petrol, 2.0 l diesel) Voltage regulator, alternator 4-cyl. Injectors (5-cyl. petrol), lambda-sond (4-cyl. petrol), charge air cooler (4-cyl. diesel), mass air flow sensor and |

| 33. | Lambda-sond and vacuum pump (5-cyl. petrol), engine control module (5-cyl. diesel), diesel filter heater (4-cyl. die- sel) | 20 A |
|-----|--|------|
| 34. | Ignition coils (petrol), injectors (1.6 l petrol), fuel pump (4-cyl. diesel), pressure switch, cli- mate control (5-cyl.), glow plugs and EGR emission con- trol (5-cyl. diesel) | 10 A |
| 35. | Engine sensors for valves, relay coil, air conditioning PTC element, oil trap (5-cyl. petrol), engine control module ECM (5-cyl. diesel), canister (petrol), injectors (1.8/2.0 l petrol), MAF mass air flow sensor (5-cyl. petrol, 4-cyl. diesel), turbo control (4-cyl. diesel), pressure switch power steering (1.6 l petrol), EGR emission control (4-cyl. diesel) | 15 A |
| 36. | Engine control module ECM (not 5-cyl. diesel), accelerator pedal position sensor, lambda-sond (5-cyl. diesel) | 10 A |

Relay/Fuse box in the passenger compartment

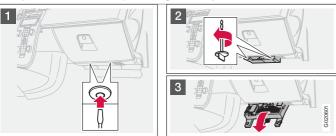


The fuse box has 50 fuse positions. The fuses are located under the glovebox. The box also provides space for several spare fuses. Tools for fuse replacement are located in the relay/fuse box in the engine compartment, see page 218.

Replacing fuses:

- Remove the trim concealing the fuse box by pressing in the pin in the centre of the clips (1) about one cm and then withdrawing the clips.
- Turn the two wing screws (that secure the fuse box) (2) anticlockwise and remove them.
- 3. Lower the fuse box (3) half way. Pull it towards the seat until it stops. Lower it

completely. The fuse box can be fully unhooked.

- 4. Close the fuse box in the reverse order.
- Remove the pins from the centre of the clips. Fit the trim and the clips. Reinsert the pins into the clips. This expands the clips and secures the trim.

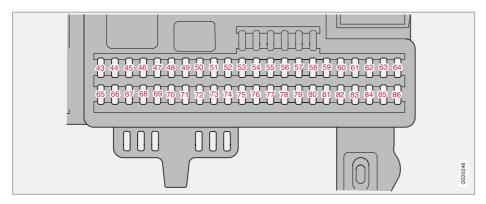

| 43. | Phone, audio system, RTI (option) | 15 A |
|-----|---|------|
| 44. | SRS system, engine control module ECM (5-cyl.) | 10 A |
| 45. | Electrical socket | 15 A |
| 46. | Passenger compart- ment, glovebox and courtesy lighting | 5 A |
| 47. | Interior lighting | 5 A |
| 48. | Washer, rear window | 15 A |
| 49. | SRS system | 10 A |

| Reserve | - |
|---|--|
| Additional heater for the passenger compartment, AWD, fuel filter relay, heating | 10 A |
| Transmission control module (TCM), ABS sys- tem, immobiliser relay (4- cyl. diesel aut.) | 5 A |
| Power steering | 10 A |
| Parking assistance, Bi- Xenon®* | 10 A |
| | Additional heater for the passenger compartment, AWD, fuel filter relay, heating Transmission control module (TCM), ABS system, immobiliser relay (4-cyl. diesel aut.) Power steering Parking assistance, Bi- |

| 55. | Keyless control module | 20 A |
|-----|---|-------|
| 56. | Remote control module, siren control module | 10 A |
| 57. | Data link connector (DLC), brake light switch | 15 A |
| 58. | Main beam (right), auxiliary lamps relay coil | 7,5 A |
| 59. | Main beam, left | 7,5 A |
| 60. | Seat heating (driver's side) | 15 A |
| 61. | Seat heating (passenger side) | 15 A |



| 62. | Sunroof | 20 A |
|-----|--|------|
| 63. | Supply to rear right door | 20 A |
| 64. | RTI* | 5 A |
| 65. | Infotainment system | 5 A |
| 66. | Infotainment control module (ICM), climate control | 10 A |
| 67. | Reserve | - |
| 68. | Cruise control | 5 A |
| 69. | Climate control, rain sensor, BLIS button | 5 A |
| 70. | Reserve | - |
| 71. | Reserve | - |
| 72. | Reserve | - |
| 73. | Sunroof, overhead con- sole for interior lighting (OHC), rear seatbelt reminder, autodim mirror | 5 A |
| 74. | Fuel pump relay | 15 A |
| 75. | Reserve | - |
| 76. | Reserve | - |

| 77. | Electrical socket cargo area, control module, accessories (AEM) | 15 A |
|-----|---|------|
| 78. | Reserve | - |
| 79. | Reversing lamp | 5 A |
| 80. | Reserve | - |
| 81. | Supply to rear left door | 20 A |
| 82. | Supply to front right door | 25 A |
| 83. | Supply to front left door | 25 A |
| 84. | Power passenger seat | 25 A |
| 85. | Power driver's seat | 25 A |
| 86. | Interior lighting, cargo area lighting, power seats, fuel level display (1.8F) | 5 A |

INFOTAINMENT SYSTEM








General

Infotainment system

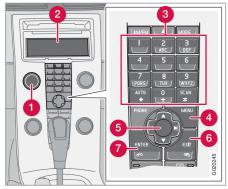

- 1 POWER button
- ② Display
- Keypad
- 4 MENU Menu system
- 6 Navigation buttons
- 6 EXIT Exits the menu system
- **ENTER** Selects/activates/deactivates

Infotainment is a system that integrates the audio system and phone*. The infotainment system can be easily operated using the con-

trol panel or the steering wheel keypad*, see page 64. The display (2) shows messages and information on the current function.

Audio system

On/Off

POWER (1) starts/switches off the audio system. If the audio system is active when the ignition key is turned to position **0** then it continues to be active until the key is removed from the ignition switch. The audio system is started automatically the next time the key is turned to position **I**.

Menus

Some infotainment system functions are controlled via a menu system. The current menu level is shown at the top right of the display. Menu options are shown in the middle of the display.

- MENU (4) leads to the menu system.
- Up/down with the navigation button (5) moves between menu options.
- ENTER (7) selects/activates/deactivates one of the menu options.

 EXIT (6) leads back one step in the menu structure. A long press on EXIT will exit the menu system.

Shortcuts

Menu options are numbered and can also be selected directly with the keypad (3).

Equipment

The audio system can be equipped with different options and different versions. There are three audio system versions:

- Performance
- High Performance
- Premuim Sound

FM and AM radio with RDS and CD player is however included in each version.

Dolby Surround Pro Logic II 1

Dolby Surround Pro Logic II distributes the two stereo audio channels to left, centre, right and rear speakers. This provides a more realistic sound quality than that provided by standard two-channel stereo.



Dolby Surround Pro Logic II and the Dolby icon are trademarks of Dolby Laboratories Licensing Corporation.

¹ Premium Sound

General

Dolby Surround Pro Logic II System is manufactured under license from Dolby Laboratories Licensing Corporation.


10

10

10 Infotainment system

Audio functions

Audio controls

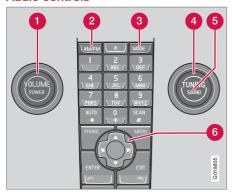

- 1 VOLUME Knob
- 2 AM/FM Audio source selection
- **3 MODE** Audio source selection, CD/AUX
- 4 TUNING Knob
- 6 SOUND Button
- 6 Navigation button Tuning and menus

Volume

Use **VOLUME** (1) or the steering wheel keypad to regulate the volume, see page 64. Audio vol-

ume adjusts automatically depending on vehicle speed, see page 231.


Audio source selection

Repeatedly pressing **AM/FM** switches between **FM1**, **FM2** and **AM**.

Repeatedly pressing **MODE** switches between **CD** and **AUX**.

AUX 1

The AUX input in the tunnel console can be used for connecting an MP3 player for example. A standard cable to an iPod or other MP3 player has space between the cover and edge of the storage compartment.

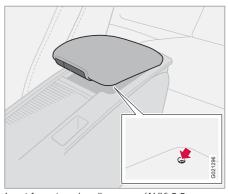

Input for external audio source (AUX) 3.5 mm.



NOTE

The sound quality may be impaired if the player is charged while the audio system is in AUX mode, so avoid charging the player.


Sometimes the AUX external audio source can be heard at a different volume to the internal audio sources, e.g. the CD player. If the audio volume of the external audio source is too high then the sound quality can be impaired. Prevent this by adjusting the input volume of the AUX input.

¹ Not available for the Performance audio system if Bluetooth is installed.

Audio functions

- Set the audio system in AUX mode using MODE.
- Press MENU and then ENTER.
- Scroll to AUX input Volume and press ENTER.
- Turn TUNING or press right/left on the navigation button.

USB/iPod connection 2

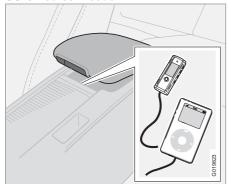

An iPod or MP3 player can be connected to the car's infotainment system via the USB contact in the centre console.

It is possible to connect an iPod, other MP3 player or a USB memory for example to the

car's infotainment system via the contact in the centre console.

The audio source needs to be selected depending on what is connected:

- Select iPod or USB with MODE. The text Connect Device appears on the display.
- Plug the storage media into the connector in the centre console's storage compartment (see preceding illustration).

The text **Loading** appears on the display when the system loads the files on the storage media. This takes a while.

When the loading is finished the track information is shown on the display and it is possible to select the track required.

Track selection can take place in two ways:

- Select TUNING (4) clockwise or anticlockwise
- or use the navigation control's (6) right or left-hand button to scroll to the required track.

If the car is equipped with a steering wheel keypad then it is also possible to change tracks using these controls.



NOTE

The system supports the playback of music files in the most common variants of the MP3, WMA and WAV file formats. There are also variants of these audio formats that are not supported by the system.

USB memory

To facilitate the use of USB memory, avoid storing any files other than music files in the memory. It takes considerably longer for the system to load storage media that contains items other than compatible music files.

MP3 player

Many MP3 players have their own file systems that are not supported by the audio system. For use in the system, an MP3 player must be set in USB Removable device/Mass Storage Device mode.

iPod player

The iPod player is charged and powered by the system via the connecting cable. However, if the iPod's battery is completely discharged then it must be charged before the iPod player is connected.

² Certain audio systems.



Audio functions



NOTE

When an iPod is used as an audio source. the car's infotainment system has a menu structure similar to the menu structure of the iPod player. See the iPod manual for detailed information.

For further information, see the accessory manual for USB/iPod Music Interface.

Audio settings

Adjusting audio settings

Press **SOUND** repeatedly to browse among the following options. Adjust by turning TUNING.

- BASS Bass level.
- TREBLE Treble level.
- FADER Balance between the front and rear speakers.
- BALANCE Balance between the left and right-hand speakers.
- SUBWOOFER* Bass speaker level. Subwoofer must be activated before adjustment is possible, see under the heading

- Activating/deactivating the subwoofer below.
- CENTRE 3 Level for centre speaker. Three channel stereo or Pro Logic II must be activated before adjustment is possible, see under the heading Activating/deactivating surround sound below.
- SURROUND3 Level for surround, Pro Logic II must be activated before adjustment is possible, see under the heading Audio settings below.

Activating/deactivating the subwoofer

- Press MENU and then ENTER.
- Scroll to **AUDIO SETTINGS** and press ENTER.
- Scroll to Subwoofer and press ENTER.

Surround³



Surround settings govern the spatial perception of the sound. Settings and activating/deactivating are separate for each audio source.

The Dolby icon in the display indicates that Dolby Pro Logic II is active. There are three different settings for surround sound:

- Pro Logic II
- 3 channel
- Off 2 channel stereo.

Activating/deactivating surround sound

- 1. Press MENU and then ENTER.
- 2. Scroll to AUDIO SETTINGS and press ENTER.
- Scroll to Surround FM/AM/CD/AUX and press ENTER.
- 4. Scroll to Pro Logic II 4, 3 channel or Off and press ENTER.

Equalizer front/rear 5

The equalizer can be used to adjust different frequency bands separately.

Adjusting equalizer

- 1. Press MENU and then ENTER.
- 2. Scroll to AUDIO SETTINGS and press ENTER.
- 3. Scroll to Equalizer Front or Equalizer Rear and press ENTER.
- 4. The graphic on the display indicates the audio level of the frequency in question.

³ Premium Sound.

⁴ Not available in AM and FM mode.

⁵ Certain audio systems.

Audio functions

- Adjust the level with TUNING (4) or up/ down with the navigation button. Additional frequencies can be selected using the left/right navigation button.
- 6. Use ENTER to save or EXIT to close.

Automatic volume control 6

The auto volume control function allows the audio volume to increase as the speed of the car increases. There are three levels to choose from: Low, Medium and High.

Adjusting automatic volume control

- 1. Press **MENU** and then **ENTER**.
- Scroll to AUDIO SETTINGS and press ENTER.
- Scroll to Automatic volume control and press ENTER.
- Scroll to Low, Medium or High and press ENTER.

Optimum sound reproduction

The audio system is calibrated for optimum sound reproduction by means of digital signal processing.

This calibration takes into account loudspeakers, amplifiers, passenger compartment

There is a also a dynamic calibration that takes into account the position of the volume control, radio reception and vehicle speed.


The controls explained in these operating instructions, e.g. **Bass**, **Treble** and **Equalizer**, are only intended for the user to be able to adapt the sound reproduction according to personal taste.

acoustics, listener position etc. for each combination of car model and audio system.

⁶ Not Performance Sound.

Radio functions

Radio controls

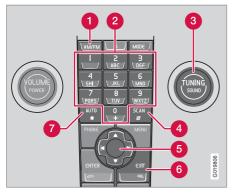

- FM/AM Wavelength selection
- 2 Station presets
- TUNING Knob for station searches
- 4 SCAN Scanning
- 6 Navigation button Tuning and menus
- 6 EXIT Cancel current function
- AUTO Automatic storage of stations

Tuning

Automatic tuning

- 1. Select wavelength using AM/FM (1).

Manual tuning

- 1. Select wavelength using AM/FM (1).
- Adjust the frequency by turning **TUNING** (3).

Tune into a station with a long press on or or or by using the steering wheel keypad:

 Hold in or on the navigation button depressed until the desired frequency appears on the display.

As long as the frequency graphic appears on the display, searching can be resumed by briefly pressing \P or \blacksquare .

Storing stations

Ten station presets can be stored per wavelength. FM has two memories for presets: FM1 and FM2. Preset stations are selected using the preset buttons (2) or the steering wheel keypad.

Storing stations manually

1. Tune into a station.

Hold a station preset button depressed until the message Station stored appears on the display.

Automatic storage of stations

AUTO (7) seeks out the ten strongest radio stations and stores them automatically in a separate memory. The function is especially useful in areas where the radio stations and their frequencies are unfamiliar.

Starting automatic storage of stations

- 1. Select wavelength using AM/FM (1).
- 2. Hold **AUTO** (7) depressed until **Autostoring...** appears on the display.

Once **Autostoring...** disappears from the display, the stations are stored. The radio continues in Auto mode and **Auto** appears on the display. The automatically stored presets can now be selected using the preset buttons (2).

Cancelling automatic storage of stations

- Press **EXIT** (6).

Selecting an auto-stored preset Allowing the radio to remain in Auto mode provides access to the autostored presets.

- 1. Briefly press AUTO (7).
 - > Auto appears on the display.
- 2. Press a preset button (2).

10

Radio functions

> The radio remains in Auto mode until it is exited by a brief press on AUTO (7), EXIT (6) or AM/FM (1).

Storing autostored presets in another memory

An autostored preset can be transferred to the FM or AM memory.

- 1. Briefly press AUTO (7).
 - > Auto appears on the display.
- 2. Press a preset button.
- Press the button under which the station will be stored and hold it depressed until the message Station stored appears on the display.
 - > The radio exits Auto mode and the stored station can be selected as a preset.

Scanning

SCAN (4) automatically searches through a wavelength for strong stations. When a station is found, it is played for approx. 8 seconds before scanning is resumed.

Activating/deactivating Scan

- 1. Select wavelength using AM/FM.
- 2. Press SCAN to activate.
 - > SCAN appears on the display. Close using SCAN or EXIT.

Storing a station

A selected station can be stored as a preset while **SCAN** is active.

- Press a station preset button and hold it depressed until the message Station stored appears on the display.
 - > Scanning is interrupted and the stored station can be selected as a preset.

RDS functions

Radio Data System - RDS links FM transmitters into a network. An FM transmitter in such a network sends information that gives an RDS radio the following functions:

- Automatically switches to a stronger transmitter if reception in the area is poor.
- Searches for programme form, such as traffic information or news.
- Receives text information on current radio programme.

Some radio stations do not use RDS or only some if its functionality.

Programme functions

In FM mode, the radio can search for stations with certain programme types. If a required programme type is located the radio can switch stations interrupting the audio source currently in use. For example, if the CD player is in use, it is paused. The interrupting transmission is played at a preset audio volume, see page 236. The radio returns to the previous audio source and audio volume when the set programme type is no longer broadcast.

The programme functions alarm (ALARM), traffic information (TP), news (NEWS), and programme types (PTY) interrupt one another in order of priority, where alarm has the highest priority and programme types has the lowest.

For further programme interruption settings, see EON and REG see page 235. The programme functions are modified via the menu system, see page 226.

Returning to the interrupted audio source

Press **EXIT** to return to the interrupted audio source.

Alarm

This function is used to warn of serious accidents and catastrophes. The alarm cannot be temporarily interrupted or deactivated. The



Radio functions

message ALARM! appears on the display when an alarm message is transmitted.

Traffic information - TP



This function allows traffic informa-TPill tion broadcast within a set station's RDS network to break through. TP shows that the function has been

activated. If the set station can send traffic information then TP'II appears on the display.

Activating/deactivating TP

- Press MENU and then ENTER.
- 2. Scroll to TP and press ENTER.

TP from current station/all stations The radio can interrupt with traffic information from only the set (current) station or from all stations.

- 1. Select an FM station.
- Press MENU and then ENTER.
- 3. Scroll to Advanced radio settings and press ENTER.
- 4. Scroll to TP and press ENTER.
- 5. Scroll to TP STATION and press ENTER.
 - > Fither TP from current station or TP from all stations is shown on the display.
- Press ENTER.

Activating/deactivating TP search

TP search is useful during long journeys while an audio source other than the radio is being played. The function automatically searches for traffic information within different RDS networks

- Press MENU and then ENTER.
- 2. Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 3. Scroll to TP and press ENTER.
- 4. Scroll to TP search and press ENTER.

News



This function allows news broadcasts within a set station's RDS network to break through. The message **NEWS** shows that the function is

activate.

Activating/deactivating News

- 1. Press MENU and then ENTER.
- 2. Scroll to News and press ENTER.

News from current station/all stations The radio can interrupt with news from only the set (current) station or from all stations.

- Select an FM station.
- 2. Press MENU and then ENTER.

- 3. Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 4. Scroll to News station and press FNTER.
 - > Fither News from current station, or News from all stations is shown on the display.
- Press ENTER.

Programme types - PTY



The PTY function can be used to select different programme types. such as Pop and Serious classic. The PTY symbol indicates that the

function is active. This function allows programme types broadcast within a set station's RDS network to break through.

Activating/deactivating PTY

- Select FM1 or FM2 with FM/AM.
- Press **MENU** and then **ENTER**.
- Scroll to PTY and press ENTER.
- 4. Scroll to Select PTY and press ENTER.
 - > A list of programme types appears: Current affairs, Information etc. The PTY function is activated by selecting programme types and deactivated by clearing all PTYs.

Radio functions

Select the desired programme types or Clear all PTY.

Search PTY

This function searches the entire wavelength for the selected programme type.

- Activate PTY.
- 2. Press MENU and then ENTER.
- 3. Scroll to PTY and press ENTER.
- 4. Scroll to **Search PTY** and press **ENTER**.

If the radio finds any of the selected programme types, > To seek appears on the display. Press the navigation button to continue searching for another broadcast of the selected programme types.

Display of programme type

The programme type of the current station can be shown on the display.



NOTE

Not all radio stations support this function.

Activating/deactivating display

- 1. Press **MENU** and then **ENTER**.
- 2. Scroll to PTY and press ENTER.

3. Scroll to **Show PTY** and press **ENTER**.

Radio text

Some RDS stations transmit information on programme content, artists, etc. This information can be shown on the display.

Activating/deactivating radio text

- 1. Press **MENU** and then **ENTER**.
- 2. Scroll to Radio text and press ENTER.

Automatic frequency update - AF

The AF function selects one of the strongest transmitters for a set station. The radio may sometimes need to search through the entire FM wavelength to find a strong transmitter. If this occurs, the radio mutes and PI Seek Press Exit to cancel appears in the display.

Activating/deactivating AF

- Press MENU and then ENTER.
- Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 3. Scroll to **AF** and press **ENTER**.

Regional radio programmes - REG



This function causes the radio to continue with a regional transmitter even if its signal strength is low. **REG** indicates that the function is active. The

regional function is normally deactivated.

Activating/deactivating REG

- 1. Press **MENU** and then **ENTER**.
- Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 3. Scroll to Regional and press ENTER.

Enhanced Other Networks - EON

The EON function is especially useful in urban areas with many regional radio stations. It allows the distance between the car and the radio station transmitter to determine when programme functions should interrupt the current audio source.

- Local interrupts only if the radio station transmitter is close.
- Distant ¹ interrupts if the station transmitter is far away, even if there is a lot of static.
- Off no interruption for programmes from other transmitters.

¹ Factory sett.

Radio functions

Activating/deactivating EON

- 1. Press **MENU** and then **ENTER**.
- Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 3. Scroll to **EON** and press **ENTER**.
- Scroll to Local, Distant or Off and press ENTER.

Resetting RDS functions

Resets all radio settings to the original factory settings.


- 1. Press MENU and then ENTER.
- Scroll to ADVANCED RADIO SETTINGS and press ENTER.
- 3. Scroll to Reset all and press ENTER.

Volume control, programme types

The interrupting programme types are heard at the volume selected for each programme type. If the volume level is adjusted during the programme interruption, the new level is saved until the next programme interruption.

CD functions

CD function controls

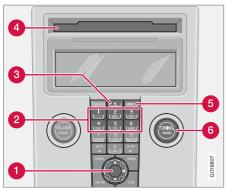

- Navigation button Fast forward/rewind, track selection and menus
- 2 CD changer position selection*
- 3 CD insertion/eject
- 4 CD insertion/eject slot
- **MODE** Audio source selection CD or AUX*
- 6 TUNING Knob for track selection

Starting playback (CD player)

If a music CD is in the player when the audio system is in CD mode then playback is started

automatically. Otherwise, load a disc and change to CD mode by pressing **MODE**.

Starting playback (CD changer*)

If a CD position with a music CD is already selected when the audio system is activated then playback starts automatically. Otherwise change to CD changer mode using **MODE** and select a disc with the number buttons **1–6** or Up/Down on the navigation button.

Insert a CD

- Select an empty position with buttons 1–
 6 or Up/Down on the navigation button.
 - An empty position is marked on the display. The text Insert disc shows that a new disc can be inserted. The CD changer can hold up to 6 CD discs.
- 2. Inserting a CD in the CD changer.

CD eject

A CD will stay in the ejected position for approx. 12 seconds. Following which it is reinserted in the player and playback continues.

Eject individual discs by pressing the eject button 3.

Eject all discs with a long press on the eject button. The entire magazine is emptied disc by disc. The message **Eject all** is shown in the display.

Pause

If the volume is turned down completely, the CD player is stopped. The player is restarted when volume is increased.

Audio files*

The CD player also supports MP3 and WMA format audio files.



NOTE

Certain types of copy-protected audio files cannot be read by the player.

When a CD containing audio files is inserted into the player the disc's directory structure is read in. It may take a while before playback starts due to the quality of the disc.

Navigation and playback

If a disc containing audio files is inside the CD player then **ENTER** displays the disc's directory structure. The directory structure is navigated in the same way as the audio system's menu structure. Audio files have the symbol

 $\mbox{\ \ \, J}$ and directories have the symbol $\mbox{\ \ \, \Box}$. Start audio file playback with $\mbox{\ \, ENTER}.$

When the playback of a file is finished the playback of the other files in the same directory continues. Directory change takes place auto-

CD functions

matically when all files in the current directory have been played back.

Press left/right on the navigation button if the display is not wide enough to show the whole audio file name.

Fast-wind/change CD tracks and audio files

Short presses right/left on the navigation button are used to scroll between CD tracks/audio files. Long presses are used to fast-wind CD tracks/audio files. **TUNING** (or the steering wheel keypad) can also be used for this purpose.

Scan CD

This function plays the first ten seconds of each CD track/audio file. Press **SCAN** to activate. Interrupt with **EXIT** or **SCAN** to continue playback of the current CD track/audio file.

Random

This function plays the tracks in random order. The random CD tracks/audio files can be scrolled through in the normal way.



NOTE

It is only possible to scroll between random CD tracks on the current disc.

Different messages appear on the display depending on which random function has been selected.

- RANDOM means that the tracks from only one music CD are played.
- RND ALL means that all tracks on all music CDs in the CD changer are played.
- RANDOM FOLDER means that the audio files in a directory on the current CD are played.

Activating/deactivating (CD player) If a normal music CD is being played:

- 1. Press MENU and then ENTER.
- 2. Scroll to Random and press ENTER.

If a disc with audio files is being played:

- 1. Press **MENU** and then **ENTER**.
- 2. Scroll to Random and press ENTER.
- Scroll to Folder or Disc and press ENTER.

Activating/deactivating (CD changer)
If a normal music CD is being played:

- 1. Press **MENU** and then **ENTER**.
- 2. Scroll to Random and press ENTER.

Scroll to Single disc or All discs and press ENTER.

The option All discs only applies to the music CDs in the changer.

If a CD with audio files is being played:

- 1. Press MENU and then ENTER.
- 2. Scroll to Random and press ENTER.
- Scroll to Single Disc or Folder and press ENTER.

The function is deactivated when another CD is selected.

Disc text

If title information is stored on a music CD then it can be shown on the display ¹.

Activating/deactivating

- 1. Start CD playback.
- 2. Press **MENU** and then **ENTER**.
- 3. Scroll to **Disc text** and press **ENTER**.

CDs

Using low quality CD discs could result in poor or non-existent sound.

¹ Applies to CD changer

CD functions



IMPORTANT

Only use standard discs (12 cm in diameter). Do not use CDs with adhesive disc labels. The heat in the CD player may cause the label to come off, damaging the CD player.

10

10

10 Infotainment system

Menu structure - audio system

Overview

FM menu

- 1. News
- 2. TP
- 3. PTY
- 4. Radio text
- 5. Advanced radio settings
- 6. Audio settings*

AM menu

1. Audio settings*

CD menu


- 1. Random
- 2. News
- 3. TP
- 4. Disc text
- 5. Audio settings*

CD changer menu

- 1. Random
- 2. News
- 3. TP
- 4. Disc text
- 5. Audio settings*

AUX menu

- 1. AUX volume
- 2. News
- 3. TP
- 4. Audio settings*

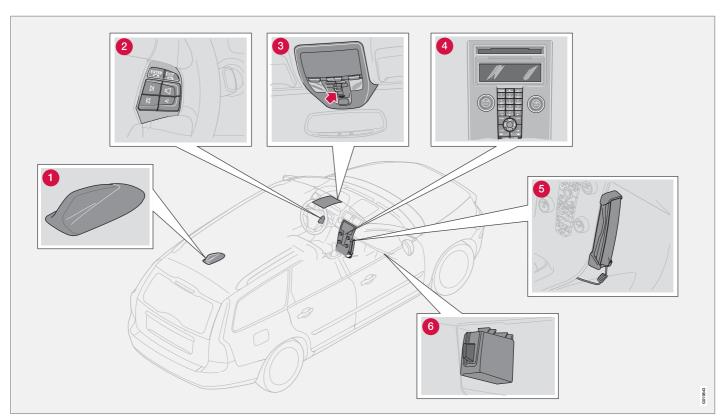

Overview - Phone system components.

10

10 Infotainment system

Phone functions*

Phone system components

1. Antenna

2. Steering wheel keypad

Most phone system functions can be accessed via the keypad. see page 243.

3. Microphone

The hands free microphone is integrated in the roof console beside the rearview mirror.

4. Centre console control panel

All phone functions (except call volume) can be regulated via the control panel.

- 5. Privacy handset
- 6. SIM card reader

General

- Always put traffic safety first.
- If the driver needs to use the privacy handset, park the car in a safe place first.
- Switch off the phone system when refuelling the car.
- Switch off the system near blasting work.
- Only entrust phone system servicing to an authorised Volvo workshop.

Emergency calls

Emergency calls to alarm centres can be made without a SIM card as long as there is coverage by a GSM operator.


Making an emergency call

- 1. Activate the phone.
- 2. Ring the emergency number that applies to your region (within EU: 112).
- Press ENTER.

IDIS

The IDIS system (Intelligent Driver Information System) allows incoming phone calls and SMS messages to be delayed so that the driver can concentrate on driving. Incoming calls and SMS messages can be delayed 5 seconds before they are connected. Missed calls are shown on the display. IDIS can be deactivated using menu function 5.5, see page 248.

SIM card

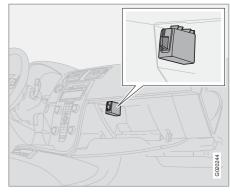

The phone can only be used with a valid SIM card (Subscriber Identity Module). The card is available from various network operators. Contact your network operator if you experience difficulties with the SIM card.



NOTE

The built-in phone cannot read 3G type SIM cards (3G only). Combined 3G/GSM cards work. Contact your network operator if you need to change your SIM card.

Double SIM cards

Many network operators offer two SIM cards for the same phone number. The extra SIM card can be used in the car.

Inserting the SIM card

- Switch off the phone and open the glovebox.
- 2. Pull out the SIM card holder from the SIM card reader, see illustration on page 242.
- Position the SIM card in the holder with the metal surface visible. The bevelled edge of the SIM card should align with the bevel of the SIM card holder.
- 4. Carefully press in the SIM card holder.


Menus

Page 248 describes how to control phone functions with the menu system.

Traffic safety

For safety reasons, parts of the phone menu system cannot be accessed at speeds in excess of 8 km/h.

Phone controls

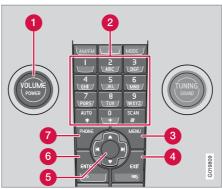

Centre console control panel.

- VOLUME Control the background volume from the radio, for example, during a call.
- Number and letter buttons
- **MENU** Opens the main menu
- EXIT End/refuse calls, clear entered characters
- Navigation button Scroll in menus and character rows
- 6 ENTER Accept calls. A press of the button reveals latest dialled numbers
- **PHONE** On/off and standby mode

Steering wheel keypad



When the phone is active, the steering wheel keypad is locked to phone functions. To control the audio system, the phone must be in standby mode (standby).

- ENTER Works the same as on the control panel.
- **EXIT** Works the same as on the control panel.
- Call volume Increase/decrease
- 4 Navigation buttons Scroll in menus



On/Off

A handset appears in the display when the phone system is active or in standby mode (standby). If the ignition key is turned to position **0** when the phone is in one of these modes, the phone automatically resumes this mode the next time the ignition key is turned to position **I** or **II**.

Activating the phone system

Phone system functions can only be used when the phone is in active mode.

- Press PHONE.
- Enter the PIN code (if necessary) and press ENTER.

Deactivating the phone system

No calls can be received when the phone is deactivated.

 Hold **PHONE** depressed until the phone is deactivated.

Standby mode (standby)

In standby mode, the audio system can be in use while calls are received. However, it is not possible to make calls when in standby mode.

Putting the phone in standby mode
The phone must first be in active mode before
it can be put in standby mode.

Press PHONE.

Activating from standby mode

Press PHONE.

Making and receiving calls

If the privacy handset is raised when a phone call is started, the sound will come from the handsfree system. For information on switching between privacy handset and handsfree during a call, see page 246.

To call

- 1. Activate the phone system (if necessary).
- 2. Dial the number or use the phone book, see page 246.
- 3. Press **ENTER** or lift the handset. Release the handset by pressing it down.

Receiving a call

For Auto answer, see menu option 4.3, see page 248.

 Press ENTER or lift the handset. Release the handset by pressing it down.

Ending a call

Press EXIT or hang up the handset.

Refusing a call

Press EXIT.

Call waiting

A two-tone signal during a phone call indicates that there is another incoming call. **Answer?** appears on the display. The call can be refused or taken in the normal manner. If the incoming call is taken, the previous call is put on hold.

Putting a call on hold/resuming a call

- 1. Press MENU or ENTER.
- 2. Scroll to **Hold** or **Hold off** and press **ENTER**.

Dialling a third party

- 1. Put the call on hold.
- 2. Dial the number of the third party.

Switching between calls

- 1. Press **MENU** or **ENTER**.
- 2. Scroll to Swap and press ENTER.

Starting a conference call

A conference call consists of at least three parties that can talk to one another. Once a conference call has been initiated, no more parties can be connected. All calls are ended when a conference call is ended.

- 1. Start two phone calls.
- 2. Press MENU or ENTER.
- 3. Scroll to Join and press ENTER.



Volume

The phone uses the driver's door speaker.

Call volume



Call volume is regulated with the steering wheel keypad.

If the privacy handset is used, volume is regulated with a wheel on the side of the handset.

Audio system volume

Audio system volume is temporarily lowered during a phone call. Once the call is ended the previous volume is resumed. If the volume is regulated during the call, the new level is retained once the call is ended. Sound can also be automatically muted during a phone call, see menu 5.4.3, on page 250. This function only applies to the Volvo integrated phone system.

Entering text

Text is entered using the phone keypad.

- Press the key with the desired character once for the first character on the button, twice for the second, etc. See table.
- Press 1 for a space. If two characters in a row are to be entered using the same button, press * or wait a few seconds.

A short press on **EXIT** deletes an input character. A long press on **EXIT** will clear all entered characters.

| Key | Function |
|-----------|--|
| 1 | space 1 - ?!,.:"'() |
| ABC | a b c 2 ä å à æ ç |
| 3 DEF | d e f 3 è é |
| 4 GHI | ghi4ì |
| 5 JKL | jkI5 |
| MNO | mno6ñöòØ |
| 7 PQRS | pqrs7ß |
| TUV | tuv8üù |
| wxyz | w x y z 9 |
| AUTO * | Pressed briefly if two characters shall be entered after each other with the same key. |

| Key | Function |
|-----------|--------------------------------------|
| 0 + | +0@*#&\$£/% |
| SCAN # | Switch between upper and lower case. |

Handling numbers

Calling the last number dialled

The phone automatically stores the last phone numbers dialled.

- 1. Press ENTER.
- 2. Scroll to a number and press ENTER.

Phone book

If the phone book contains a live caller's contact information then this is shown in the display. Contact information can be stored on the SIM card and in the phone.

Storing contacts in the phone book

- 1. Press MENU.
- 2. Scroll to Phone book and press ENTER.
- 3. Scroll to New number and press ENTER.
- 4. Enter a name and press **ENTER**.
- 5. Enter a number and press **ENTER**.
- Scroll to SIM card or Phone and press ENTER.



Phone functions*

Searching for contacts in the phone book
Use the down arrow of the navigation button
instead of MENU for direct access to the
Search menu.

- Press MENU.
- 2. Scroll to Phone book and press ENTER.
- 3. Scroll to Search and press ENTER.
- 4. Enter the first few letters of the item and press **ENTER**, or simply press **ENTER**.
- 5. Scroll to an item and press ENTER.

Copying entries between the SIM card and Phone book

- 1. Press MENU.
- 2. Scroll to Phone book and press ENTER.
- 3. Scroll to Copy all and press ENTER.
- Scroll to SIM to phone or Phone to SIM and press ENTER.

Deleting contacts from the phone book

- 1. Press MENU.
- 2. Scroll to Phone book and press ENTER.
- 3. Scroll to Search and press ENTER.
- 4. Enter the first few letters of the item and press **ENTER**, or simply press **ENTER**.
- 5. Scroll to the item to be erased and press **ENTER**.

6. Scroll to **Erase** and press **ENTER**.

Erase all contacts

- 1. Press MENU.
- 2. Scroll to Phone book and press ENTER.
- Scroll to Erase SIM or Erase phone and press ENTER.

If required, enter phone code. The factory-set default code is 1234.

Speed dial

A keypad button (1–9) can be used as a speed dial number for a contact in the phone book.

- Press MENU.
- 2. Scroll to Phone book and press ENTER.
- 3. Scroll to **Speed dial** and press **ENTER**.
- 4. Scroll to **Select numbers** and press **ENTER**.
- Scroll to the digit of the keypad button for the speed dial number and press ENTER.
- Enter the first few letters of the item and press ENTER, or simply press ENTER.
- 7. Scroll to an item and press **ENTER**.
- 8. Hold **EXIT** depressed to leave the menu system.

Calling using speed dial

 Briefly press the required keypad button, followed by ENTER.



NOTE

When the phone is switched on, it takes a while before speed dialling is available.

To use the speed dial function **Speed dial** must be activated in the **Phone book** menu, see page 249.

Calling from the phone book

- 1. Press MENU.
- 2. Scroll to Phone book and press ENTER.
 - > All contacts in the phone book memory are displayed. The number of contacts displayed can be reduced by entering part of the contact's name.
- 3. Scroll to a contact and press ENTER.



i) NOTE

Press ENTER to dial.





NOTE

Hold in the required letter/button in the keypad for about 2 seconds to reach the corresponding letter in the phone book.

Functions during a call

Several functions are available during a call. Some functions can only be used when a call is on hold.

Press **MENU** or **ENTER** during a call to access the In-call menu and scroll to one of the following alternatives:

- 1. Mute/Mute off Mute mode.
- Hold/Hold off Put a call on hold or resume a call.
- Handsfree/Handset Use handsfree or the privacy handset.
- 4. Phone book Show phone book.
- 5. **Join** Conference calling (available if more than three parties are connected).
- Swap Switch between two calls (available if up to three parties are connected).

SMS - Short Message Service

Reading SMS

- Press MENU.
- 2. Scroll to Messages and press ENTER.
- Scroll to Read and press ENTER.
- 4. Scroll to a message and press **ENTER**.
 - > The message text is shown in the display. Additional selections can be made by pressing ENTER. Hold EXIT depressed to leave the menu system.

Writing and sending

- Press MENU.
- 2. Scroll to Messages and press ENTER.
- 3. Scroll to Write new and press ENTER.
- 4. Enter text and press **ENTER**.
- Scroll to Send and press ENTER.
- 6. Enter a phone number and press **ENTER**.

IMEI number

To block the phone, you must provide your network operator with the phone's IMEI number. This is a 15 digit serial number that is programmed into the phone. Dial *#06# to show this number in the display. Write it down and keep it in a safe place.

Specifications

| • | |
|-----------------------------|------------------|
| Output | 2 W |
| SIM card | Small |
| Memory entries | 250 ^A |
| SMS (Short Message Service) | Yes |
| Data/Fax | No |
| Dualband (900/1800 MHz) | Yes |
| | |

A The capacity of the SIM card's memory varies depending on SIM card type.

10

10 Infotainment system

Menu structure - phone*

Phone menu

1. Call register

- Missed calls 1.1.
- 1.2. Received calls
- 1.3. Dialled no.
- 1.4. Frase list
 - 1.4.1. All calls
 - 1.4.2. Missed calls
 - 1.4.3. Received calls
 - 1.4.4. Dialled no.
- 1.5. Call duration
 - 1.5.1. Last call
 - 1.5.2. Call count
 - 1.5.3. Total time
 - 1.5.4. Reset timers

2. Phone book

- 2.1. New number
- 2.2. Search
- 2.3. Copy all
 - 2.3.1. SIM to phone
 - 2.3.2. Phone to SIM

- 2.4. Speed dial
 - 2.4.1. Active
 - 2.4.2. Select numbers
- 2.5. Erase SIM
- 2.6. Erase phone
- 2.7. Memory status

3. Messages

- 3.1. Read
- 3.2. Write
- Message settings. 3.3.
 - 3.3.1. SMSC number
 - 3.3.2. Validity time
 - 3.3.3. Message type

Call options 4.

- 4.1. Send my no.
- 4.2. Call waiting
- 4.3. Auto answer
- Automatic redial 4.4.
- 4.5. Voice mail number
- Call divert 4.6.
 - 4.6.1. All calls
 - 4.6.2. When engag.

- 4.6.3. Not answered
- 4.6.4. Not reachable
- 4.6.5. Fax calls
- 4.6.6. Data calls
- 4.6.7. Cancel all

5. Tel. settings

- 5.1. Network
 - 5.1.1. Automatic
 - 5.1.2. Manual select
- 5.2. SIM security
 - 5.2.1. On
 - 5.2.2. Off
 - 5.2.3. Automatic
- Change PIN code 5.3.
- 5.4. Sounds
 - 5.4.1. Ring volume
 - 5.4.2. Ring signal
 - 5.4.3. Mute radio
 - 5.4.4. Msg. beep
- IDIS 5.5.
- 5.6 Factory settings

Menu structure – phone*

Description of menu options

1. Call register

1.1. Missed calls

List of missed calls. You can choose to call, erase or store the number in the phone book.

1.2. Received calls

List of received calls. You can choose to call, erase or store the number in the phone book.

1.3. Dialled no.

List of dialled numbers. You can choose to call, erase or store the number in the phone book.

1.4. Erase list

Erase the lists found in the menus 1.1, 1.2 and 1.3 as below.

- 1.4.1. All
- 1.4.2. Missed
- 1.4.3. Received
- 1.4.4. Outgoing

1.5. Call duration

Duration of all calls or of the most recent call. To reset the call timer, see menu 1.5.4.

- 1.5.1. Last call
- 1.5.2. Call count
- 1.5.3. Total time
- 1.5.4. Reset timers

2. Phone book

2.1. New number

Store names and phone numbers in the phone book, see page 245.

2.2. Search

Search for a name in the phone book.

2.3. Copy all

Copy phone numbers and names from the SIM card to the phone memory.

- 2.3.1. From SIM to phone memory
- 2.3.2. From phone to SIM memory.

2.4. Speed dial

A number stored in the phone book can be stored as a speed dial number.

2.5. Erase SIM

Erase the entire SIM card memory.

2.6. Erase phone

Erase the entire phone memory.

2.7. Memory status

Shows how many positions are occupied in the SIM card and phone memory. The table shows how many of the total number of positions are occupied, e.g. 100 (250).

3. Messages

3.1. Read

Received text messages. Select whether to erase, forward, change or save the entire message or parts of it.

3.2. Write

Write a message using the keypad. Choose whether to save or send it.

3.3. Message sett

Enter the number (SMSC number) of the message centre to which messages are to be transferred as well as how long they are to be saved at the message centre. Contact your network operator for information on message settings. Normally, these settings should not be altered.

- 3.3.1. SMSC number
- 3.3.2. Validity time
- 3.3.3. Message type

4. Call options

4.1. Send my no.

Displays or hides your phone number to/from the person you call. Contact your network operator regarding ex-directory numbers.

4.2. Call waiting

Be alerted during a phone call that there is another incoming call.



Menu structure - phone*

4.3. Auto answer

Automatically answers incoming calls.

4.4. Call back

Automatically calls a previously engaged number.

4.5. Voice mail number Stores voice mail number.

4.6. Diversion

Choose when and what type of calls are to be diverted to a specified phone number.

- 4.6.1. All calls (this setting only applies during the call in progress).
- 4.6.2. When engag.
- 4.6.3. Not answered
- 4.6.4. Not reachable
- 4.6.5. Fax calls
- 4.6.6. Data calls
- 4.6.7. Cancel all

5. Phone settings

5.1. Network

Choose a network automatically or manually. The selected network is shown in the display in the phone's basic mode.

- 5.1.1. Auto
- 5.1.2. Manual select

5.2. SIM security

Select if the PIN code should be on, off or if the phone should automatically give the PIN code.

- 5.2.1. On
- 5.2.2. Off
- 5.2.3. Automatic

5.3. Edit codes

Change PIN or phone code. Write the codes down and keep them in a safe place.

- 5.3.1. PIN code
- Phone code. The factory-set phone code 1234 is used until you change to your own code.
- 5.4. Sounds
- 5.4.1. Volume Adjust the ring signal volume.
- 5.4.2. Ring signal. There are seven different ring signals.
- 5.4.3. Mute radio. On/off
- 5.4.4. Msg. beep

5.5. IDIS


If the IDIS function is deactivated, incoming calls are not delayed, regardless of the driving situation.

5.5. Factory sett.

Reset the system's factory settings.

Bluetooth handsfree*

General

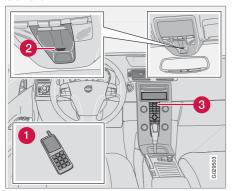

System overview.

- Mobile phone
- 2 Microphone
- 3 Centre console

BluetoothTM

A mobile phone equipped with BluetoothTM can be connected wirelessly to the audio system. The audio system then works handsfree, with the option to control a range of the mobile phone's functions remotely. The microphone is fitted in the roof console (2). The mobile phone can always be operated by its own keys irrespective of whether or not it is connected.

$\overline{(i)}$

NOTE

Only a selection of mobile phones is fully compatible with the handsfree function. Information on compatible phones is available at Volvo dealers and at www.volvocars.com.

Menus and controls

The menus are navigated using the control panel in the centre console (3), see page 243.

Remember

The menus are controlled from the centre console and the steering wheel keypad. For general information on menus, see page 248.

Activating/deactivating

A short press on **PHONE** activates the handsfree function. The text **PHONE** at the top of the display shows that it is in phone mode. The symbol shows that the handsfree function is active.

One long press on **PHONE** deactivates the handsfree function and disconnects a connected phone.

Connect mobile phone

A mobile phone is connected in different ways depending on whether or not it has been con-

nected previously. To connect a mobile phone for the first time, follow the instructions below:

Alternative 1 - via the car's menu system

- Make the mobile phone detectable/visible via BluetoothTM, see mobile phone manual or www.volvocars.com.
- 2. Activate the handsfree function with **PHONE**.
 - Menu option Add phone appears on the display. If one or more mobile phones have already been registered then these are also shown.
- 3. Select Add phone.
 - The audio system searches for mobile phones in the vicinity. The search takes approximately 30 seconds. The mobile phones detected are specified with their respective BluetoothTM name in the display. The handsfree function's BluetoothTM name is shown in the mobile phone such as My Car.
- 4. Choose one of the mobile phones in the audio system display.
- Enter the number series shown in the audio system display via the mobile phone keypad.

10 Infotainment system

Bluetooth handsfree*

Alternative 2 - via the phone's menu system

- Activate the handsfree function with PHONE. If there is a phone connected, disconnect the connected phone.
- 2. Search with the phone's BluetoothTM, see the mobile phone manual.
- 3. Select **My Car** in the list of units detected in your mobile phone.
- 4. Enter the PIN code '1234' into the mobile phone when prompted for the PIN code.
- Select to connect to My Car from the mobile phone.

The mobile phone is registered and connected automatically to the audio system while the text **Synchronising** is shown in the display. For more information on how mobile phones are registered, see page 253.

When the connection is established the symbol is shown and the mobile phone BluetoothTM name is shown in the display. Now the mobile phone can be controlled from the audio system.

To call

- Make sure that the text PHONE is shown at the top of the display and that the symbol is visible.
- 2. Dial the number or use the phone book, see page 254.
- Press ENTER.

The call is interrupted with **EXIT**.

Disconnecting the mobile phone

Automatic disconnection takes place if the mobile phone moves out of the audio system's range. For more information on connection, see page 253.

Manual disconnection takes place by deactivating the handsfree function with one long press on **PHONE**. The handsfree function is also deactivated when the engine is switched off or when a door is opened ¹.

When the mobile phone has been disconnected an ongoing call can be continued with the mobile phone's built-in microphone and speaker.



NOTE

Some mobile phones require that the changeover from handsfree is confirmed from the phone's keypad.

Making and receiving calls

Incoming call

Calls are accepted with **ENTER** even if the audio system is in CD or FM mode for example. Refuse or end with **EXIT**.

Auto answer

The automatic answer function means that calls are accepted automatically. Activate/ deactivate under Phone menu → Phone settings → Call options → Auto answer.

In-call menu

Press **MENU** or **ENTER** during an ongoing call to access the following functions:

- Microphone muted audio system microphone is muted.
- Transfer call to mobile the call is transferred to the mobile phone.

¹ Applies to Keyless Drive.



Bluetooth handsfree*



NOTE

With certain mobile phones the connection is terminated when the privacy function is used. This is normal. The handsfree function asks if you want to reconnect.

 Phone book – searching in the phone book.



NOTE

A new call cannot be started during an ongoing call.

Audio settings

Call volume

The call volume can be regulated when the handsfree function is in phone mode. Use the steering wheel keypad or **VOLUME**.

Audio system volume

Providing there is no ongoing call taking place, the audio system volume is controlled as usual with **VOLUME**. In order to control audio system volume during an ongoing call you have to switch to one of the audio sources.

The audio source can be automatically muted for incoming calls under Phone menu →

Phone settings → Sounds and volume → Mute radio.

Ring volume

Go to Phone menu → Phone settings → Sounds and volume → Ring volume and adjust with ▲ / ▼ on the navigation button.

Ring signals

The handsfree function has integrated ring signals that can be selected under **Phone menu**

- → Phone settings → Sounds and volume
- → Ring signals → Ring signal 1, 2, 3 etc.



NOTE

The connected mobile phone's ring signal is not deactivated when one of the handsfree system's integrated signals is used.

In order to select the connected phone's ring signal ², go to Phone menu ->

Phone settings → Sounds and volume → Ring signals → Use mobile phone signal.

More on registering and connecting

A maximum of five mobile phones can be registered. Registration is performed once per phone. After registration the phone no longer needs to be visible/detectable. A maximum of one mobile phone can be connected at a time. Phones can be deregistered under Bluetooth menu
Bluetooth Remove phone.

Automatic connection

When the handsfree function is active and the last mobile phone connected is in range it is connected automatically. When the audio system searches for the last phone connected its name is shown in the display. To change over to manual connection of another phone, press **EXIT**.

Manual connection

If you want to connect a mobile phone other than the last connected or change the connected mobile phone, proceed as follows:

- 1. Set the audio system in phone mode.
- Press **PHONE** and select one of the phones in the list.

The connection can also be made via the menu system under Bluetooth menu → Bluetooth

→ Connect phone or Change phone.

² Not supported by all mobile phones.

10

10 Infotainment system

Bluetooth handsfree*

Phone book

All use of the phone book presupposes that the text **PHONE** is shown at the top of the display and that the symbol is visible.

The audio system stores a copy of the phone book from each registered mobile phone. The phone book is copied automatically to the audio system during each connection. Deactivate the function under Phone settings >> Synchronise phone book. Searching for contacts is only performed in the connected mobile phone's phone book.



NOTE

If the mobile phone does not support copying of the phone book then List is empty is shown when copying is finished.

If the phone book contains a ringing caller's contact information then this is shown in the display.

Searching for contacts

The easiest way to search in the phone book is with long presses on the keys **2–9**. This starts a search in the phone book based on the key's first letter.

The phone book can also be reached with ▼ /

▲ on the navigation button or with ◀ / ▶ on

the steering wheel keypad. The search can also be performed from the phone book's Search menu under Phone book → Search:

- Enter the first few letters of the contact and press ENTER. Or simply press ENTER.
- 2. Scroll to a contact and press **ENTER** to call.

Voice recognition

The mobile phone's voice recognition function for dialling can be used by holding in **ENTER**.

Voice mail number

Voice mail number can be changed under

Phone settings → Call options → Voice mail

number. If there is no number stored then this
menu can be reached with one long press on

1. Press 1 for a long time to use the stored
number.

Call lists

The call lists are copied to the handsfree function at each new connection and are then updated during the connection. Press **ENTER** to show the last dialled. Other call lists are available under **Call register**.



NOTE

Certain mobile phones show a list of the last dialled calls in reverse order.

Inputting text

Input text using the keypad in the centre console. Press once for the key's first character, twice for the second etc. Continue pressing for more characters, see the table on page 245.

A short press on **EXIT** deletes an input character. One long press on **EXIT** clears all input characters. ▲ / ▼ on the navigation button scrolls between the characters.

Menu structure - Bluetooth

- 1. Missed calls
- 2. Received calls
- 3 Dialled calls
- 4. Phone book
 - 4.1. Search
 - 4.2. Copy from phone
- 5. Bluetooth...
 - 5.1. Change phone
 - 5.2. Connect phone
 - 5.3. Disconnect phone
 - 5.4. Connect from mobile phone



Bluetooth handsfree*

6. Phone settings

- 6.1. Call options
 - 6.1.2. Auto reply
 - 6.1.3. Voice mail number
- 6.2. Sounds and volume
- 6.3. IDIS
- 6.4. Synchronise phone book




SPECIFICATIONS







Type designation

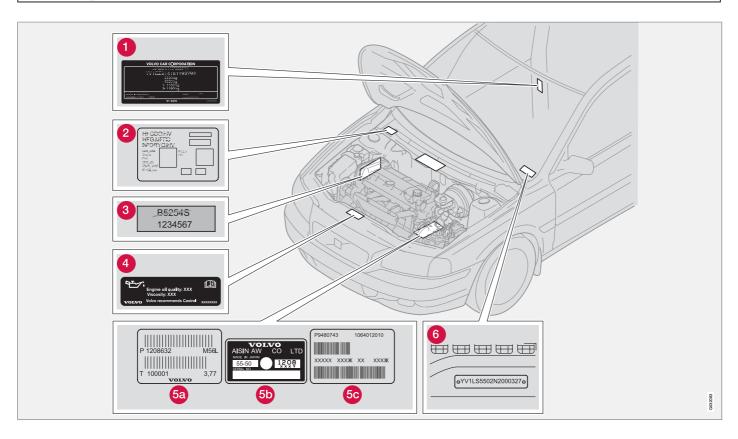

Type designation


Knowing the car's type designation, vehicle identification and engine numbers can facilitate all contact with a Volvo dealer regarding the car and when ordering spare parts and accessories.

- Type designation, vehicle identification number, maximum permissible weights, codes for colour and upholstery and type approval number.
- 2 Label for parking heater.
- 3 Engine type designation, component and serial number.
- 4 Label for engine oil.
- Gearbox type designation and serial number:
 - A manual gearbox
 - B, e automatic gearbox
- **6** VIN number (type and model year designation plus chassis number).

Further information on the car is presented in the registration document.

Dimensions and weights

Dimensions

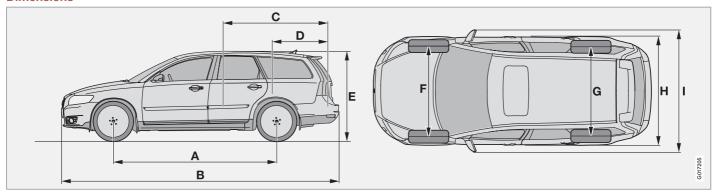

| Posi- tion in illus- tration | Dimensions | (mm) |
|---------------------------------------|---------------------------------|------|
| Α | Wheelbase | 2640 |
| В | Length | 4522 |
| С | Load length, floor, folded seat | 1766 |
| D | Load length, floor | 989 |
| Е | Height | 1457 |

| Posi- tion in illus- tration | Dimensions | (mm) |
|---------------------------------------|------------------------------|------|
| F | Front track | 1535 |
| G | Rear track | 1531 |
| Н | Width | 1770 |
| I | Width including door mirrors | 2022 |

Weights

Kerb weight includes the driver, the fuel tank 90% full and all fluids. The weight of passengers and accessories, such as a towbar, load carriers, space box etc. towball load (when a trailer is hitched, see table), load carriers, and space box etc. influences the payload and must not be included in the kerb weight. Permitted weight (in addition to driver) = Gross vehicle weight - Kerb weight.




Dimensions and weights



WARNING

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

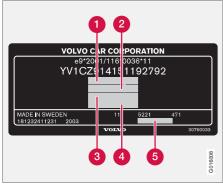

For decal location, see page 258.

- 1 Max. total weight
- Max. train weight (car+trailer)
- Max. front axle load
- 4 Max. rear axle load
- 6 Equipment level

Max. load: See registration document.

Max. roof load: 75 kg.

Trailer with brakes:

| Tranci With | Trailer With Drakes. | | | | |
|-------------|-----------------------------------|--------------------------------------|--|--|--|
| Engine | Maximum trailer weight (kg) | Maxi- mum towball load (kg) | | | |
| 1.6 | 1200 | 75 | | | |
| 1.6D | 1300 | | | | |
| 1.8 | 1300 | | | | |
| 1.8F | 1300 | | | | |
| 2.0 | 1350 | | | | |
| others | 1500 | | | | |

Trailer without brakes

| Maximum trailer weight (kg) | Maximum tow- ball load (kg) |
|-----------------------------|--------------------------------|
| 700 | 50 |



Engine specifications

Overview

| | 1.6 | 1.8 | 1.8F | 2.0 | 2.4 | 2.4i | Т5 |
|-------------------------|----------|----------|----------|----------|----------|----------|---------------------|
| Engine desig- nation | B4164S3 | B4184S11 | B4184S8 | B4204S3 | B5244S5 | B5244S4 | B5254T7 |
| Output (kW/rpm) | 74/6000 | 92/6000 | 92/6000 | 107/6000 | 103/5000 | 125/6000 | 169/5000 |
| Output (hp/rpm) | 100/6000 | 125/6000 | 125/6000 | 145/6000 | 140/5000 | 170/6000 | 230/5000 |
| Torque (Nm/ rpm) | 150/4000 | 165/4000 | 165/4000 | 185/4500 | 220/4000 | 230/4400 | 320/1500 – 500 0 |
| No. of cylinders | 4 | 4 | 4 | 4 | 5 | 5 | 5 |
| Bore (mm) | 79 | 83 | 83 | 87 | 83 | 83 | 83 |
| Stroke (mm) | 81.4 | 83.1 | 83.1 | 83.0 | 90.0 | 90.0 | 93.2 |
| Swept volume (litres) | 1.60 | 1.80 | 1.80 | 1.99 | 2.44 | 2.44 | 2.52 |
| Compression ratio | 11.0:1 | 10.8:1 | 10.8:1 | 10.8:1 | 10.3:1 | 10.3:1 | 9.0:1 |

| | 1.6D | 2.0D | D5 | D5 | D5 |
|--------------------|----------|----------|----------------------|----------|----------|
| Engine designation | D4164T | D4204T | D5244T9 ^A | D5244T8 | D5244T13 |
| Output (kW/rpm) | 80/4000 | 100/4000 | 120/4000 | 132/4000 | 132/4000 |
| Output (hp/rpm) | 109/4000 | 136/4000 | 163/4000 | 180/4000 | 180/4000 |



Engine specifications

| | 1.6D | 2.0D | D5 | D5 | D 5 |
|-----------------------|----------|----------|-----------------|-----------------|-----------------|
| Torque (Nm/rpm) | 240/1750 | 320/2000 | 340/1750 – 3000 | 350/1750 – 3250 | 400/2000 – 2750 |
| No. of cylinders | 4 | 4 | 5 | 5 | 5 |
| Bore (mm) | 75 | 85 | 81 | 81 | 81 |
| Stroke (mm) | 88.3 | 88.0 | 93.2 | 93.2 | 93.2 |
| Swept volume (litres) | 1.56 | 2.00 | 2.40 | 2.40 | 2.40 |
| Compression ratio | 18.3:1 | 18.5:1 | 17.3:1 | 17.3:1 | 17.3:1 |

^A Belgium

Engine type designation, component and serial number can be read on the engine, see page 258.

Engine oil

Adverse driving conditions

Check the oil level more frequently for long journeys:

- towing a caravan or trailer.
- in mountainous regions.
- · at high speeds.
- in temperatures colder than -30 °C or hotter than +40 °C.

This can produce abnormally high oil temperature or oil consumption.

Also check the oil level more often if the car is often driven short distances (less than 10 km) when temperatures are low (below +5 °C).

Choose a fully synthetic engine oil for adverse driving conditions. It provides extra protection for the engine.

Volvo recommends Castrol oil products.

1


IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil (see the engine compartment decal) for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.

Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Viscosity chart

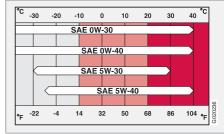

Engine oil

Oil decal

Engine oil grade

| Engine oii grade | Engine variant | | Volume between MIN-MAX (litres) | Volume ^A (litres) |
|---|-------------------|---------|------------------------------------|---------------------------------|
| | 2.4 ^B | B5244S5 | 1,3 | 5.8 |
| | 2.4i ^B | B5244S4 | 1,3 | 5.8 |
| Engine oil quality: ACEA A3/B3/B4 Viscosity: SAE 0W-30 Volvo recommends Castrol 31202704 Oil decal location in engine compartment, see | T5 ^B | B5254T7 | 1,3 | 5.8 |
| page 201. | | | | |
| Oil grade: ACEA A3/B3/B4 | | | | |
| Viscosity: SAE 0W-30 | | | | |
| When driving under adverse conditions, use ACEA A5/B5 SAE 0W-30. | | | | |

A Including filter change
B Does not apply to Europe, for Europe see oil ACEA A5/B5

Engine oil

Engine oil grade

| | Engine variant | | Volume between MIN-MAX (litres) | Volume ^A (litres) |
|--|----------------|----------|---------------------------------|---------------------------------|
| | 1.6 | B4164S3 | 0.75 | 4.0 |
| | 1.8 | B4184S11 | 0.75 | 4.3 |
| Engine oil quality: WSS-M2C913-B Viscosity: SAE 5W-30 | 1.8F | B4184S8 | 0.75 | 4.3 |
| Volvo recommends Castrol Volvo 31202705 | 2.0 | B4204S3 | 0.75 | 4.3 |
| er constant | 1.6D | D4164T | 1.0 | 3.7 |
| 0 | 2.0D | D4204T | 2.0 | 5.5 |
| Oil decal location in engine compartment, see page 201. | | | | |
| Oil grade: WSS-M2C913-B | | | | |
| Viscosity: SAE 5W-30 | | | | |
| When driving under adverse conditions, use | | | | |

A Including filter change

ACEA A5/B5 SAE 0W-30.

Engine oil

Engine oil grade

| | Engine variant | | Volume between MIN-MAX (litres) | Volume ^A (litres) |
|---|----------------|----------------------|------------------------------------|---------------------------------|
| | 2.4 | B5244S5 ^B | 1,3 | 5.5 |
| | 2.4i | B5244S4 ^B | 1,3 | 5.5 |
| Engine oil quality: ACEA A5/B5 Viscosity: SAE 0W | T5 | B5254T7 ^B | 1,3 | 5.5 |
| Volvo recommends Castrol 31202706 | D5 | D5244T8 | 1.5 | 6 |
| F1.00.000 | | D5244T9 | | |
| | | (Only Belgium) | | |
| Oil decal location in engine compartment, see page 201. | | D5244T13 | | |
| Oil grade: ACEA A5/B5 | | | | |
| Viscosity: SAE 0W-30 | | | | |

A Including filter change
B Europe only, for other markets see oil ACEA A3/B3/B4

Fluids and lubricants

Overview



IMPORTANT

The recommended transmission fluid must be used to prevent damage to the gearbox. Do not mix with any other transmission fluid. If the transmission is topped up with a different fluid, contact an authorised Volvo workshop for servicing.

Gearbox oil

| System | Volume (litres) | Recommended oil grade: |
|------------------------|-----------------|-------------------------------|
| 1.6 Manual 5 speed | 2.1 | Transmission fluid: BOT 130 |
| 1.8 Manual 5 speed | 1.9 | Transmission fluid: BOT 130 |
| 1.8F Manual 5-speed | 1.9 | Transmission fluid: BOT 130 |
| 2.0 Manual 5-speed | 1.9 | Transmission fluid: BOT 130 |
| 2.4 Automatic gearbox | 7.75 | Transmission fluid: JWS 3309 |
| 2.4i Manual 5 speed | 2.1 | Transmission fluid: MTF 97309 |
| 2.4i Automatic gearbox | 7.75 | Transmission fluid: JWS 3309 |
| T5 Manual 6 speed | 2.0 | Transmission fluid: MTF 97309 |
| T5 Automatic gearbox | 7.75 | Transmission fluid: JWS 3309 |
| 1.6D Manual 5 speed | 1.9 | Transmission fluid: BOT 130 |
| 2.0D Manual 6 speed | 1.7 | Transmission fluid: BOT 130 |



Fluids and lubricants

| System | Volume (litres) | Recommended oil grade: |
|------------------------|-----------------|------------------------------|
| 2.0D Automatic gearbox | 5.6 | Transmission fluid: BOT 341 |
| D5 Automatic gearbox | 7.75 | Transmission fluid: JWS 3309 |

Fluids

| Fluid | System | Volume (litres) | Recommended oil grade: |
|-------------------------------|-----------------------------------|-----------------|---|
| Coolant | 4-cyl. Petrol (1.6) | 6.2 | Coolant with corrosion inhibitor mixed with water A, |
| | 4-cyl. Petrol (1.8, 1.8F and 2.0) | 7.5 | see packaging. The thermostat starts opening at: |
| | 5-cyl. manual gearbox | 9.5 | petrol engine (1.6) 82 °C 90 °C in petrol engines and at 82 °C in diesel engines |
| | 5-cyl. automatic gearbox | 10.0 | diesel engine (1.6D) 83 °C |
| | 4-cyl. Diesel (1.6D) | 7.2 | |
| | 4-cyl. Diesel (2.0D) | 9.5 | |
| Air conditioning ^B | - | 180 – 200 grams | Compressor oil PAG |
| | | 500 – 600 grams | Refrigerant R134a (HFC134a) |
| Brake fluid | - | 0.6 | DOT 4+ |
| Power steering | - | 1,0 – 1,2 | Power steering fluid: WSS M2C204-A or equivalent product with same specifications. |

Fluids and lubricants

| Fluid | System | Volume (litres) | Recommended oil grade: | |
|--------------|--|-----------------|--|--|
| Washer fluid | 4-cyl. Petrol/Diesel | 4.0 | Use a washer antifreeze recommended by Volvo, | |
| | 5-cyl. Petrol | 6.5 | mixed with water for temperatures below freezing | |
| Fuel tank | See the table below under Consumption, emissions and volume. | | | |

A Water quality must fulfil the standard STD 1285.1.

B Weights may vary depending on the engine variant. Contact an authorised Volvo workshop for the exact information.



Fuel

Consumption, emissions and volume

| | ngine Petrol | Gearbox | Consumption (litre/100 km) | Emissions of carbon dioxide CO ₂ (g/km) | Tank volume (litres) |
|-------------------|-----------------|--------------------------------|-------------------------------|--|-------------------------|
| 1.6 | B4164S3 | Manual 5 speed (IB5) | 7,1 | 169 | approx. 53 |
| 1.8 | B4184S11 | Manual 5 speed (MTX75) | 7.3 | 174 | approx. 53 |
| 1.8F ^A | B4184S8 | Manual 5 speed (MTX75) | 7.4 | 177 | approx. 53 |
| 2.0 | B4204S3 | Manual 5 speed (MTX75) | 7.4 | 176 | approx. 53 |
| 2.4 | B5244S5 | Automatic gearbox (AW55-50/51) | 9.1 | 217 | approx. 62 |
| 2.4i | B5244S4 | Manual 5 speed (M56H) | 8.5 | 203 | approx. 62 |
| 2.4i | B5244S4 | Automatic gearbox (AW55-50/51) | 9.1 | 217 | approx. 62 |
| T5 | B5254T7 | Manual 6 speed (M66) | 8.7 | 208 | approx. 62 |
| T5 | B5254T7 | Automatic gearbox (AW55-50/51) | 9.5 | 227 | approx. 62 |
| T5 AWD | B5254T7 | Manual 6 speed (M66) | 9.6 | 229 | approx. 57 |
| T5 AWD | B5254T7 | Automatic gearbox (AW55-50/51) | 10.1 | 241 | approx. 57 |

A Flexifuel can be driven on any 95 octane unleaded petrol, or bioethanol E85, as well as all possible mixtures of these two fuels. The car consumes approx. 40% more E85 which has a lower energy content.

Fuel

| | Engine Diesel | Gearbox | Consumption (litre/100 km) | Emissions of carbon dioxide CO ₂ (g/km) | Tank volume (litres) |
|------|---------------------------|---------------------------------|-------------------------------|--|-------------------------|
| 1.6D | D4164T (EURO3) (EURO4) | Manual 5 speed (MTX75) | 5.0 | 132 | approx. 52 |
| 2.0D | D4204T (EURO3) | Manual select 6-speed (MMT6) | 5.7 | 153 | approx. 52 |
| 2.0D | D4204T (EURO4) | D4204T 6-speed (MMT6) | 5.8 | 153 | approx. 52 |
| 2.0D | D4204T | Automatic gearbox (MPS6) | 6.0 | 159 | approx. 52 |
| D5 | D5244T8 | Automatic gearbox (AW55-51) | 7.0 | 184 | approx. 60 |
| D5 | D5244T9 (Only Belgium) | Automatic gearbox (AW55-51) | 7.0 | 184 | approx. 60 |
| D5 | D5244T13 | Manual 6 speed (M66) | 6.3 | 166 | approx. 60 |

Fuel consumption and emissions of carbon dioxide

Official fuel consumption figures are based on a standard driving cycle in accordance with EU Directive 80/1268 comb.

Fuel consumption figures may change if the car is equipped with extra equipment that affects the car's weight. The manner in which the car

is driven, and other non-technical factors can also affect fuel consumption.

Consumption is higher and power output lower for fuel with an octane rating of 91 RON.



NOTE

Extreme weather conditions, towing a trailer or driving at high altitudes in combination with fuel grade are factors that could affect the car's performance.



Fuel

General information on fuel



WARNING

Always avoid inhaling fuel fumes and fuel splashing in the eyes.

If fuel gets into your eyes, take out contact lenses if worn and rinse your eyes with plenty of water for at least 15 minutes and seek medical attention.

Never swallow fuel. Fuels such as petrol, bioethanol and mixtures of the two, as well as diesel, are highly toxic and could cause permanent injury or be fatal if swallowed. Seek medical attention immediately if fuel has been swallowed.



IMPORTANT

The use of other fuels for each respective engine type, other than recommended here by Volvo, could cause engine damage and impaired performance.

The use of other fuels also invalidates Volvo's warranties as well as any supplementary service agreement.

Petrol

Petrol must meet the EN 228 standard. Most engines can be run with octane ratings of 91, 95 and 98 RON.

- 91 RON must not be used for 4-cylinder engines and should only be used in exceptional cases with other engines.
- 95 RON can be used for normal driving.
- 98 RON is recommended for optimum performance and minimum fuel consumption.

When driving in temperatures above +38 °C, fuel with the highest possible octane rating is recommended for optimum performance and fuel economy.



IMPORTANT

- Use only unleaded petrol to avoid damaging the catalytic converter.
- In order for the Volvo warranty to apply, never mix alcohol with petrol, the fuel system could be damaged.
- Do not use additives not recommended by Volvo.

Bioethanol E85

Do not modify the fuel system or its components, and do not replace components with parts that are not specially designed for use with bioethanol.



WARNING

Methanol must not be used. A decal on the inside of the fuel filler flap shows the correct alternative fuel.

The use of components not designed for bioethanol engines could cause fire, injury or engine damage.

Reserve fuel can

The reserve fuel can should be filled with petrol, see page 137.



WARNING

Ethanol is sensitive to sparks, and explosive gases could form in the reserve fuel can if it is refuelled with ethanol.

Fuel

Diesel

Diesel must fulfil the FN 590 or JIS K2204 standards.

Diesel engines are sensitive to contaminants, such as excessively high volumes of sulphur particles for example. Only use diesel fuel from well-known producers. Never use diesel of dubious quality.

At low temperatures (-40 °C to -6 °C), a paraffin precipitate may form in the diesel fuel, which can lead to ignition problems. Special diesel fuel designed for low temperatures around freezing point is available from the major oil companies. This fuel is less viscous at low temperatures and reduces the risk of paraffin precipitate.

The risk of condensation in the fuel tank is reduced if the tank is kept well filled. When refuelling, check that the area around the fuel filler pipe is clean. Avoid spilling fuel onto the paintwork. Wash off any spillage with detergent and water.



IMPORTANT

Only ever use fuel that fulfils the European diesel standard.



IMPORTANT

Diesel type fuels which must not be used: special additives, Marine Diesel Fuel, fuel oil, RME1 (Rape Methyl Ester) and vegetable oil. These fuels do not fulfil the requirements in accordance with Volvo recommendations. and generate increased wear and engine damage that is not covered by the Volvo warrantv.



IMPORTANT

For model year 2006 or later the sulphur content must be a maximum of 50 ppm.

Empty tank

No special procedures are required if the tank runs dry. The fuel system is bled automatically if the ignition switch is kept in position II for approx. 60 seconds before the start attempt.

Draining condensation from the fuel filter

The fuel filter separates condensation from the fuel. Condensation can disrupt engine operation.

The fuel filter must be drained at the intervals specified in the Service and Warranty Booklet or if you suspect that the car has been filled with contaminated fuel



IMPORTANT

Certain special additives remove the water separation in the fuel filter.

Diesel particle filter (DPF)

Diesel cars may be equipped with a particle filter, which results in more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving. Socalled "regeneration" is started in order to burn away the particles and empty the filter. This requires the engine to have reached normal operating temperature.

Regeneration of the filter takes place automatically at an interval of approximately 300-900 km depending on driving conditions. Regeneration normally takes between 10 and 20 minutes. It may take a little longer at a low average speed. Fuel consumption may increase slightly during regeneration.

The rear window heating may be activated automatically to increase the load on the engine during regeneration without warning.

Regeneration in cold weather

If the car is frequently driven short distances in cold weather then the engine does not reach normal operating temperature. This means that

¹ Diesel fuel may contain a certain amount of RME, but further amounts must not be added.

Fuel

regeneration of the diesel particle filter does not take place and the filter is not emptied.

When the filter has become approximately 80% full of particles, the yellow information symbol on the instrument panel illuminates, and the message SOOT FILTER FULL SEE OWNER MANUAL is shown on the instrument panel display.

Start regeneration of the filter by driving the car until the engine reaches normal operating temperature, preferably on a main road or motorway. The car should then be driven for approximately 20 minutes more.

When regeneration is complete the message is cleared automatically.



IMPORTANT

If the filter fills up it may be incapable of functioning. Then it can be difficult to start the engine and there is a risk that the filter will have to be replaced.

Use the parking heater* in cold weather so that the engine reaches normal operating temperature more quickly.



Catalytic converter

General

The purpose of the catalytic converter is to purify exhaust gases. It is located in the flow of exhaust gases close to the engine so that it quickly reaches operating temperature. The catalytic converter consists of a monolith (ceramic or metal) with channels. The channel walls are lined with a thin layer of platinum, rhodium and palladium. These metals act as catalysts, i.e. they participate in and accelerate a chemical reaction without being used up themselves.

Lambda-sond[™] oxygen sensor

The Lambda-sond is part of a control system intended to reduce emissions and improve fuel economy.

An oxygen sensor monitors the oxygen content of the exhaust gases leaving the engine. This value is fed into an electronic system that continuously controls the injectors. The ratio of fuel to air directed to the engine is continuously adjusted. Together with the three-way catalytic converter, these adjustments create optimal conditions for efficient combustion of the harmful emissions (hydrocarbons, carbon monoxide and nitrous oxides).

Electrical system

General

12 V system with a voltage-regulated alternator. Single pole system in which the chassis and engine block are used as conductors.

If the battery is changed, replace it with a battery of the same cold start capacity and reserve capacity as the original (see the decal on the battery).

Battery

| Voltage | 4 and 5 cyl. petrol | 4 and 5 cyl. petrol | 4 and 5 cyl. diesel |
|---------------------------|---------------------|---------------------|---------------------|
| Cold start capacity (CCA) | 590 A | 600 A ^A | 700 A ^B |
| Reserve capacity (RC) | 100 min | 120 min | 135 min |
| Capacity (Ah) | 60 | 70 | 80 |

A Cars equipped with High Performance audio system.

Bulbs

| Lighting | Output (W) | Туре |
|--|------------|-------|
| Dipped beam | 55 | H7 |
| Main beam (specifically for halogen) | 55 | H9 |
| Extra main beam (specifically for Bi Xenon® and ABL) | 55 | H7 |
| Brake lights, reversing lamps, rear fog lamp | 21 | P21W |
| Front direction indicators (specifically for Bi Xenon® and halogen), rear direction indicators | 21 | PY21W |
| Front direction indicators (specifically for ABL) | 24 | PY24W |

^B Cars equipped with diesel, keyless drive, Premium Sound audio system, fuel-driven heater or RTI.



Electrical system

Lighting Output (W) Type Rear position/parking and side marker lamps 5 P21/5W (upper socket) Rear position/parking lamps (lower socket) R5W 5 Courtesy lighting, cargo area lighting, number 5 C5W plate lighting Vanity mirror* 1.2 Tubular lamp Front position/parking lamps, front side marker 5 W5W lamps Fog lamps 35 Н8 Tubular lamp Glovebox lighting 3



Type approval

Remote control system

| nemote control system | | | |
|---|---|--|--|
| Country and region | | | |
| A, B, CY, CZ, D, DK, E, EST, F, FIN, GB, GR, H, I, IRL, L, LT, LV, M, NL, P, PL, S, SK, SLO | Delphi hereby certifies that this remote control system conforms to the | | |
| IS, LI, N, CH | essential character- istic requirements | | |
| HR | and other relevant regulations of direc- tive 1999/5/EC. | | |
| ROK | Delphi 2003-07-15, Germany R- LPD1-03-0151 | | |
| BR | 008-00-2149 008-00-2149 0107894476017746 | | |
| TW | ETC093LPD0155 | | |

Certification of the Keyless Drive system

Siemens VDO Automotive A.G. hereby certifies that this equipment type 5WK4 8952, 5WK48956, 5WK48812 conforms to the essential characteristic requirements and other relevant regulations of Directive 1999/5/EC.

| A | |
|--|----------|
| A/C | |
| electronic climate control manual climate control | |
| ABS fault | 7, 147 |
| Active Bi-Xenon® Lights | 54 |
| Active headlamps | 54 |
| Adaptation | . 138 |
| Adjusting headlamp patternBi-Xenon® headlampHalogen headlamp | . 169 |
| AF – automatic frequency update | . 235 |
| Airbagactivating/deactivating, PACOSdeactivating/activatingdriver's and front passenger side | 23 23 |
| Air conditioning | 87 |
| Air distribution | |
| Air distribution, A/C | 85 |
| Air quality system, ECC | 88 |
| Air vents | 83 |

| Alarmalarm indicatorarming | 126 126 126 |
|---------------------------------|-------------------|
| automatic alarm activation | 127 |
| deactivating a triggered alarm | 127 |
| disarming | 126 |
| 3 | 233 |
| reduced alarm level | 127 |
| testing the alarm system | 128 |
| All-wheel drive, AWD | 146 |
| Antenna location, Keyless drive | 120 |
| Approach light, durationsetting | |
| Audio, see also Sound | 228 |
| Audio volume | |
| phone 245, | 253 |
| phone/media player | 253 |
| ring signal, phone | 253 |
| AUTO | |
| climate control settings | 87 |
| storing stations | 232 |
| AUTO CLIMATE | 87 |
| Automatic car washes | 190 |

| Automatic gearbox manual gear positions (Geartronic) towing and recovery trailer | 142 157 160 |
|--|-------------------|
| Automatic locking | 123 |
| Automatic relocking | 122 |
| Autostart | 135 |
| auto volume control | 231 |
| Auxiliary heater | . 95 |
| Average fuel consumption | . 57 |
| AWD, All-wheel drive | 146 |
| В | |
| Backrest | |
| front seat, lowering | . 98 |
| Backrest rear seat, lowering | 106 |
| Bag holder | 111 |
| Bass speaker | 230 |
| Battery | 208 |



| specifications | 277 |
|---|------|
| start assistance | 159 |
| symbols on the battery | 208 |
| Blind spot (BLIS) | 153 |
| Blind Spot Information System, BLIS 72, | 153 |
| Bluetooth | |
| handsfree | 251 |
| mute microphone | 252 |
| transfer call to mobile | 252 |
| Bonnet, opening | 200 |
| Booster cushion | |
| folding up | . 35 |
| lowering | 36 |
| Booster cushion, integrated | 35 |
| Brake and clutch fluid | 204 |
| Brake light | . 55 |
| Brakes | |
| Anti-lock braking system, ABS | 147 |
| brake light | . 55 |
| Emergency brake assistance, EBA | 148 |
| Emergency brake light, EBL | . 55 |
| handbrake | 66 |
| Brake system | 147 |
| Bulb holder | |
| removal | 213 |

| Buids | | |
|------------------------------|------|------|
| changing | | 210 |
| Bulbs, see Lighting | 210, | 277 |
| | | |
| | | |
| [| | |
| Calls | | |
| functions during a call | 244, | 247 |
| incoming | | 252 |
| operation | 244, | 252 |
| volume in phone | | 245 |
| Car care | | 190 |
| Car care, leather upholstery | | 192 |
| Cargo area | | 108 |
| cargo cover | | |
| lighting | | 101 |
| loading | | 168 |
| safety grille | | 108 |
| safety net | 108, | 110 |
| Cargo cover | 109, | 110 |
| Car settings | | . 75 |
| Car upholstery | | 192 |
| Car wash | | 190 |
| Catalytic converter | | 276 |
| recovery | | 157 |

| CD discs | |
|---|----------|
| storage compartment | 10 |
| CD functions | 23 |
| Checking and topping up the coolant | 20 |
| Checks fluids and oils | 20 |
| Children | 3 |
| child safety locks | 12 |
| child seats and side airbags | 2 |
| location in the car | |
| location in the car, tablesafety | |
| Child safety locks | 12 |
| Child seat | 3 |
| Child seats ISOFIX fixture system for child seats | _ |
| Cigarette lighter socket front seat | 5 |
| Cleaning | |
| automatic car washes | 19 |
| car wash | 19 |
| rims | 19 |
| seatbeltsupholstery | 19 19 |
| | |



| Climate control |
|---|
| general 82 |
| personal preferences |
| Climate control settings |
| AUTO 87 |
| Clock, adjustment |
| Clutch fluid, checking & topping up 204 |
| Coat hanger 103 |
| Cold start |
| automatic gearbox 144 |
| Collision |
| crash mode 31 |
| Inflatable Curtain, IC |
| Colour code, paint |
| Combined instrument panel 45 |
| Compass |
| calibration69 |
| setting the zone |
| Condensation in headlamps 190 |
| Coolant |
| Cooling system |
| Crash, see Collision |
| Cruise control |
| |

| Ŋ |
|---|
| Deadlocks |
| temporary deactivation 123 |
| Defroster |
| Diesel |
| Diesel: engine preheater 47 |
| Diesel particle filter |
| Direction indicators 56 |
| Disc text |
| Disengaging the gear selector inhibitor 144 |
| Display, messages 50 |
| Display lighting 54 |
| Dolby Surround Pro Logic II 226, 230 |
| Door mirrors |
| Driver's door control panel 44, 67 |
| Driving |
| cooling system 132 |
| economical132 |
| in water 132 |
| slippery driving conditions 132 |
| with trailer |
| Driving in water |

| Driving with a trailer towball load towing capacity DSTC, see also Stability control system DSTC, see also Stability system symbol | 149 | | |
|--|------|--|--|
| During a call, functions | | | |
| E | | | |
| ECC, electronic climate control | . 83 | | |
| Economical driving | 132 | | |
| ECO pressuretable | | | |
| Electrical socket cargo area centre console rear seat | . 52 | | |
| Electrical system | 277 | | |
| Emergency calls | 242 | | |
| Emergency equipment warning triangle | 179 | | |
| Emergency puncture repair | 183 | | |



| Emission control |
|-----------------------------------|
| fault indicator 47 |
| Engine block heater |
| Engine compartment |
| Engine oil |
| adverse driving conditions 264 |
| capacities |
| filter 201 |
| oil grade 264 |
| oil pressure |
| Engine specifications |
| Entry, keyless |
| EON - Enhanced Other Networks 235 |
| Equalizer |
| Error messages in BLIS 155 |
| Expectant mothers, seatbelt |
| External dimensions |

| F |
|---|
| Fan |
| A/C 8 ECC 8 |
| Fast-wind23 |
| First aid equipment 18 |
| Flexifuel |
| Floor mats 9 |
| Fluids, capacities 26 |
| Fluids and oils 201, 26 |
| Fluids and oils, checks, engine compartment |
| Fluids and oils general 20 |
| Fog lamps rear5 |
| Fog lamps, on/off5 |
| Frequency update, automatic 23 |
| Front seats, heated 8 |
| Fuel |
| fuel consumption, display 5 |
| fuel economy |
| level indicator 4 |

| parking heater | . 92 |
|--------------------------------------|------|
| refuelling | |
| Fuses | 217 |
| box in the engine compartment | 218 |
| changing | 217 |
| general | 217 |
| relay/fuse box in the passenger com- | |
| partment | 221 |
| | |
| | |
| G | |
| Gearbox | |
| manual | 140 |
| Gear selector inhibitor | 143 |
| Geartronic | 142 |
| Glovebox | 103 |
| locking | 116 |
| Gross vehicle weight | 260 |
| | |
| П | |
| П | |
| Handbrake | . 66 |
| Hazard warning flashers | . 65 |
| ~ | |

12 Alphabetical Index

| (| ש |
|---|---|
| | |
| | |
| | |

| Head restraint |
|--|
| Heating front seats |
| High-pressure headlamp washing 59 |
| HomeLink® EU 77 |
| Home safe lighting |
| <u> </u> |
| IDIS – Intelligent Driver Information System |
| |
| Ignition keys |
| IMEI number |
| Immobiliser |
| Inflatable Curtain |
| Information display 50 |
| Infotainment system |
| menus 226 |

Instrument lighting...... 54

| Instrument overview | |
|---------------------------------------|-----|
| left-hand drive | |
| right-hand drive | 42 |
| Integrated booster cushion | 35 |
| Interior lighting, see Lighting | 100 |
| Interior rearview mirror | 69 |
| automatic dimming | 69 |
| Intermittent wiping | 59 |
| iPod, connection | 229 |
| ISOFIX fixture system for child seats | 36 |
| | |
| | |
| J | |
| Jack | 179 |
| | |
| | |
| K | |
| Kada watahi | 000 |
| Kerb weight | 260 |
| Key | |
| keyless lock and ignition system | 118 |
| remote control key | |
| Key blade | 119 |

| Keyless drive 118, 139 | , 279 | | | |
|---|-------|--|--|--|
| starting the car | 139 | | | |
| Keyless entry Keyless start (keyless drive) | | | | |
| | | | | |
| Kick-down | | | | |
| automatic gearbox | | | | |
| I | | | | |
| | | | | |
| Lambda-sond | 276 | | | |
| Leather upholstery, washing instructions | 192 | | | |
| Lighting | | | | |
| Active Bi-Xenon® Lights, ABL | 54 | | | |
| approach light, duration | 72 | | | |
| automatic lighting | 101 | | | |
| automatic lighting, dipped beam | 53 | | | |
| bulbs, specifications | 277 | | | |
| cargo area | 101 | | | |
| dipped beam | 53 | | | |
| display lighting | 54 | | | |
| front fog lamps | | | | |
| headlamp levelling | | | | |
| home safe lighting 5 | | | | |
| in passenger compartment | 100 | | | |



| lighting panel, passenger compartment | 5, 56 53 100 54 210 215 215 | Locking/unlocking. 122 inside. 122 outside. 122 Locks Locking. 122 Lubricants. 268 Lubricants, capacities. 268 |
|---|---|--|
| direction indicators | | M |
| fog lamp front main beam halogen number plate lighting parking lamps position lamps | 210 211 214 212 212 | Main/dipped beam, see Lightning |
| side marker lamps | | self-maintenance |
| vanity mirror | 215 | Making calls 244, 252 |
| Loading general load capacity | 168 168 | Manual gearbox |
| load retaining eyelets | 110 | Manual gear positions (Geartronic) 142 |
| Load retaining eyelets | 110 | Memory function in seats |
| Lockingunlocking | | Menus audio system |

| Menu structure | 75 240 |
|--|----------------------|
| p | 249 248 |
| Messages in BLIS | 155 |
| Messages in the information display | 50 |
| Meters in the combined instrument panel fuel gauge outside temperature gauge speedometer | 45 45 45 45 |
| trip meter | 45 |
| Misting attending to the windows condensation in headlamps rear window removing with defroster function 85, timer function | 85 88 |
| handsfree | 253 251 251 |
| N | |
| NEWS | 221 |

| Oil, see also Engine oil 202, 26 | 34 |
|----------------------------------|----------------------------|
| One-key dial 24 | 46 |
| Oxyhydrogen gas 15 | 59 |
| | |
| P | |
| PACOS | 23 |
| PACOS, switch | 23 |
| Paintwork colour code | |
| . a g acciotanto ciminanti in | 51 52 |
| Parking brake | 36 |
| general | 92 92 92 93 94 |
| Particle filter | 74 |
| Passenger compartment filter 8 | 82 |
| | |

| Personal preferences | . 75 |
|-----------------------------|------|
| approach light, duration | . 76 |
| auto blower adjust | . 75 |
| automatic locking | . 76 |
| doors unlock | . 76 |
| home safe lighting | . 76 |
| keyless entry | . 76 |
| lock confirm. light | . 75 |
| recirculation timer | . 75 |
| unlock confirm. light | . 75 |
| Petrol grade | 273 |
| Phone | |
| calling from the phone book | 246 |
| connect | 253 |
| controls | 243 |
| entering text | 245 |
| handsfree | 25 |
| incoming calls | 252 |
| making calls | 252 |
| on/off | 244 |
| one-key dial | 246 |
| phone book | 254 |
| phone book, shortcut | 254 |
| receiving a call | 252 |
| register phone | 25 |
| standby, standby mode | 244 |
| traffic safety | 243 |
| | |

| Phone book handling numbers | 245 |
|--|------|
| | |
| Phone system | |
| Pinch protection, sunroof | |
| Polishing | 191 |
| Power seat | . 99 |
| Power steering fluid, checking and topping | ı |
| up | 205 |
| Power sunroof | 73 |
| Power windows | 67 |
| blocking | 68 |
| passenger seat | |
| rear seat | . 68 |
| Programme type | 235 |
| PTY - Programme type | 234 |
| Puncture, see Tyres 179, | 181 |
| Putting calls on hold | 244 |
| R | |
| Radio | |
| EON | 235 |
| frequency update | 235 |
| NEWC | 004 |



| programme types | 233 |
|-----------------------------------|------|
| radio settings | 232 |
| radio stations | 232 |
| REG | 235 |
| Radio text | 235 |
| Rain sensor | 60 |
| Random, CD and audio files | 238 |
| RDS functions | 233 |
| resetting | 236 |
| Reading lamps, see Lighting | 100 |
| Rearview and door mirrors | |
| automatic retracting/extending 71 | , 75 |
| compass | 69 |
| door | 71 |
| electrically retractable | 71 |
| heating | 72 |
| interior | 69 |
| Recirculation | |
| A/C | 84 |
| ECC | 88 |
| Reduced guard | |
| settings | 75 |
| Refrigerant | 82 |
| | |

| 13 |
|-----|
| 13 |
| 13 |
| 24 |
| 23 |
| 21 |
| 11 |
| 11 |
| . 7 |
| 12 |
| |
| 12 |
| 11 |
| 27 |
| . 7 |
| |
| 14 |
| 14 |
| |
| 19 |
| 19 |
| |

| Safety | |
|------------------------------|---|
| safety systems, table | 3 |
| Safety grille1 | 0 |
| Safety net 108, 1 | 1 |
| SCAN | |
| CD and audio files | |
| Seatbelt | |
| pregnancy | |
| seatbelt tensioner | 1 |
| Seatbelt reminder | 1 |
| Seatbelts | 1 |
| Seats | |
| head restraints, rear 1 | 0 |
| lowering the front backrest | 9 |
| lowering the rear backrest 1 | |
| manual setting | |
| power seat | 9 |
| Service programme19 | 9 |
| Side airbags | 2 |
| SIM card2 | 4 |
| SIPS hags | 2 |



| SMS | 247 |
|---------------------------------------|------|
| read | 247 |
| write | 247 |
| Soot filter 50, | 274 |
| SOOT FILTER FULL | 274 |
| Sound | |
| audio settings 228, | 230 |
| audio source | 228 |
| volume | 228 |
| Spare wheel | 179 |
| Temporary spare 174, | 179 |
| Spin control | 149 |
| SRS AIRBAG | . 20 |
| SRS system | . 20 |
| general | . 20 |
| Stability and traction control system | 149 |
| Stains | 192 |
| Standby, phone | 244 |
| Start assistance | 159 |
| Starting the engine | 135 |
| keyless drive 118, | 139 |
| Steering lock | 135 |
| | |

| Steering wheel |
|--|
| cruise control 62 |
| keypad 62, 64, 243 |
| steering wheel adjustment |
| Stone chips and scratches 193 |
| Storage compartment 102 |
| CD discs |
| Storage spaces in the passenger compart- |
| ment 102 |
| Storing stations, manual and automatic 232 |
| Subwoofer |
| Sunroof 73 |
| opening and closing 73, 74 |
| pinch protection 74 |
| sunscreen74 |
| ventilation position 73 |
| Sunscreen, sunroof |
| Surround |
| Symbols |
| indicator symbols 47, 48 |
| warning symbols 46 |
| Symbols and display messages |
| parking heater 93 |

| Failgate driving with open tailgate locking/unlocking | |
|--|--------------------------|
| Femperature actual temperature | |
| passenger compartment, electronic cli- mate controlpassenger compartment, manual cli- | |
| mate control | . 86 |
| Testing the alarm system | 128 |
| Fimer A/C | |
| ECC | |
| Tools | 179 |
| Fotal airing function | 122 |
| Fowbar, see Towing equipment | 162 |
| Fowingtowing eye | 157 158 |
| Fowing capacity | 260 |
| Fowing equipment installation removing specifications | 162 164 166 163 |

Towing eye...... 158

A-Z

| TP – Traffic information |
|--|
| Traffic information |
| Trailer |
| Trip computer 57 |
| Tuning Radio |
| Type approved, remote control system 279 |
| Type designation |
| Tyres direction of rotation |
| U |
| Unlocking |
| USB, connection |
| |

| V |
|--|
| Ventilation |
| Vibration damper 16 |
| Volume audio system |
| W |
| Warning lamp |
| stability and traction control system 14 |
| Warning symbol, AIRBAG system 19 |
| Warning triangle 179 |
| Washer fluid, filling |
| Washers |
| headlamps59 |
| rear window 6 |
| washer fluid, filling 203 |
| windscreen59 |
| Water and dirt-repellent coating 72 |
| Water-repellent surface, cleaning 19 |

Waxing...... 191

| Weights | |
|----------------------------|------|
| 9 | 260 |
| kerb weight | 260 |
| Wheels | |
| changing | 181 |
| installation | 182 |
| removal | 181 |
| rims | 174 |
| snow chains | 173 |
| spare wheel | 179 |
| Whiplash injury | . 28 |
| Whiplash injury, WHIPS | 28 |
| WHIPS | |
| child seat/booster cushion | . 28 |
| whiplash injury | 28 |
| Windscreen wipers | 59 |
| rain sensor | 60 |
| Winter tyres | 175 |
| Wiper | |
| rear window | 60 |
| Wiper blades | 206 |
| cleaning | 206 |
| replacing, rear window | 206 |
| replacing, windscreen | 206 |
| | |



| Notes |
|-------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



| Notes |
|-------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |



| Notes |
|-------|
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |



| Notes | |
|-------|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

Volvo. for life