

OWNERS MANUAL

Web Edition





DEAR VOLVO OWNER

THANK YOU FOR CHOOSING VOLVO

We hope you will enjoy many years of driving pleasure in your Volvo. The car has been designed for the safety and comfort of you and your passengers. Volvo is one of the safest cars in the world. Your Volvo has also been designed to satisfy all current safety and environmental requirements. In order to increase your enjoyment of the car, we recommend that you familiarise yourself with the equipment, instructions and maintenance information contained in this owner's manual.



Table of contents

00 Introduction

Important information	10
Volvo and the environment	13



01 Safety

UT Salety	
Seatbelts	18
Symbols, airbags	21
Airbags	22
Activating/deactivating the airbag*	24
Side airbags (SIPS bags)	26
Inflatable Curtain (IC)	28
WHIPS	29
Roll-over protection - ROPS	31
When the systems deploy	32
Child safety	33



02 Instruments and controls

Overview, left-hand drive car	44
Overview, right-hand drive car	46
Driver's door control panel	48
Combined instrument panel	49
Indicator and warning symbols	51
Information display	54
Switches in the centre console	55
Lighting panel	58
Left-hand stalk switch	60
Trip computer*	61
Right-hand stalk switch	63
Cruise control*	65
Parking brake, electrical socket, etc	67
Power windows	69
Windows, rearview and door mirrors	71
Power sunroof*	76
HomeLink [®] *	78

Table of contents





03 Climate control

General information on climate control	84
Electronic Climate Control, ECC	88
Fuel-driven parking heater*	91



04 Interior

Front seats	. 96
Front seats - Executive	. 99
Interior lighting	100
Storage spaces in the passenger com- partment	102
Storage spaces in the passenger com- partment - Executive	107
Rear seat	108
Loading	110
Cargo area	111





05 Locks and alarm

Remote control key - key with remote con- trol.	
Locking and unlocking	122
Child safety locks	125
Alarm*	127





06 Starting and driving

General	132
Refuelling	134
Starting the engine	140
Manual gearbox	142
Automatic gearbox	143
All-wheel drive*	146
Brake system	147
Stability and traction control system*	149
Parking assistance*	151
Blind Spot Information System - BLIS*	153
Towing and recovery	157
Start assistance	159
Driving with a trailer	160
Towing equipment*	162
Detachable towbar*	164
Adjusting headlamp pattern	168



07 Wheels and tyres

General	174
Tyre pressure	177
Warning triangle* and spare wheel *	179
Changing wheels	182
Emergency puncture repair*	184





08 Car care

Cleaning	190
Touching up paintwork	194
Rustproofing	195

Table of contents



(01 10 (00 11



09 Maintenance and service

Volvo service	198
Self-maintenance	199
Bonnet and engine compartment	201
Oils and fluids	203
Wiper blades	207
Battery	209
Replacing bulbs	211
Fuses	218



10 Infotainment system

General	232
Control panels, audio	233
Audio system functions	236
Radio functions	240
CD functions	246
Menu structure – audio system	248
Phone functions*	249
Menu structure – phone	256
Bluetooth handsfree*	259
RSE - Rear Seat Entertainment system - Dual Screen*	265



11 Specifications

Type designation	272
Dimensions and weights	274
Engine specifications	276
Engine oil	277
Fluids and lubricants	279
Fuel	281
Catalytic converter	283
Electrical system	284
Type approval	286
Symbols in the display	287



Table of contents



Table of contents(1)



Important information

Reading the Owner's Manual

Introduction

A good way of getting to know your new car is to read the owner's manual, ideally before your first journey. This will give you the opportunity to familiarise yourself with new functions, to see how best to handle the car in different situations, and to make the best use of all the car's features. Please pay attention to the safety instructions contained in the manual.

The specifications, design features and illustrations in this owner's manual are not binding. We reserve the right to make modifications without prior notice.

© Volvo Car Corporation

Option

All types of option/accessory are marked with an asterisk*.

In addition to standard equipment, this manual also describes options (factory fitted equipment) and certain accessories (retrofitted extra equipment).

The equipment described in the owner's manual is not available in all cars - they have different equipment depending on adaptations for the needs of different markets and national or local laws and regulations. In the event of uncertainty over what is standard or an option/accessory, contact a Volvo dealer.

Special texts

🚹 WARNING

Warning texts advise of a risk of personal injury.

IMPORTANT

Important texts advise of a risk of material damage.

i note

NOTE texts give advice or tips that facilitate the use of features and functions for example.

Footnote

There is footnote information in the owner's manual that is located at the bottom of the page. This information is an addition to the text that it refers to via a number. If the footnote refers to text in a table then letters are used instead of numbers for referral.

Message texts


There are displays in the car that show text messages. These text messages are high-

lighted in the owner's manual by means of the text being slightly larger and printed in grey. Examples of this are in menu texts and message texts on the information display (e.g. Audio mode).

Decals

The car contains different types of decal which are designed to convey important information in a simple and clear manner. The decals in the car have the following descending degree of importance for the warning/information.

Warning for personal injury

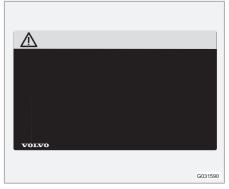

Black ISO symbols on yellow warning field, white text/image on black message field. Used to indicate the presence of danger which, if the


Important information

warning is ignored, may result in serious personal injury or fatality.

Risk of property damage



White ISO symbols and white text/image on black or blue warning field and message field. Used to indicate the presence of danger which, if the warning is ignored, may result in damage to property.

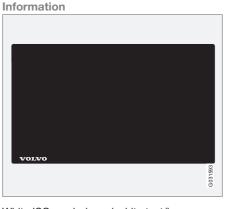

White ISO symbols and white text/image on black message field.

i) NOTE

The labels shown in the owner's manual are not provided as exact reproductions of those in the car. The purpose is to show their approximate appearance and location in the car. The information that applies to your car in particular is available on the label in question in your car.

Procedure lists

Procedures where action must be taken in a certain sequence are numbered in the owner's manual.

- When there is a series of illustrations for step-by-step instructions each step is numbered in the same way as the corresponding illustration.
- A There are numbered lists with letters adjacent to the series of illustrations where the order of the instructions is not significant.
- Arrows appear numbered and unnumbered and are used to illustrate a movement.

If there is no series of illustrations for step-bystep instructions then the different steps are numbered with normal numbers.

Position lists

1 Red circles containing a number are used in overview images where different components are pointed out. The number recurs in the position list featured in connection with the illustration that describes the item.

Bulleted lists

A bulleted list is used when there is a list of points in the owner's manual.

Example:

Important information

- Coolant
- Engine oil

To be continued

>> This symbol is located furthest down to the right when a section continues on the following page.

Recording data

The driving and safety systems in the car use computers which check and share information with each other on the car's function. One or more of these computers may store information on the systems they check during normal driving, during the course of a collision or nearcollision. Stored information may be used by:

- Volvo Car Corporation
- Service or repair workshops
- Police or other authorities
- Other parties who claim legal entitlement for access to the information or someone who has permission from the owner to access the information.

Accessories and extra equipment

The incorrect connection and installation of accessories can negatively affect the car's electrical system. Certain accessories only function when their associated software is installed in the car's computer system. We therefore recommend that you always contact an authorised Volvo workshop before installing accessories which are connected to or affect the electrical system.

Information on the Internet

At www.volvocars.com there is further information concerning your car.

Introduction

Volvo and the environment

Volvo Cars' environmental philosophy



Environmental care is one of Volvo Car Corporation's core values which influence all operations. We also believe that our customers share our consideration for the environment.

Your Volvo complies with strict international environmental standards and is also manufactured in one of the cleanest and most resourceefficient plants in the world. Volvo Car Corporation has global ISO certification, which includes the environmental standard ISO 14001 covering all factories and several of our other units. We also set requirements for our partners so that they work systematically with environmental issues.

Fuel consumption

Volvo cars have competitive fuel consumption in each of their respective classes. Lower fuel consumption generally results in lower emission of the greenhouse gas, carbon dioxide.

It is possible for the driver to influence fuel consumption. For more information read under the heading, **Reducing environmental impact**.

Efficient emission control

Your Volvo is manufactured following the concept "Clean inside and out" – a concept that encompasses a clean interior environment as well as highly efficient emission control. In many cases the exhaust emissions are well below the applicable standards.

Clean air in the passenger compartment

A passenger compartment filter prevents dust and pollen from entering the passenger compartment via the air intake.

A sophisticated air quality system, IAQS* (Interior Air Quality System) ensures that the incoming air is cleaner than the air in the traffic outside.

The system consists of an electronic sensor and a carbon filter. The incoming air is monitored continuously and if there is an increase in

Volvo and the environment

the level of certain unhealthy gases such as carbon monoxide then the air intake is closed. Such a situation may arise in heavy traffic, queues and tunnels for example.

The entry of nitrous oxides, ground-level ozone and hydrocarbons is prevented by the carbon filter.

Textile standard

The interior of a Volvo is designed to be pleasant and comfortable, even for people with contact allergies and for asthma sufferers. Extreme attention has been given to choosing environmentally-compatible materials. This means that they also fulfil the requirements in the Oeko-Tex 100 standard¹, a major advance towards a healthier passenger compartment environment.

Oeko-Tex certification covers seatbelts, carpets and fabrics for example. The leather in the upholstery undergoes chromium-free tanning with plant substances and fulfils the certification requirements.

Volvo workshops and the environment

Regular maintenance creates the conditions for a long service life and low fuel consumption for your car. In this way you contribute to a cleaner environment. When Volvo's workshops are entrusted with the service and maintenance of your car it becomes part of our system. We make clear demands regarding the way in which our workshops are designed in order to prevent spills and discharges into the environment. Our workshop staff have the knowledge and the tools required to guarantee good environmental care.

Reducing environmental impact

You can easily help reduce environmental impact, for example, by driving economically and by servicing and maintaining the car according to the instructions in the owner's manual.

The following additional advice will help you to do your bit for the environment (for further advice on how you can reduce environmental impact and drive economically, see page 132):

- Decrease fuel consumption by choosing ECO tyre pressure, see page 177.
- A roof load and ski box increase air resistance, leading to higher fuel consumption. Remove them directly after use.
- Remove unnecessary items from the car. The greater the load the higher the fuel consumption.
- If the car is equipped with an engine block heater, always use it before starting from

cold. This reduces fuel consumption and exhaust emissions.

- Drive gently and avoid braking too hard.
- Drive in the highest gear possible. Low engine speeds result in lower fuel consumption.
- Use engine braking to slow down.
- Avoid letting the engine idle. Pay attention to local regulations. Switch off the engine when stationary for longer periods.
- Always dispose of environmentally hazardous waste, such as batteries and oils, in an environmentally safe manner. We recommend that you consult an authorised Volvo workshop for advice if you are uncertain about the disposal of this type of waste.
- Service your car regularly.
- High speed increases consumption considerably due to increased wind resistance. A doubling of speed increases wind resistance 4 times.

These hints will help reduce fuel consumption without increasing travel time or lessening the enjoyment of driving. Apart from being kind to your car, you'll be saving money - and the Earth's resources.

¹ More information on www.oekotex.com

Volvo and the environment

Recycling

As a part of Volvo's environmental work, it is important that the car is recycled in an environmentally sound manner. Almost all of the car can be recycled. The last owner of the car is therefore requested to contact a dealer for referral to a certified/approved recycling facility.

The owner's manual and the environment

The FSC symbol shows that the paper pulp in this publication comes from FSC certified forests or other controlled sources.



Mixed Sources

Product group from well-managed forests and other controlled sources www.fsc.org Cert no. SW-COC-001344 © 1996 Forest Stewardship Council

18
21
22
24
26
28
29
31
32
33




(

SAFETY



Seatbelts

Always use a seatbelt

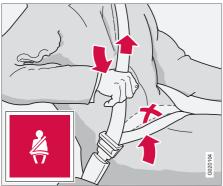

Tensioning the hip strap. The belt must be positioned low down.

Heavy braking can have serious consequences if the seatbelts are not used. Ensure that all passengers use their seatbelts. It is important that the seatbelt lies against the body so it can provide maximum protection. Do not lean the backrest too far back. The seatbelt is designed to protect in a normal seating position.

Putting on a seatbelt:

 Pull the seatbelt out slowly and secure it by pressing the buckle into the lock. A loud "click" indicates that the seatbelt has locked.

Releasing the seatbelt

 Press the red lock button and then let the seatbelt retract. If the seatbelt does not retract fully, feed the seatbelt in by hand so that it does not hang loose.

The seatbelt locks and cannot be withdrawn

- if it is pulled out too quickly
- during braking and acceleration
- if the car leans heavily.

Keep in mind the following

- do not use clips or anything else that can prevent the seatbelt from fitting properly
- ensure that the seatbelt is not twisted or caught on anything
- the hip strap must be positioned low down (not over the abdomen)
- tension the hip strap over the lap by pulling the diagonal shoulder belt as illustrated.

🔥 WARNING

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

Each seatbelt is designed for only one person.

🚹 WARNING

Never modify or repair the seatbelts yourself. Volvo recommends that you contact an authorised Volvo workshop. If a seatbelt has been subjected to a major load, such as in conjunction with a collision, the entire seatbelt must be replaced. Some of the protective characteristics of the seatbelt may have been lost, even if it appears to be undamaged. In addition, replace the seatbelt if the belt is worn or damaged. The new seatbelt must be type-approved and intended for installation in the same position as the replaced seatbelt.

01

Seatbelts

01

Seatbelts and pregnancy




The seatbelt should always be worn during pregnancy. But it is crucial that it be worn in the correct way. The diagonal section should wrap over the shoulder then be routed between the breasts and to the side of the abdomen.

The lap section should lay flat over the thighs and as low as possible under the abdomen. – It must never be allowed to ride upward. Remove the slack from the seatbelt and ensure that it fits as close to the body as possible. In addition, check that there are no twists in the seatbelt.

As a pregnancy progresses, pregnant drivers should adjust their seats and steering wheel such that they can easily maintain full control of the vehicle as they drive (which means they must be able to easily operate the foot pedals and the steering wheel). Within this context, they should strive to position the seat with as large a distance as possible between the abdomen and the steering wheel.

Seatbelt reminder

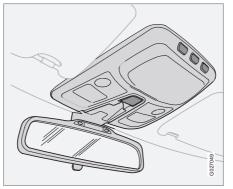

An acoustic signal and indicator lamp remind the driver and front seat passenger to use a seatbelt if either of them is not wearing one. The audio reminder is speed dependent (at low speeds), and time dependent (when the car is started). The visual reminder is located in the roof console and in the combined instrument panel.

i) NOTE

The seatbelt reminder is intended for an adult sitting in the front seat. If a belt-fitted child seat is fitted in the front seat, the seatbelt reminder does not switch on.

Certain markets

An acoustic signal and indicator lamp remind the driver if not wearing a seatbelt to use one. At low speed, the audio reminder will sound for the first 6 seconds.

Seatbelt tensioner

All the seatbelts (except the centre rear seatbelt) are equipped with seatbelt tensioners. A mechanism in the seatbelt tensioner tightens the seatbelt around the body in the event of a sufficiently violent collision. The seatbelt then provides more effective restraint for the occupants.




Seatbelts

Never insert the tongue of the passenger's seatbelt into the buckle on the driver's side. Always insert the tongue of the seatbelt into the buckle on the correct side. Do not make any damages on seatbelts nor insert any foreign objects into a buckle. The seatbelts and buckles would then possibly not function as intended in the event of a collision. There is a risk of serous injury.

01

Symbols, airbags

Warning symbol on the combined instrument panel

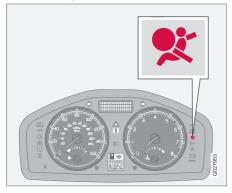

The warning symbol in the combined instrument panel illuminates when the remote control key is turned to key position **I**, **II** or **III**. The symbol goes out after approx. 6 seconds provided the airbag system is fault-free.



 \triangle

As well as the warning symbol, a message may appear on the display in appropriate cases. If the warning symbol malfunctions, the warning triangle illuminates and the message **SRS AIRBAG SERVICE. URGENT** appears in the display. Volvo recommends that you contact an authorised

Volvo workshop immediately.


📐 WARNING

If the warning symbol for the airbag system remains illuminated or illuminates while driving, it means that the airbag system does not have full functionality. The symbol may indicate a fault in the seatbelt tensioner system, the SIPS, SRS or IC systems. Volvo recommends that you contact an authorised Volvo workshop immediately.




Airbags

Airbag system

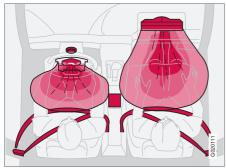

SRS system, left-hand drive.

The system consists of airbags and sensors. A sufficiently violent collision trips the sensors and the airbag(s) are inflated with hot gas. To cushion the impact, the airbag deflates when compressed. When this occurs, smoke escapes into the car. This is completely normal. The entire process, including inflation and deflation of the airbag, takes place within tenths of a second.

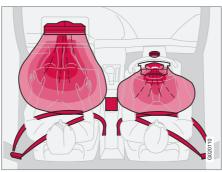

SRS system, right-hand drive

\Lambda WARNING

Volvo recommends that you contact an authorised Volvo workshop for repair. Defective work in the airbag system could cause malfunction and result in serious personal injury.

NOTE


The sensors react differently depending on the course of the collision and whether the seatbelts on the driver's side and passenger side are in use.

It is therefore possible that only one (or none) of the airbags may inflate in a collision. The SRS system senses the force of the collision on the car and adapts accordingly so that one or more airbags is deployed.

The airbags have a function whereby their capacities are adapted to the collision force to which the car is subjected.

Airbags

01

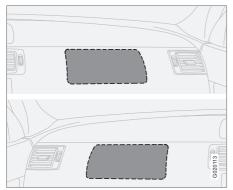

Location of the passenger airbag in left-hand drive and right-hand drive cars.

\Lambda WARNING

Do not put objects in front of or above the instrument panel where the passenger airbag is located.

Airbag on the driver's side

The car has an airbag to supplement the protection afforded by the seatbelt on the driver's side. It is folded up into the centre of the steering wheel. The steering wheel is marked **SRS AIRBAG**.

🚹 WARNING

The seatbelts and airbags interact. If a seatbelt is not used or is used incorrectly, this may diminish the protection provided by the airbag in the event of a collision.

Passenger airbag

The car has an airbag to supplement the protection afforded by the seatbelt on the passenger side. It is folded up into a compartment above the glovebox. The cover panel is marked **SRS AIRBAG**.

To minimise the risk of injury if the airbag deploys, passengers must sit as upright as possible with their feet on the floor and backs against the backrest. Seatbelts must be secured.

\Lambda WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag is activated.¹

Never allow anybody to stand or sit in front of the front passenger seat. No one shorter than 140 cm should ever sit in the front passenger seat if the airbag is activated.

Failure to follow the advice given above can endanger life.

¹ For information on activated/deactivated airbag, see page 24.



Activating/deactivating the airbag*

Key switch off - PACOS*

General information

The airbag for the front passenger seat can be deactivated if the car is equipped with a switch, PACOS (Passenger Airbag Cut Off Switch). For information on how to activate/deactivate, see under the heading Activating/deactivating.

Key switch off/switch

The switch for the passenger airbag (PACOS) is located on the passenger end of the instrument panel and is accessible when the passenger door is open, (see under the heading, Activating/deactivating).

Check that the switch is in the required position. Volvo recommends that the key blade is used to change position.

For information on the key blade, see page 120.

🔥 WARNING

Failure to follow the advice given above can endanger life.

WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag is activated. Failure to follow this advice could endanger the life of the child.


🚹 WARNING

If the car is equipped with a front passenger airbag, but does not have PACOS, then the airbag will always be activated.

🚹 WARNING

Do not allow anyone to sit in the front passenger seat if the text message in the rearview mirror indicates that the airbag is deactivated, and if the warning symbol for the airbag system is also displayed on the combined instrument panel. This indicates that there has been a severe malfunction. Visit a workshop as soon as possible. Volvo recommends that you contact an authorised Volvo workshop

Activating/deactivating

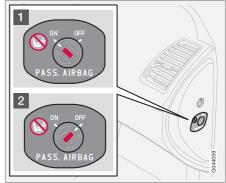

Switch location

- The airbag is activated. With the switch in this position, persons taller than 140 cm can sit in the front passenger seat, but never children in a child seat or on a booster cushion.
- 2 The airbag is deactivated. With the switch in this position, children in a child seat or on a booster cushion can sit in the front passenger seat, but never persons taller than 140 cm.

01

🔥 WARNING

Activated airbag (passenger seat):


Never place a child in a child seat or on a booster cushion on the front passenger seat when the airbag is activated. This applies to everyone shorter than 140 cm.

Deactivated airbag (passenger seat):

No one taller than 140 cm should ever sit in the front passenger seat when the airbag is deactivated.

Failure to follow the advice given above can endanger life.

Message

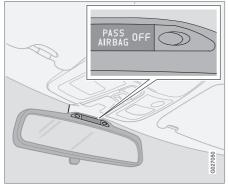

Indicator showing that the passenger airbag is deactivated.

A text message in the rearview mirror indicates that the airbag for the front passenger seat is deactivated (see preceding illustration).

01

Side airbags (SIPS bags)

Side airbag



Side airbag locations.

In a side impact collision a large proportion of the collision force is transferred by the SIPS (Side Impact Protection System) to beams, pillars, the floor, the roof and other structural parts of the body. The side airbags at the driver's and front passenger seats protect the chest area and are an important part of the system. The side airbags are located in the front seat backrests.

WARNING


- Volvo recommends that repairs are only carried out by an authorised Volvo workshop. Defective work in the SIPSbag system could cause malfunction and result in serious personal injury.
- Do not place any objects in the area between the outside of the seat and the door panel, since this area is required by the side airbag.
- Volvo recommends the use only of car seat covers approved by Volvo. Other seat covers may impede the operation of the side airbags.
- Side airbags are a supplement the seatbelts. Always use a seatbelt.

Child seats and side airbags

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the side airbag.

A child seat or booster cushion can be placed on the front passenger seat provided that the car does not have an activated¹ passenger airbag.

Location

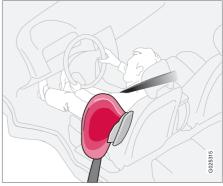


Driver's seat, left-hand drive

The SIPS bag system consists of side airbags and sensors. A sufficiently violent collision trips the sensors and the side airbags are inflated.

¹ For information on activated/deactivated airbag (SRS), see page 24.



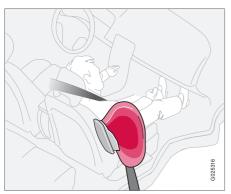


Front passenger seat, left-hand drive

The airbag inflates between the occupant and the door panel and thereby cushions the initial impact. The airbag deflates when compressed by the collision. The side airbag is normally only deployed on the side of the collision.



Inflatable Curtain (IC)

Properties

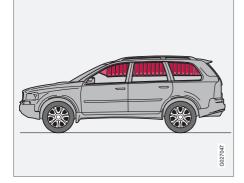

🔥 WARNING

Never hang or attach heavy items onto the handles in the roof. The hook is only designed for light clothing (not for solid objects such as umbrellas for example).

Do not screw or install anything onto the car's headlining, door pillars or side panels. This could compromise the intended protection. Volvo recommends that you only ever use Volvo genuine parts that are approved for placement in these areas.

🚹 WARNING

Do not load the car higher than 50 mm under the top edge of the side windows. Otherwise, the intended protection of the inflatable curtain, which is concealed in the headlining, may be compromised.

🚹 WARNING

The inflatable curtain is a supplement to the seatbelts.

Always use a seatbelt.

The inflatable curtain IC (Inflatable Curtain) is a part of SIPS and the airbags. It is fitted in the headlining along both sides of the roof and protects the car's occupants sitting in the outer seats. A sufficiently violent collision trips the sensors and the inflatable curtain is inflated. The inflatable curtain helps to prevent the driver and passengers from striking their heads on the inside of the car during a collision.

WHIPS

01

Protection against whiplash injury - WHIPS

The whiplash protection system (WHIPS) con-

sists of energy absorbing backrests and spe-

cially designed head restraints in the front

seats. The system is actuated by a rear-end

collision, where the angle and speed of the col-

lision, and the nature of the colliding vehicle all

The WHIPS system is a supplement to the

seatbelts. Always use a seatbelt.



have an influence.

WARNING





When the WHIPS system is deployed, the front seat backrests are lowered backward to alter the seating position of the driver and front seat passenger. This reduces the risk of whiplash injury.

020347

🔥 WARNING

Never modify or repair the seat or WHIPS system yourself. Volvo recommends that you contact an authorised Volvo workshop.

WHIPS system and child seats/booster cushions

The protection provided by the car to children seated in a child seat or on a booster cushion is not diminished by the WHIPS system.

Correct seating position

For the best possible protection, the driver and front seat passenger should sit in the centre of the seat with as little space as possible between the head and the head restraint.



WHIPS

Do not obstruct the WHIPS system



Do not leave any objects on the floor behind the driver's seat/passenger seat that may prevent the WHIPS system from functioning.

WARNING

Do not squeeze rigid objects between the rear seat cushion and the front seat backrest. Make sure you do not to obstruct the function of the WHIPS system.



Do not place objects in the rear seat that may prevent the WHIPS system from functioning.

WARNING

If a rear seat backrest is folded down, the corresponding front seat must be moved forward so that it does not touch the folded backrest.

\wedge WARNING

If a seat has been subjected to extreme forces, such as due to a rear-end collision. the WHIPS system must be checked. Volvo recommends that you contact an authorised Volvo workshop.

Part of the WHIPS system's protective capacity may have been lost even if the seats appear to be undamaged.

Volvo recommends that you contact an authorised Volvo workshop to have the system checked even after a minor rear-end collision.



Function

Volvo's Roll-Over Protection System (ROPS) has been designed to reduce the risk of the car overturning and to provide the best possible protection in the event of such an accident.

The system consists of:

- A stabiliser system, RSC (Roll Stability Control) that minimises the risk of overturning during sudden evasive manoeuvres or the like or if the car skids.
- Increased protection for the driver and passengers through a reinforced body, inflatable curtains and seatbelt tensioners in all seats. See also pages 19 and 28.

The RSC system uses a gyro sensor which registers changes in the car's lateral inclination angle. This information is then used to calculate the risk for overturning. If a risk is detected, the DSTC system is engaged, engine speed is reduced and one or more wheels are braked until the car returns to a stable position.

For more information on the DSTC system, see page 149.

🛕 WARNING

Under normal driving conditions, the RSC system improves the car's road safety, but this must not be taken as a reason to increase speed. Always follow the usual precautions for safe driving.



01

When the systems deploy

System	Triggered
Seatbelt tensioner	In a frontal collision and/or overturning.
Airbags SRS	In a frontal collision ^A
Side airbags SIPS	In a side-impact accident ^A
Inflatable Curtain IC	In a side-impact accident and/or overturning ^A .
Whiplash protection WHIPS	In a rear-end collision.
RSC	During sudden evasive manoeuvres or the like or if the car skids.

A The bodywork of the car could be greatly deformed in a collision without airbag deployment. A number of factors such as the rigidity and weight of the object hit, the speed of the car, the angle of the collision etc. affects how the different safety systems of the car are activated.

If the airbags have deployed, the following is recommended:

- Recovering the car. Volvo recommends that you have it conveyed to an authorised Volvo workshop for repair. Do not drive with deployed airbags.
- Volvo recommends that you engage an authorised Volvo workshop to handle the replacement of components in the car's safety systems.
- Always contact a doctor.

i) NOTE

The SRS, SIPS, IC and belt tensioner systems are deployed only once during a collision.

The airbag control module is located in the centre console. If the centre console is drenched with water or other liquid, disconnect the battery cables. Do not attempt to start the car since the airbags may deploy. Recovering the car. Volvo recommends that you have it conveyed to an authorised Volvo workshop.

🔥 WARNING

Never drive with deployed airbags. They can make steering difficult. Other safety systems may also be damaged. The smoke and dust created when the airbags are deployed can cause skin and eye irritation/ injury after intensive exposure. In case of irritation, wash with cold water. The rapid deployment sequence and airbag fabric may cause friction and skin burns.

Child safety

01

Children should sit comfortably and safely

Volvo recommends that children travel in rearfacing child seats until as late an age as possible, at least until 3-4 years of age, and then front-facing booster cushions/child seats up to 10 years of age.

The position of a child in the car and the choice of equipment are dictated by the child's weight and size, for more information, see page 34.

i note

Regulations regarding the placement of children in cars vary from country to country. Check what does apply.


Children of all ages and sizes must always sit correctly secured in the car. Never allow a child to sit on the knee of a passenger.

Volvo's own child safety equipment is designed for your car. Volvo recommends that you use Volvo genuine equipment to best ensure that the mounting points and attachments are correctly positioned and are sufficiently strong.

i) NOTE

In the event of questions when fitting child safety products, contact the manufacturer for clearer instructions.

Child seats

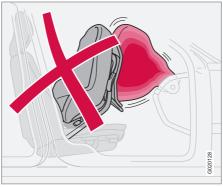

Child seats and airbags are not compatible.

i) NOTE

When using other child safety products it is important to read the installation instructions included with the product. Do not attach the straps for the child seat to the horizontal adjustment bar, springs, rails or beams under the seat. Sharp edges can damage the straps.

Look in the installation instructions for the child seat for the correct fitting.

Location of child seats

You may place:

- a child seat/booster cushion on the front passenger seat, provided the passenger airbag is not activated¹.
- one or more child seats/booster cushions in the rear seat.

Always fit child seats/booster cushions in the rear seat if the passenger airbag is activated. A child in the front passenger seat could suffer serious injury if the airbag deploys.

¹ For information on activating/deactivating the airbag (SRS), see page 24.

01

Child safety

\Lambda WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.²

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.

Failure to follow the advice given above can endanger life.

Booster cushions/child seats with steel braces or some other design that could rest on the seatbelt buckle's opening button must not be used, as they could cause the seatbelt buckle to open accidentally.

Do not allow the upper section of the child seat to rest against the windscreen.

Label Airbag



Label fitted on the end face of the instrument panel on the passenger side, see the illustration on page 24.

Recommended child seats³

Weight	Front seat (with deactivated airbag)				
Group 0	Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the ISOFIX fixture system.				
<10 kg	Type approval: E1 04301146				
	Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the car's seatbelt Type approval: E1 04301146				
	Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps.				
	Type approval: E5 03135				
	Child seats which are universally approved.				

² For information on activated/deactivated airbag (SRS), see page 24.

³ For other child seats your car should be included in the manufacturer's enclosed list of vehicles or be universally approved in accordance with the ECE R44 legal requirement.

Child safety

 (\mathbf{S})

01

Weight	Front seat (with deactivated airbag)
Group 1 9 – 18 kg	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192
	Rear-facing child seat (Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135
	Britax Fixway – rear-facing child seat, secured with the ISOFIX fixture system and straps. Type approval: E5 03171
	Child seats which are universally approved.
Group 2 15 – 25 kg	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-facing child seat, secured with the car's seatbelt and straps Type approval: E5 04192
	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - front-facing child seat, secured with the car's seatbelt. Type approval: E5 04191
Group 2/3 15 – 36 kg	Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169
	Booster cushion with and without backrest (Booster Cushion with and without backrest). Type approval: E5 03139



01 Safety

Child safety						
Weight	Second row of seats, outer seats ^A	Second row of seats, centre seat ^A	Third row of seats in cars seating seven			
Group 0 <10 kg	Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the ISOFIX fixture system. Type approval: E1 04301146		Not suitable for this age group.			
	Volvo infant seat (Volvo Infant Seat) - rear-facing child seat, secured with the car's seatbelt. Type approval: E1 04301146					
	Rear-facing child seat (Child Seat) - rear- facing child seat, secured with the car's seatbelt, straps and support legs. Type approval: E5 03135	Rear-facing child seat (Child Seat) - rear- facing child seat, secured with the car's seatbelt, straps and support legs. Type approval: E5 03135				
	Child seats which are universally approved.	Child seats which are universally approved.	Child seats which are universally approved.			



	Child safet						
Weight	Second row of seats, outer seats ^A	Second row of seats, centre seat ^A	Third row of seats in cars seating seven				
Group 1 9 – 18 kg	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-fac- ing child seat, secured with the car's seatbelt and straps. Type approval: E5 04192		Not suitable for this age group.				
	Rear-facing child seat (Child Seat) - rear- facing child seat, secured with the car's seatbelt and straps. Type approval: E5 03135	Rear-facing child seat (Child Seat) - rear- facing child seat, secured with the car's seatbelt, straps and support legs. Type approval: E5 03135					
	Britax Fixway – rear-facing child seat, secured with the ISOFIX fixture system and straps. Type approval: E5 03171						
	Child seats which are universally approved.	Child seats which are universally approved.	Child seats which are universally approved.				

 (\mathbf{S})



01 Safety

Child safety							
Weight	Second row of seats, outer seats ^A	Second row of seats, centre seat ^A	Third row of seats in cars seating seven				
Group 2 15 – 25 kg	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - rear-fac- ing child seat, secured with the car's seatbelt and straps Type approval: E5 04192		Not suitable for this age group.				
	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - front-fac- ing child seat, secured with the car's seatbelt. Type approval: E5 04191	Volvo rear-facing/turnable child seat (Volvo Convertible Child Seat) - front-fac- ing child seat, secured with the car's seatbelt. Type approval: E5 04191					
Group 2/3 15 – 36 kg	Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169	Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169	Volvo booster seat with backrest (Volvo Booster Seat with backrest). Type approval: E1 04301169				
	Booster cushion with and without back- rest (Booster Cushion with and without backrest).	Booster cushion with and without back- rest (Booster Cushion with and without backrest).	Booster cushion with and without back- rest (Booster Cushion with and without backrest).				
	Type approval: E5 03139	Type approval: E5 03139	Type approval: E5 03139				
		Integrated booster cushion (Integrated Booster Cushion) - available as a factory fitted option.					
		Type approval: E5 03167					

A In cars seating seven, the seat row must be in its rearmost position when using a child seat.

01 Safety

Child safety

01

Integrated booster cushion*



Volvo's integrated booster cushion for the centre rear seat is specially designed to provide optimum safety for children. Combined with the regular seatbelts the integrated booster cushion is approved for children weighing between 15 and 36 kg.


🛕 WARNING

Never place a child in a child seat or on a booster cushion in the front seat if the airbag (SRS) is activated.

No one shorter than 140 cm should ever sit in the front passenger seat if the airbag (SRS) is activated.⁴

Failure to follow the advice given above can endanger life.

Raising the booster cushion

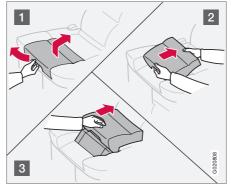

 Pull that handle to raise the booster cushion. 2 Grasp the cushion with both hands and push it backwards.

Push until the cushion locks in place.

🔨 WARNING

The booster cushion must be in the locked position before the child is placed there.

Check that:

- the seatbelt is locked.
- the seatbelt is in contact with the child's body and is not slack or twisted, and that the seatbelt is positioned correctly across the shoulder.
- the lap belt is low over the pelvis for optimum protection.
- the seatbelt does not lie across the child's throat or below the shoulder.
- Carefully adjust the position of the head restraint to suit the child.

⁴ For information on activated/deactivated airbag (SRS), see page 24.

01 Safety


Child safety

🚹 WARNING

Volvo recommends that repair or replacement is only carried out by an authorised Volvo workshop. Do not make any modifications or additions to the booster cushion.

If an integrated booster cushion has been subjected to a major load, such as in conjunction with a collision, the entire booster cushion must be replaced. Even if the booster cushion appears to be undamaged, it may not afford the same level of protection. The booster cushion must also be replaced if it is heavily worn.

Lowering the booster cushion

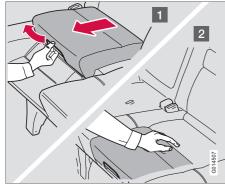

1 Pull the handle.

2 Lower the cushion and press until it locks.

i NOTE

Remember to stow away the booster cushion before lowering the rear seat backrest.

Child safety locks, rear doors

The controls for operating the rear door power windows and the rear door opening handles can be blocked from opening from the inside. For more information see page 125.

ISOFIX fixture system for child seats*



Mounting points for the ISOFIX fixture system are concealed behind the lower section of the rear seat backrest, in the outer seats.

The location of the mounting points is indicated by symbols in the backrest upholstery (see preceding illustration).

Press the seat cushion down to access the mounting points.

i NOTE


The ISOFIX fixture system is an accessory for the passenger seat.

Always follow the manufacturer's installation instructions when connecting a child seat to the ISOFIX mounting points.

Child safety

01

Mounting points for child seat

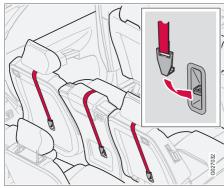

The car is equipped with upper mounting points for child seats. These mounting points are located on the rear of the rear seats.

The upper mounting points are primarily intended for use with front-facing child seats. Volvo recommends that small children should sit in rear-facing child seats to as late an age as possible.

i note

These mounting points are only on the second row of seats in cars seating seven. Fold the backrest forward to access the mounting points. For detailed information on how the child seat should be tensioned in the upper mounting points, see the seat manufacturer's instructions.

Extra locking function in seatbelt (ALR/ ELR) 5

The seatbelt in the centre of the second row of seats has an extra locking function (ALR/ELR). The locking function helps to hold the belt taut in order to facilitate child seat installation.

When installing a child seat with the help of the seatbelt:


- 1. Secure the seatbelt in the child seat following the instructions of the child seat manufacturer.
- 2. Pull out the entire seatbelt.
- 3. Lock the seatbelt by inserting the locking tab in the buckle. A clear "click" indicates that the seatbelt has locked.
- Allow the seatbelt mechanism to retract the seatbelt while stretching it around the child seat. A mechanical sound will be audible from the seatbelt. This is normal.

This function is automatically deactivated when the seatbelt is released from the buckle and retracts back to its starting position.

If there are any problems with installation of child safety products, contact the manufacturer for clearer installation instructions.

⁵ Automatic Locking Retractor/Emergency Locking Retractor.


Overview, left-hand drive car				
Overview, right-hand drive car				
Driver's door control panel				
Combined instrument panel				
Indicator and warning symbols	51			
Information display	54			
Switches in the centre console	55			
Lighting panel	58			
Left-hand stalk switch				
Trip computer*	61			
Right-hand stalk switch				
Cruise control*	65			
Parking brake, electrical socket, etc	67			
Power windows	69			
Windows, rearview and door mirrors	71			
Power sunroof*	76			
HomeLink [®] *	78			

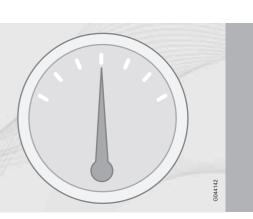




 \bigcirc

INSTRUMENTS AND CONTROLS

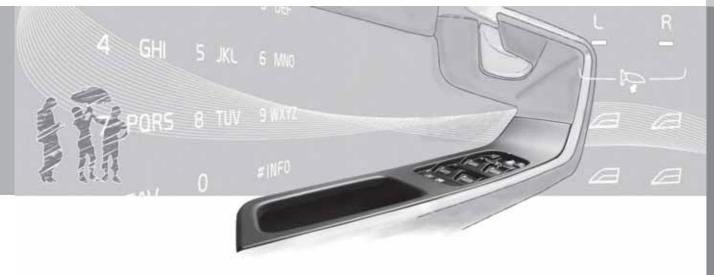

Overview, left-hand drive car

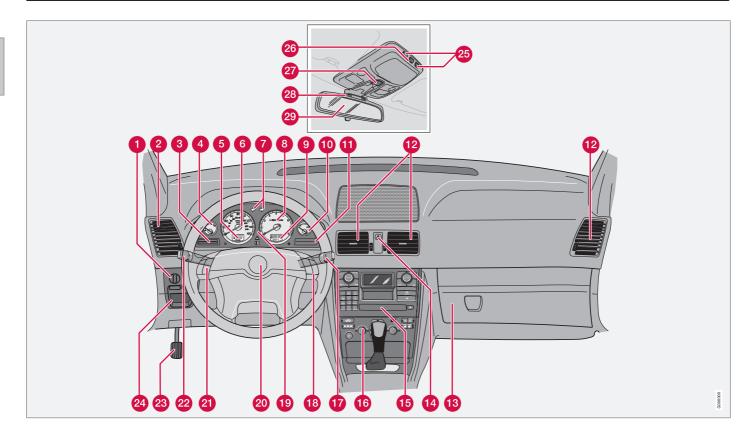




Overview, left-hand drive car

- Lighting panel
- 2 Panel vents
- Oisplay
- 4 Temperature gauge
- **5** Odometer, trip meter, cruise control
- 6 Speedometer
- Direction indicators
- 8 Tachometer
- Outside temperature, clock, gear position
- 10 Fuel gauge
- 1 Indicator and warning symbols
- Panel vents
- Glovebox
- 14 Hazard warning flashers
- 15 Audio system
- 16 Climate control
- Windscreen wipers
- (B) Keypad for phone/audio
- (B) Combined instrument panel
- 20 Horn

- 2 Cruise control
- Direction indicators, dipped-main beam switch, READ button
- 23 Parking brake
- 24 Parking brake release
- 25 Switches, reading lamps
- 26 Passenger compartment lighting
- 2 Sunroof control
- 28 Seatbelt reminder
- Rearview mirror

Overview, right-hand drive car

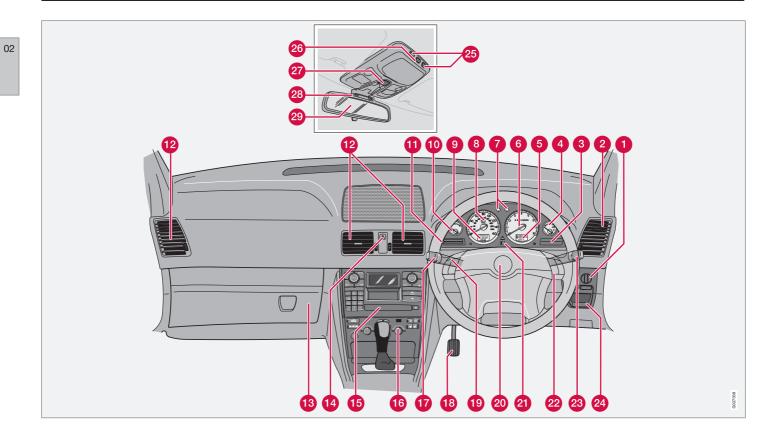



Overview, right-hand drive car


- Lighting panel
- 2 Panel vents
- Indicator and warning symbols
- 4 Fuel gauge
- **6** Outside temperature, clock, gear position
- 6 Tachometer
- Direction indicators
- 8 Speedometer
- Odometer, trip meter, cruise control
- 10 Temperature gauge
- 1 Display
- Panel vents
- Glovebox
- 14 Hazard warning flashers
- 15 Audio system
- 16 Climate control
- Direction indicators, dipped-main beam switch, READ button
- 18 Parking brake
- Cruise control

- 20 Horn
- 2 Combined instrument panel
- Phone/Audio keypad
- Windscreen wipers
- 2 Parking brake release
- 25 Switches, reading lamps
- 26 Passenger compartment lighting
- 2 Sunroof control
- 28 Seatbelt reminder
- Rearview mirror




Driver's door control panel

Control panel

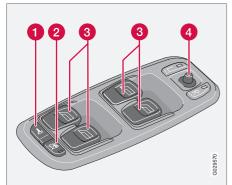

- 1 Lock button, for all doors
- 2 Blocking power windows in the rear doors
- Over window controls
- 4 Door mirror control

Combined instrument panel

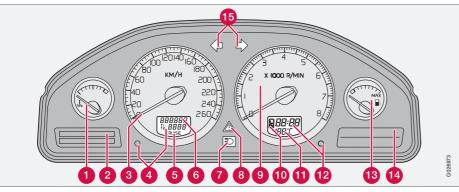

- Temperature gauge Displays the temperature of the engine cooling system. A message will appear on the display if the gauge goes into the red zone. Bear in mind that extra lights placed in front of the air intake reduce the cooling capacity of the system.
- 2 Display The display shows information and warning messages.
- **3** Speedometer Shows the speed of the car.
- 4 Trip meters T1 and T2 Used for measuring short distances. The right-hand digit displays tenths of a kilometre. Press the button for more than 2 seconds to reset.

Switch between trip meters with one quick press of the button.

- 5 Cruise control indicator.
- 6 Odometer The odometer indicates the total distance the car has travelled.
- 7 Main beam indicator
- 8 Warning symbol If a fault arises, the symbol illuminates and a message is shown in the display.
- Tachometer Indicates engine speed in thousands of revolutions per minute (rpm). Do not allow the tachometer gauge to enter the red zone.

- Automatic gearbox indicator The selected gear position is displayed here.
- Outside temperature gauge When the temperature lies between +2 °C to -5 °C, a snowflake symbol illuminates in the display. This warns of icy roads. If the car has been stationary, the gauge may display a reading that is too high.
- Knob for clock Turn the knob to adjust the time.
- When the lamp in the instrument illuminates the level in the fuel tank is low, refuel as soon as possible. See also Trip computer page 61.

02 Instruments and controls

Combined instrument panel


14 Indicator and warning symbols

15 Direction indicators – left/right



Indicator and warning symbols

Functionality check, symbols

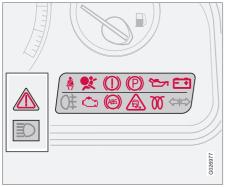

All indicator and warning symbols¹ illuminate when the remote control key is turned to position **II** before starting. This is to check that the symbols are working. When the engine starts, all the symbols should go out except the handbrake symbol, which only goes out when the brake is disengaged.






If the engine does not start within 5 seconds, all symbols extinguish except the symbols for a fault in the car's emissions system and for low oil pressure.

Certain symbols may have no function, depending on the car's specifications.

Symbols in the centre of the instrument panel

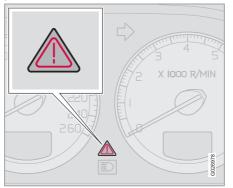



These symbols illuminate with a red or amber glow depending on the severity of the fault.

Red symbol

- 1. Stop the car in a safe place. Do not drive the car further. Do not drive the car further.
- 2. Read the information on the display.
- Rectify in accordance with the instructions in the display or contact a workshop. Volvo recommends that you seek assistance from an authorised Volvo workshop.

Symbol and message text are visible until the fault has been rectified.

Yellow symbol

- Read the message in the display. Action.

The message text is cleared using the **READ** button, see page 54, or it disappears automatically after 2 minutes.

i note

When the message text **TIME FOR REGULAR SERVICE** is shown, the symbol and message text are cleared using the **READ** button, or disappear automatically after 2 minutes.

¹ For certain engine variants, the symbol for low oil pressure is not used. Warnings are given via display text, see page 203.

Indicator and warning symbols

Indicator symbols





ABS fault

If this symbol illuminates then the system is not working. The car's regular brake system continues to work, but without the **ABS** function.

- 1. Stop the car in a safe place and turn off the engine.
- 2. Restart the engine.
- Volvo recommends that drive to an authorised Volvo workshop to have the ABS system checked if the symbol remains illuminated.

Fault in brake system



If this symbol illuminates, the brake fluid level may be too low.

- 1. Stop the car in a safe place and check the level in the brake fluid reservoir, see page 206.
- 2. If the reservoir level is below **MIN** then the car should not be driven further, but recovered instead. Volvo recommends that the car is transported to an authorised Volvo

workshop to have the brake system checked.



If the BRAKE and **ABS** symbols illuminate at the same time, there may be a fault in the brake force distribution system.



- 1. Stop the car in a safe place and turn off the engine.
- 2. Restart the engine.
- If both symbols extinguish, continue driving.
- If the symbols remain illuminated, check the level in the brake fluid reservoir, see page 206.
- If the brake fluid reservoir's level is normal but the symbols are still illuminated, the car can be driven, with great care, to an authorised workshop recommended by Volvo to have the brake system checked.
- If the level in the brake fluid reservoir is below MIN then the car should not be driven any further. Have the car transported to an authorised workshop recom-

mended by Volvo to have the brake system checked.

🔥 WARNING

If the BRAKE and ABS symbols are illuminated at the same time, there is a risk that the rear end will skid during heavy braking.

Seatbelt reminder



This symbol illuminates if someone in a front seat has not put on their belt or if someone in a rear seat has taken off their seatbelt.

Low oil pressure²



If this symbol illuminates during driving then the engine's oil pressure is too low. Stop the engine immediately and check the engine oil level, top up if necessary. If the

symbol illuminates and the oil level is normal, contact an authorised workshop recommended by Volvo.

² For certain engine variants, the symbol for low oil pressure is not used. Warnings are given via display text, see page 203.



Indicator and warning symbols

Emissions system



If the symbol illuminates then it may be due to a fault in the car's emissions system. Volvo recommends that you drive to an authorised Volvo workshop for inspec-

tion.

Airbags - SRS



If this symbol remains illuminated or illuminates while driving, it means a fault has been detected in the seatbelt buckle, SRS, SIPS, or IC system. Volvo recommends that

drive directly to an authorised Volvo workshop for inspection.

Alternator not charging



If this symbol illuminates while driving, a fault has occurred in the electrical system. Volvo recommends that you visit an authorised Volvo workshop.

Engine preheater (diesel)



This symbol illuminates during engine preheating. Preheating occurs when the temperature is below -2 °C. The car can be started once the symbol goes out.

Parking brake applied



The symbol illuminates when the parking brake is depressed. Always depress the parking brake to the bottom position.

i) NOTE

The symbol illuminates irrespective of how hard the parking brake is depressed.

Rear fog lamp



This symbol is illuminated when the fog lamp is on.

Indicator symbol for trailer



This symbol flashes when the direction indicators are used and the trailer is connected. If the symbol does not flash then one of the lamps on the trailer or the car is

faulty.

Stability system STC or DSTC



For information on the system's functions and symbols, see page 150.

Reminder – doors not closed

If one of the doors or the tailgate is not properly closed the driver will be reminded of this.

Low speed

If the car moves at a speed less than about 7 km/h, the information symbol illuminates and DRIVER DOOR OPEN, PASSENGER DOOR OPEN, LEFT REAR DOOR OPEN or RIGHT REAR DOOR OPEN is shown in the display at the same time. Stop the car safely as soon as possible and close the door or bonnet.

High speed



If the car is moving faster than about 7 km/h then the symbol illuminates and one of the texts indicated in the previous paragraph appears in the display at the same


time.

Tailgate reminder

If the tailgate is open, **TAILGATE OPEN** will appear on the display.

Information display

Messages

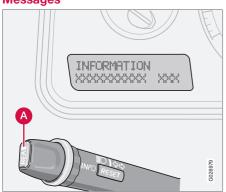

When a warning or indicator symbol illuminates, it is supplemented by a message appearing on the display.

Press the **READ** button (A).

Switch between messages with the **READ** button. Fault messages are stored in the memory until the fault is rectified.

(i) NOTE


If a warning message appears while you are using the trip computer, the message must be read (press **READ**) before the previous activity can be resumed.

Message	Specification		Message	Specification
STOP SAFELY ^A	STOP ENGINEAStop the car in a safe manner and turn off the engine. Serious risk of damage.STOP ENGINEAStop the car in a safe manner and turn off the engine. Serious risk of damage.SERVICEVolvo recommends		TIME FOR REGU- LAR SERVICE	Time for regular service. Volvo rec- ommends that you engage an author- ised Volvo work- shop to carry out the service. The timing is determined by the number of kilome- tres driven, number of months since the last service and engine running time.
STOP ENGINE ^A				
SERVICE URGENT ^A				
	the car immediately.		SOOT FILTER	Diesel particle filter
SEE MANUAL ^A	IANUAL ^A Read the owner's manual.		FULL SEE MAN- UAL	requires regenera- tion, see page 138.
SERVICE REQUIRED ^A Volvo recommends that you engage an authorised Volvo workshop to check the car as soon as possible.			STC/DSTC SPIN CONTROL OFF	The function of the stability and traction control system is reduced, see page 149 for more variants.

A Part of message, shown together with information on where the problem has arisen.

Switches in the centre console

Switch

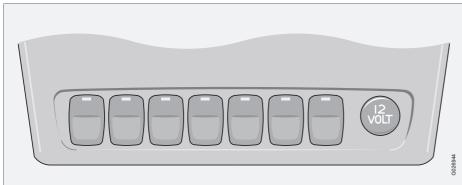

i) NOTE

The order of the buttons may vary.

Air conditioning in the rear of the passenger compartment*



Press the button to activate the air conditioning in the rear of the passenger compartment. Rear passenger compartment air conditioning is deactivated when the ignition is switched

Child safety locks in the rear doors*



Activating or deactivating the electric child safety locks in the rear doors. The remote control key must be in position I or II. When the child safety locks are activated, the lamp in the but-

ton illuminates. A message is shown in the display when the child safety locks are activated or deactivated, see page 125.

Retractable power door mirrors*



Used to fold in the door mirrors if they are folded out or to fold them out if they are folded in.

Proceed as follows if a door mirror has been accidentally folded in or out:

- 1. Manually adjust the appropriate door mirror to its normal position.
- 2. Turn the remote control key to position II.

off.

Switches in the centre console

Fold the door mirror inward and then outward using the button.

The door mirrors have now returned to their original fixed positions.

Park Assist*



The system is always activated when the car is started. Press the button to deactivate/reactivate the parking assistance system. See also page 151.

Deactivation of the deadlocks* and detectors



Use this button when you wish to switch off the deadlock function (doors cannot be opened from the inside when locked). This button can also be used when deactivating the alarm

system's movement and tilt detectors*. The lamp illuminates when these systems are shut down/deactivated, see pages 124 and 128.

Auxiliary lamps*



Use this button to switch the auxiliary lamps on with main beam or to switch them off.

Active Xenon headlamps*



If the car is equipped with active Xenon headlamps (Active Bending Lights, ABL) the light from the headlamps follows the steering wheel movement during driving. The

function is activated automatically when the car is started and can be deactivated/activated by pressing the button. The lamp in the button illuminates when the function is activated

Shifting headlamp pattern for right/lefthand traffic

Hold the button depressed for at least 5 seconds. The car must be stationary when the headlamp pattern is shifted. The message **HEADLIGHTS SET FOR RH TRAFFIC** or **HEADLIGHTS SET FOR LH TRAFFIC** is shown in the display. For more information and adapting headlamp pattern for halogen or Dual Xenon headlamps, see page 168.

Electric socket/Cigarette lighter*



The electrical socket can be used for 12 V accessories, such as mobile phone chargers and coolers.

The remote control key must be at least in position I so that the socket can supply power.

The cigarette lighter is activated by pushing in the button. The button pops out when the lighter is hot. Pull out the lighter and light a cigarette on the heated coils. For safety reasons, always keep the cover in place when the socket is not in use. Maximum current tap 10 A.

🚹 WARNING

Always leave the plug in the socket when the socket is not in use.

BLIS - Blind Spot Information System*




Press the button to deactivate or reactivate the function. see page 153 for further information.



Switches in the centre console

Hazard warning flashers

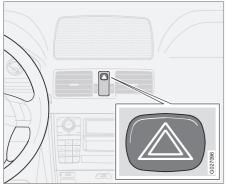

Use the hazard warning flashers (all direction indicators flash) when the car is stopped where it could be a traffic hazard or obstruction. Press the button to activate the function.

i NOTE

Regulations regarding the use of hazard warning flashers vary from country to country.

Rear window and door mirror defrosters



Heating is used to quickly remove misting and ice from the rear window and door mirrors. Press the switch to start defrosting the rear window and door mirrors. The lamp in the switch illuminates. The light in the switch is lit. Defrosting is automatically disconnected after about 12 minutes.


Heated front seats




For heated front seats, see page 88 or 90 for further information.

Lighting panel

Headlamps

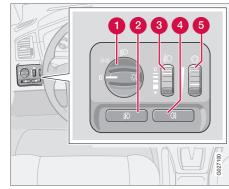

- Light switches
- 2 Fog lamps*
- 3 Thumbwheel for headlamp levelling
- 4 Rear fog lamp
- 5 Thumbwheel for adjusting instrument lighting

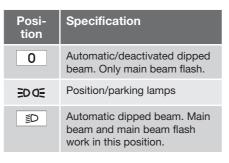

Automatic dipped beam*

Dipped beam comes on automatically when the remote control key is turned to position **II**, except when the headlamp control (1) is in the centre position. If necessary, the automatic dipped beam can be deactivated. Volvo recommends that you engage an authorised Volvo workshop to have it deactivated.

Automatic dipped beam, main beam

- 1. Turn the remote control key to position II.
- 2. Dipped beam is activated by means of turning the headlamp control (1) clockwise to the end position.
- Main beam is activated by means of moving the left-hand stalk switch towards the steering wheel to the end position and releasing it, see page 60.

The lamps are switched off automatically when the remote control key is turned to position **I** or **0**.

Position/parking lamps

Position/parking lamps can be switched on irrespective of remote control key position.

Turn the headlamp control (1) to the centre position.

When the remote control key is in position **II** the position/parking lamps and number plate lighting are always switched on.

Headlamp levelling

The load in the car changes the vertical alignment of the headlamp beam, which could dazzle oncoming motorists. Avoid this by adjusting the height of the beam.

- 1. Turn the remote control key to position II.
- 2. Turn the headlamp control (1) to one of the end positions.
- Roll the thumbwheel (3) up or down respectively to raise or lower beam alignment.

Cars with Xenon headlamps* have automatic headlamp levelling, so there is no thumbwheel (3).



Instrument lighting

The instrument lighting is switched on when the remote control key is in position **II** and the headlamp control (1) is in one of the end positions. The lighting is automatically dimmed during the day and can be controlled manually at night.

Roll the thumbwheel (5) up or down for brighter or dimmer lighting.

Fog lamps

(i) NOTE

Regulations for use of fog lamps vary from country to country.

Fog lamps*

The front fog lamps can be switched on along with the headlamps or the position lamps/park-ing lamps.

Press the button (2).

The light in the button illuminates when the front fog lamps are switched on.


Rear fog lamp

The rear fog lamp can only be switched on with the headlamps or the front fog lamps.

Press the button (4).

The rear fog lamp indicator symbol on the combined instrument panel and the light in the button illuminate when the rear fog lamp is switched on.

Active Xenon headlamps*

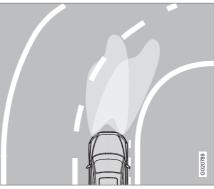


Headlamp pattern for active/non-active headlamps.

If the car is equipped with active Xenon headlamps (Active Bending Lights, ABL) the light from the headlamps follows the steering wheel movement during driving. The function is activated automatically when the car is started and can be deactivated/activated using the button in the centre console, see page 56.

Left-hand stalk switch

Stalk switch positions

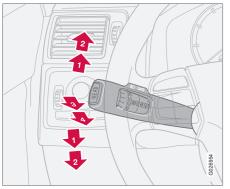

Short flash sequence, direction indicators

Continuous flash sequence, direction indi-

Home safe lighting and switching of

dipped and main beam

- Direction indicators Continuous flash sequence
- Move the stalk switch up or down to end position (2).

The stalk switch remains in its end position and is moved back manually, or automatically by steering wheel movement.

Short flash sequence

Move the stalk switch up or down to position (1) and release, the stalk switch then returns to its home position, or move the stalk switch to position (2) and move it directly back to the home position.

The direction indicators flash three times. Short flash sequence interrupted immediately if indicating is started in the opposite direction.

Switching, main and dipped beam

The remote control key must be in position **II** for main beam to be switched on.

- 1. Turn the headlamp control clockwise to the end position, see page 58.
- 2. Move the stalk switch towards the steering wheel to the end position (4) and release.

Main beam flash

Move the stalk switch gently towards the steering wheel to position (3).

Main beam comes on until the stalk switch is released.

Home safe lighting

Some of the exterior lighting can be kept switched on to work as home safe lighting after the car has been locked. The standard delay is 30 seconds¹, but can be changed to 60 or 90 seconds.

- 1. Remove the remote control key from the ignition switch.
- 2. Move the stalk switch towards the steering wheel to the end position (4) and release.
- 3. Get out of the car and lock the door.


¹ Factory settings.

cators

Main beam flash

Trip computer*

General information

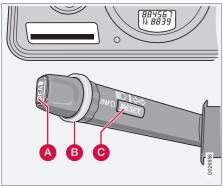

- A READ confirms
- B Thumbwheel browse between menus and options in the trip computer list
- RESET resets

Controls

To scroll through trip computer information turn the thumbwheel (B) either up or down in steps. Continue turning to return to the starting point.

NOTE

If a warning message interrupts while you are using the trip computer, this message must be acknowledged. Acknowledge by pressing the **READ** button and revert to the trip computer function.

Functions

The trip computer displays the following information:

- --- KM/H AVERAGE SPEED
- --.- KM/L INSTANTANEOUS
- --.- KM/L AVERAGE
- --- KILOMETRES TO EMPTY TANK
- DSTC ON , see page 149
- --- MPH ACTUAL SPEED ¹*

AVERAGE SPEED

When the ignition is switched off, the average speed is stored and used as the basis of the new value when you continue driving. Reset using the **RESET** button.

INSTANTANEOUS

Current fuel consumption is calculated every second. The information on the display is updated every couple of seconds. When the

car is stationary, "----" appears on the display. During the period for regeneration² fuel consumption may increase, see page 138.

AVERAGE

The average fuel consumption since the last reset. Reset using **RESET**.

ΝΟΤΕ

There may be a slight error in the reading if a fuel-driven parking heater* has been used.

KILOMETRES TO EMPTY TANK

The calculation is based on the average fuel consumption over the last 30 km and the remaining driveable fuel quantity. The display shows the approximate distance that can be driven with the fuel quantity remaining in the tank. No guaranteed range remains when the display shows "--- KILOMETRES TO EMPTY TANK ". Refuel as soon as possible.

ΝΟΤΕ

There may be a slight error in the reading if a fuel-driven parking heater* has been used or if driving style has been changed.

¹ Only in certain markets.

² Only applies to diesel cars with particle filter.



02 Instruments and controls

Trip computer*

MPH ACTUAL SPEED.*1

Current speed is displayed in mph if the speedometer is graduated in km/h. If it is graduated in mph then the current speed is shown in mph.


Resetting

- 1. Select --- KM/H AVERAGE SPEED or ---- KM/L AVERAGE
- 2. Press and hold the **RESET** button (C) for at least five seconds to reset the average speed and average consumption at the same time.

¹ Only in certain markets.

Right-hand stalk switch

Windscreen wipers

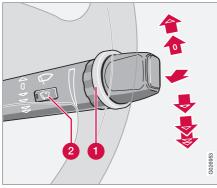

Wiper/washer function - windscreen.

Thumbwheel

2 Rain sensor - on/off

Windscreen wipers off



The windscreen wipers are off when the stalk switch is in position **0**.

Single sweep



Raise the stalk switch to make a single sweep.

Intermittent wiping



You can set a suitable delay between the sweeps. Turn the thumbwheel up for a shorter interval between sweeps. Turn it down to increase the delay.

Continuous wiping



The wipers sweep at normal speed.

The wipers sweep at high speed.

IMPORTANT

Before activating the wipers during winter ensure that the wiper blades are not frozen in and that any snow or ice on the windscreen (and rear window) is scraped away.

IMPORTANT

Use plenty of washer fluid when the wipers are cleaning the windscreen. The windscreen must be wet when the windscreen wipers are operating.

Rain sensor*

The rain sensor automatically activates the windscreen wipers based on how much water it detects on the windscreen. The sensitivity of the rain sensor can be adjusted using the thumbwheel.

Turn the thumbwheel upwards for higher sensitivity and downwards for lower sensitivity. (An extra sweep is made when the thumbwheel is turned upwards.)

On/Off

When activating the rain sensor, the remote control key must be in position I or II and the windscreen wiper stalk switch must be in position **0** (not activated).

To activate the rain sensor:

Press the button. A lamp in the button illuminates to indicate that the rain sensor is active.

To turn the rain sensor off, either:

- Press the button. The lamp in the button goes out.
- Press the stalk switch downward to another wiper program. If the stalk switch is raised, the rain sensor will remain active, the wipers make an extra sweep and then return to rain sensor mode when the stalk is released to position **0**.

Right-hand stalk switch

The rain sensor is automatically deactivated when the remote control key is removed from the ignition switch or 5 minutes after the ignition is switched off.

The windscreen wipers could start and be damaged in an automatic car wash. Deactivate the rain sensor by depressing button (2) while the remote control key is in position or II.

Windscreen/headlamp washer

Move the stalk switch toward the steering wheel to start the windscreen and headlamp washers. The wipers will make several more sweeps once the stalk switch is released.


High-pressure headlamp washing*

High-pressure headlamp washing consumes a large quantity of washer fluid. To save fluid, the headlamps are only washed every fifth wash cycle (within a 10 minute period). When 10 minutes have elapsed following the latest windscreen washing, the headlamps are again washed with high-pressure with the first windscreen washing. Turn the stalk switch toward the steering wheel to wash the windscreen only.

Reduced washing

If only approx. 1 litre of washer fluid remains in the reservoir, the supply to the headlamps and rear window is cut off. This is in order to prioritise visibility through the windscreen.

Wiper and washer, rear window

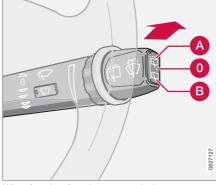

Wiper/washer function - rear window.

Move the stalk switch forward to start rear window washing and wiping. The wiper blade makes several extra sweeps once washing has finished. The button at the end of the stalk switch has three positions:

- A Intermittent wiping: Depress the top of the button.
- Neutral position: Function deactivated.
- B Constant speed: Depress the bottom of the button.


Wiper – reversing

Engaging reverse gear while the windscreen wipers are on initiates intermittent rear window wiping.¹ If the rear window wiper is already on at normal speed, no change is made.

¹ This function (intermittent wiping when reversing) can be deactivated. Volvo recommends that you visit an authorised Volvo workshop to have it deactivated.

Cruise control*

Activating

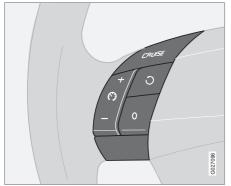


The controls for cruise control are to the left of the steering wheel.

Setting the desired speed:

- 1. Press the **CRUISE** button. **CRUISE** is shown on the combined instrument panel.
- Touch + or to lock the vehicle speed.
 CRUISE-ON is shown.

Cruise control cannot be engaged at speeds below 30 km/h or above 200 km/h.

Increasing or decreasing speed

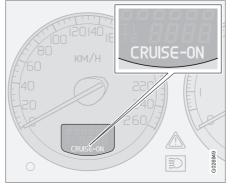

 Increase or decrease the speed by pressing and holding + or –. The speed of the car when the button is released is set as the new speed.

A brief press (less than half a second) on + or - changes the speed by 1 km/h or 1 mph¹.

ΝΟΤΕ

A temporary increase in speed (less than one minute) using the accelerator, such as while overtaking, does not affect the cruise control setting. When you release the accelerator, the car will return to the programmed speed.

Temporary disengagement

 Press 0 to disengage the cruise control temporarily. CRUISE will be shown on the combined instrument panel. The speed set earlier is stored in the memory.

The cruise control is also temporarily disengaged when:

- the brake pedal or clutch pedal is depressed
- speed falls when travelling uphill to below 25-30 km/h
- the gear selector is moved to position N
- wheel spin or wheel lock-up occurs
- a temporary increase in speed lasts longer than 1 minute.

¹ Depending on engine type.



02 Instruments and controls

Cruise control*


Return to the set speed



Press this button to resume the previously set speed. CRUISE ON appears on the combined instrument panel.

Disengaging


-0

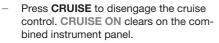




Parking brake, electrical socket, etc.

Parking brake

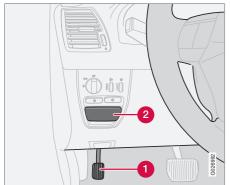

Parking brake, LHD car.

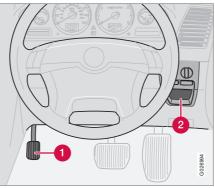

Parking brake, RHD car.

- Parking brake pedal
- Handle for releasing parking brake

The parking brake is at floor level, see illustration, and acts on the rear wheels when depressed.

i) NOTE

The warning symbol in the combined instrument panel illuminates irrespective of how hard the parking brake pedal is depressed.

How to apply the parking brake

1. Press the foot brake down firmly.

- 2. Depress the parking brake pedal firmly as far as possible.
- 3. Release the foot brake and make sure that the car is stationary.
- 4. If the vehicle rolls, the parking brake pedal must be depressed further.
- When parking a vehicle select position 1 (for manual transmission) or P (for automatic transmission).

Parking on a hill

If the car is parked facing uphill; turn the wheels **away from** the kerb.

If the car is parked facing downhill, turn the wheels **towards** the kerb.

🚹 WARNING

Get into the habit of always applying the parking brake when parking on a slope - leaving the car in gear, or in ${\bf P}$ if it has automatic transmission, is not sufficient to hold the car in all situation.


How to release the parking brake

- 1. Press the foot brake down firmly.
- 2. Pull the handle.




Parking brake, electrical socket, etc.

Electrical socket in the rear seat

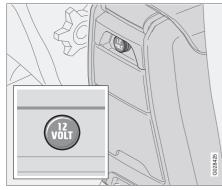

The electrical socket can be used for various accessories, such as mobile phone chargers and coolers. It is designed for 12 V. The maximum current is 10 A. For the socket to supply current, the remote control key must be in at least position **I**.

Steering wheel adjustment

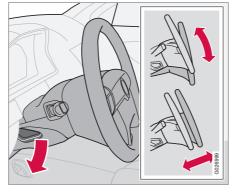


The steering wheel can be adjusted for both height and reach. Press down the control on the left-hand side of the steering column. Then adjust the steering wheel to the position that suits you best. Press the control back into place to lock the steering wheel. If this is difficult, press the steering wheel slightly while pressing the control back.

\Lambda WARNING

Adjust the steering wheel before driving off, never while driving. Check that the steering wheel is fixed in position.

Opening the tailgate

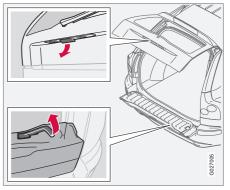

Open the tailgate by pulling the handle indicated in the illustration. Fold down the rear flap by lifting the handle up.

Power windows

Operating

The power windows are operated using the controls in the doors. The ignition key must be in position I or II for the power windows to operate. The windows continue to work when the car has stopped and the remote control key has been removed, provided none of the doors is opened. Operate the windows with caution.

To open a window:

Depress the front of the control.

To close a window:

Raise the front of the control.

i) NOTE

One way to reduce the pulsating wind noise when the rear windows are open is to also open the front windows slightly.


🚹 WARNING

If there are children in the car:

- Always remember to switch off the power supply to the power windows by removing the remote control key if the driver leaves the car.
- Make sure that children or other passengers cannot be trapped in any way when closing the windows.

If the rear door windows are operated from the driver's door - check that none of the rear seat passengers is in danger of getting their hands caught when closing the windows.

Driver's door

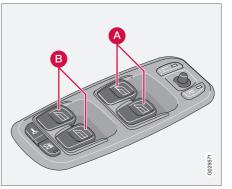

Controls, power windows.

- A Front window controls
- B Rear window controls

The driver can operate all power windows from the driver's seat. The windows can be opened and closed in two ways:

- Depress one of the controls (A) or (B) gently, or pull them up gently. The power windows go up or down as long as the switch is actuated.
- Fully depress one of the controls (A) or (B) or raise it, then release. The side window will then open or close automatically. If the window is obstructed by an object, the movement will stop.



Power windows

NOTE

02

The function auto up for the passenger side is only available in certain markets.

Blocking power windows in the rear doors




Blocking rear power windows and electric child safety locks*.

The power windows in the rear seat can be blocked with the switch on the driver's door control panel. Always remember to switch off current to the power windows (i.e. remove the remote control key) if you leave children in the car unattended.

The light in the switch is illuminated The rear door windows can only be operated from the driver's door.


The light in the switch is extinguished The rear door windows can be operated both with the controls on each rear door and with the controls on the driver's door.

Front passenger seat

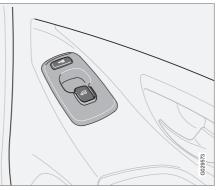

The control for the power window at the front passenger seat operates that window only.

Rear power windows

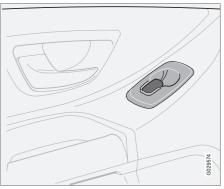

The rear door windows can be operated with the controls on the doors and the switch on the driver's door. If the light in the switch for blocking power windows in the rear doors (located in the driver's door control panel) is illuminated, the rear door windows can only be operated from the driver's door.

WARNING

If the rear door windows are operated from the driver's door, check that none of the rear seat passengers are in danger of becoming trapped in any way when they are closed.

Windows, rearview and door mirrors

Interior rearview mirror



Dimming A Normal position

B Dimmed position.

Bright light from behind could be reflected in the rearview mirror and dazzle the driver. Use dimming when disturbed by light from behind.

Automatic dimming*

Bright light from behind is automatically dimmed by the rearview mirror.

Interior rearview mirror with compass*

The upper left-hand corner of the rearview mirror has an integrated display that shows the compass direction in which the front of the car is pointing. Eight different directions are shown with English abbreviations: **N** (north), **NE** (north east), **E** (east), **SE** (south east), **S** (south), **SW** (south west), **W** (west) and **NW** (north west).

If the compass is activated then it starts automatically in ignition position **II** or when the engine is running. Switch the compass on or off by pressing the button set into the rear of the mirror. Use a straightened paper clip for example. The button is countersunk approximately 2.5 centimetres in the mirror.

Correct zone on compass



The earth is divided into 15 magnetic zones. The compass is set for the geographical area to which the car was delivered. The compass should be calibrated if the car is moved across several magnetic zones.


- 1. Ignition position II.
- 2. Press and hold the button on the rear of the mirror for approximately 3 seconds until ZONE is shown (use a straightened paper clip for example). The number for the current area is shown.
- Press the button several times until the number for the required geographic area (1–15) is shown. After several seconds the



Windows, rearview and door mirrors

display returns to show the compass direction, this means that the change of zone is complete.

Windows, rearview and door mirrors

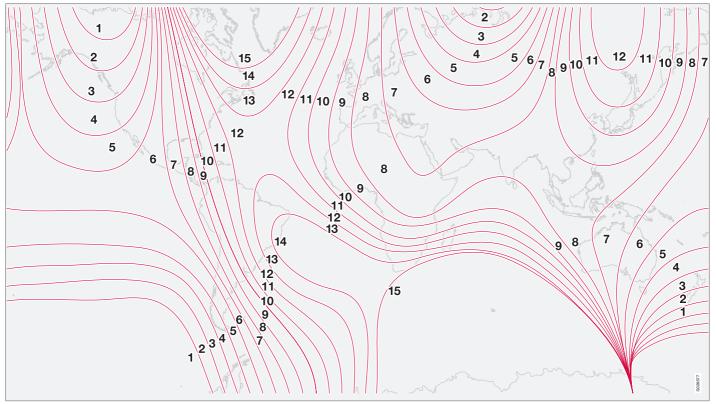

Magnetic zones for the compass.

02

Windows, rearview and door mirrors

Calibration

The compass may need calibrating to work correctly. For best results, switch off all major power consumers such as interior lighting, ventilation fan, heated rear window etc. and avoid having metal objects and magnetic objects close to the mirror.

- 1. Stop the car in a wide open area with the engine running.
- Press and hold the button on the rear of the rearview mirror (use a paper clip or similar) until CAL is shown again (approx. 6 seconds).
- 3. Drive slowly in a circle at a speed of no more than 8 km/h until **CAL** disappears from the display. Which is when calibration is complete.
- 4. Alternative calibration method: Drive off as usual. **CAL** disappears from the display when calibration is complete.

Door mirrors



The controls for adjusting the two door mirrors are at the front of the driver's door armrest. The rearview mirrors can be operated in ignition position I and II.

- Press the L button for the left-hand door mirror or the R button for the right-hand door mirror. The light on the button illuminates.
- 2. Adjust the position with the joystick in the centre.
- 3. Press the L or R button again. The light goes out.

Folding in the door mirrors, see page 55.

\Lambda WARNING

Adjust the mirrors before you begin driving.

Door mirrors with memory function*

If the car has door mirrors with memory function, they work together with the memory setting of the seat, see page 97.

Memory function in remote control* When you unlock the car with one of the remote controls and change the setting of the door mirrors, these new settings are saved in the remote control. The next time you unlock the car with the same remote control and open the driver's door within five minutes, the mirrors will assume their stored positions.

Laminated side windows*

The laminated windows in the front and rear doors improve sound insulation in the passenger compartment and provide better protection against unauthorised entry.



02

Windows, rearview and door mirrors

Water and dirt-repellent coating on the front side windows*



Side windows treated with the water and dirt-repellent coating are marked with a small symbol. For information on glass care, see page 191.




Do not use a metal ice scraper to remove ice from the windows. The water and dirt-repellent coating could be damaged.



02

Power sunroof*

Open positions

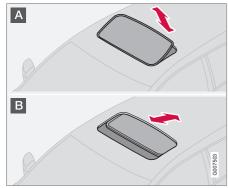

The sunroof controls are located in the roof panel. The sunroof can be opened in two positions:

Ventilation position, up at the rear edge


- В
 - Sliding position, backwards/forwards

The remote control key must be in position I or II.

WARNING

If there are children in the car:

Switch off the supply to the power sunroof by removing the remote control key if the driver leaves the car.

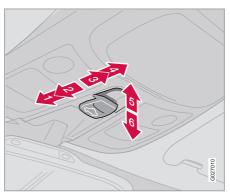

- Closing, automatic
- Closing, manual
- Opening, manual
- Opening, automatic
- Opening, ventilation position
- 6 Closing, ventilation position

Ventilation position

To open:

Press the rear edge of the control (5) upward.

To close:

Pull the rear edge of the control (6) downward.

Switch from ventilation position to comfort position: pull the control rearwards to its end position (4) and release.

Automatic operation

Move the control over the resistance point position (3) to the rearmost end position (4) or over the resistance point position (2) to the front end position (1) and release. The sunroof will open to the comfort position or will close completely.

In order to open from comfort position to maximum opening:

Pull the control to the rear once more to the end position (4) and release.

Manual operation

To open:

Pull the control rearward to the point of resistance (3). The sunroof moves toward the fully open position as long as the button is held depressed.

Power sunroof*


To close:

 Press the control forward to the point of resistance (2). The sunroof moves toward the closed position as long as the button is held depressed.

🔥 WARNING

The sunroof's pinch-protection function only operates during automatic closing, not manual.

Sunscreen

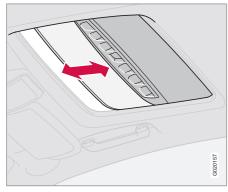

The sunroof features a manual, sliding interior sunscreen. The sunscreen slides back auto-

matically when the sunroof is opened. Grip the handle and slide the screen forward to close it.

Pinch protection

The sunroof's pinch protection function is activated if the hatch is blocked by an object. If blocked, the sunroof will stop and automatically open to the previous position.

🔥 WARNING

The sunroof's pinch protection function only operates during automatic closing, not during manual closing.

Make sure that nobody is in danger of becoming trapped in any way when closing the sunroof.

02

HomeLink[®] *

General



HomeLink[®] is a programmable remote control which can control up to three different devices (e.g. garage door, alarm system, outdoor lighting and indoor lighting etc.) and in doing so replace their remote controls. HomeLink[®] is supplied built into the left-hand sun visor.

The HomeLink[®] panel consists of three programmable buttons and one indicator lamp.

NOTE

 ${\sf HomeLink}^{\textcircled{R}}$ is designed not to work if the car is locked from the outside.

Save the original remote controls for future programming (e.g. when switching to another car).

Delete the button programming when the car is to be sold.

Metallic sun visors should not be used in cars fitted with HomeLink[®]. This may have an adverse effect on its function.

Operation

When HomeLink[®] is fully programmed it can be used in place of the separate original remote controls.

Depress the programmed button to activate the garage door, alarm system etc. The indicator lamp illuminates for the time that the button is kept depressed.

i) NOTE

If the ignition is not activated, HomeLink[®] will work for 30 minutes after the driver's door has been opened.

The original remote controls can of course be used in parallel with HomeLink[®].

If HomeLink[®] is used to operate a garage door or gate, ensure that nobody is in the vicinity of the door or gate while it is in motion.

Do not use the HomeLink® remote control for any garage door that does not have safety stop and safety reverse. The garage door must react immediately when it detects that something is preventing its movement, and stop directly and reverse. A garage door without these characteristics could cause personal injury. For further information - contact the supplier via the Internet: www.homelink.com.

Programming for the first time

The first step erases the memory in HomeLink[®] and must not be carried out when only one individual button is being reprogrammed.

- Depress the two outer buttons and do not release until the indicator lamp starts to flash after approx. 20 seconds. The flashing indicates that HomeLink[®] is set in "learn mode" and is ready to be programmed.
- Position the original remote control 5-30 cm from HomeLink[®]. Monitor the indicator lamp.

HomeLink[®] *

The particular distance that is required between the original remote control and HomeLink[®] depends on the programming of the device in question. Perhaps several attempts will be required at different distances. Maintain each position for approx. 15 seconds before trying a new one.

- Depress the button for the original remote control and the button to be programmed on HomeLink[®] simultaneously. Do not release the buttons until the indicator lamp has changed over from slow to rapid flashing. The rapid flashing indicates successful programming.
- Test the programming by depressing the programmed button on HomeLink[®] and watching the indicator lamp:
 - **Constant glow:** The indicator lamp illuminates with a constant glow when the button is kept depressed, this indicates that the programming is complete. The garage door, gate or similar should now be activated when the programmed HomeLink[®] button is depressed.
 - Glow not constant: The indicator lamp flashes quickly for approx. 2 seconds and then changes over to a constant glow for approx. 3 seconds. This proc-

ess is repeated for approx. 20 seconds and indicates that the device has a "rolling code". The garage door, gate or similar is not activated when the programmed HomeLink[®] button is depressed. Continue the programming in accordance with the following.

- 5. Locate the "programming button¹" on the receiver for the garage door for example, normally located close to the antenna's bracket on the receiver. If you have difficulty in finding the button - consult the supplier's manual, or contact the supplier via the Internet: www.homelink.com.
- Depress and release the "programming button". The button flashes for approx. 30 seconds and the next step must be carried out within this period.
- Depress the programmed button on HomeLink[®], while the "programming button" is still flashing, keep it depressed for approx. 3 seconds and then release. Repeat the press/hold/release sequence up to 3 times to conclude the programming.

Programming individual buttons

To reprogram an individual button, proceed in accordance with the following:

- Depress the required button on HomeLink[®] and do not release until step 3 has been completed.
- When the indicator lamp on HomeLink[®] starts to flash, after approx. 20 seconds, position the original remote control 5-30 cm from HomeLink[®]. Monitor the indicator lamp.

The particular distance that is required between the original remote control and HomeLink depends on the programming of the device in question. Perhaps several attempts will be required at different distances. Maintain each position for approx. 15 seconds before trying a new one.

- 3. Depress the button on the original remote control. The indicator lamp will start to flash. When the flashing has changed over from a slow to a rapid flashing release both buttons. The rapid flashing indicates successful programming.
- 4. Test the programming by depressing the programmed button on HomeLink and watching the indicator lamp:

02

¹ Button designation and colour vary depending on manufacturer.

02 Instruments and controls

HomeLink[®] *

- **Constant glow:** The indicator lamp illuminates with a constant glow when the button is kept depressed, this indicates that the programming is complete. The garage door, gate or similar should now be activated when the programmed HomeLink[®] button is depressed.
- Glow not constant: The indicator lamp flashes quickly for approx. 2 seconds and then changes over to a constant glow for approx. 3 seconds. This process is repeated for approx. 20 seconds and indicates that the device has a "rolling code". The garage door, gate or similar is not activated when the programmed HomeLink[®] button is depressed. Continue the programming in accordance with the following.
- 5. Locate the "programming button²" on the receiver for the garage door for example, normally located close to the antenna's bracket on the receiver. If you have difficulty in finding the button consult the supplier's manual, or contact the supplier via the Internet: www.homelink.com.
- Depress and release the "programming button". The button flashes for approx. 30 seconds and the next step must be carried out within this period.


 Depress the programmed button on HomeLink[®], while the "programming button" is still flashing, keep it depressed for approx. 3 seconds and then release. Repeat the press/hold/release sequence up to 3 times to conclude the programming.

Erasing programming


It is only possible to erase the programming for all the buttons on HomeLink[®], not for individual buttons.

- Depress the two outer buttons and do not release until the indicator lamp starts to flash after approx. 20 seconds.
 - HomeLink[®] is now set in so-called "learn mode" and is ready to be programmed once more, see page 78.

² Button designation and colour vary depending on manufacturer.

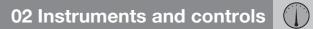

General information on climate control	
Electronic Climate Control, ECC	
Fuel-driven parking heater* 91	

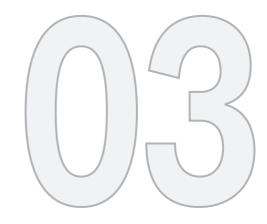

CLIMATE CONTROL



Air conditioning

The climate control system cools or heats as well as dehumidifies the air in the passenger compartment. The car is equipped with electronic climate control (ECC).

03

i NOTE

The air conditioning can be switched off, but to ensure the best possible air in the passenger compartment and prevent the windows from misting, it should always be on.

Misting windows

Reduce the problem of windows misting up on the inside by cleaning the windows. Use a regular window cleaner.

Multi-filter

Make sure that the multi-filter/pollen filter is replaced regularly. Volvo recommends you consult an authorised Volvo workshop.

Ice and snow

Remove ice and snow from the climate control system air intake (the grille between the bonnet and the windscreen).

Fault tracing and repair

Volvo recommends that you engage an authorised Volvo workshop for the fault tracing and repair of the climate control system.

Refrigerant

The climate control system contains R134a refrigerant. This refrigerant contains no chlorine, which means that it is harmless to the ozone layer. The system must only be charged with R134a refrigerant, see also page 279. Volvo recommends that you engage an authorised Volvo workshop to carry out this work.

Ventilation fan function

When the engine is off (and if the remote control key is in position I or II), the ventilation fan is automatically switched off. This is to prevent the battery from becoming discharged.

To activate the ventilation fan, turn the fan control and set the desired speed.

ECC (electronic climate control)

Actual temperature

The temperature you select corresponds to the physical experience with reference to factors such as air speed, humidity and solar radiation in and around the car.

Sensor location

- The sun sensor is on the top side of the dashboard.
- The temperature sensor for the passenger compartment is behind the climate control panel.

NOTE

Do not cover or block the sensors with clothing or other objects.

Side windows and sunroof

To ensure that the air conditioning works satisfactorily, the side windows, and sunroof if appropriate, should be closed.

Acceleration

The air conditioning system switches off temporarily at full throttle. You may briefly feel a temporary rise in temperature.

Condensation


In warm weather, condensation from the air conditioning may drip under the car. This is normal.

To ventilate the climate system's control system the ventilation fan can be started up to 50 minutes after the car's ignition has been switched off. The fan is then switched off automatically after approx. 15 minutes.

Fuel economy


With ECC, the air conditioning system is controlled automatically and is used just enough to cool the passenger compartment and to adequately dehumidify the incoming air. This provides better fuel economy compared to conventional systems where the air conditioning cools the air to just above freezing point.

Air distribution

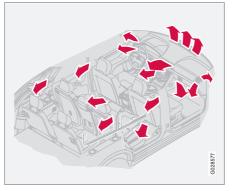

Incoming air is distributed through several different vents located throughout the car.


Air vents in the dashboard

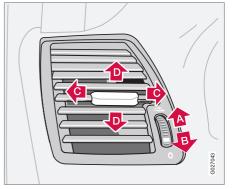

- A Open
- Closed
- Content and the second seco
- Vertical airflow.
- Aim the outer vents towards the side windows to remove misting from the front side windows.
- In cold climates: close the centre vents for the most comfortable climate and best demisting.

03


Panel vents in the door pillar

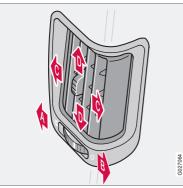

- A Open
- Closed
- 😝 Lateral airflow
- D Vertical airflow.
- 1. Aim the outer vents toward the rear side windows to remove misting.
- 2. Aim the vents inwards for a comfortable climate in the rear seat.

Bear in mind that small children can be sensitive to airflow and draughts.

Ventilated front seats (Executive)

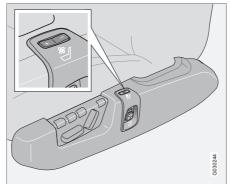

Control for front seat ventilation.

The ventilation system consists of fans in the seat and backrest that draw air through the seat upholstery. The cooling effect increases the cooler the passenger compartment air becomes.

The ventilation is regulated from a control on the control panel on the side of the front seats which has three steps for the fan speed.

To start seat ventilation:

Press briefly on +.

To increase the ventilation in steps:

Press briefly on +.

To obtain maximum ventilation:

Hold + depressed for about 2 seconds.

To decrease the ventilation in steps:

Press briefly on —.

To switch off the ventilation:

Hold — depressed for about 2 seconds.

The ventilation can be used at the same time as front seat heating. For example, the function can be used to remove moisture from clothes.

The ventilation system can be activated when the engine is running.

NOTE


The seat ventilation should be used carefully by people sensitive to draughts. Comfort level I is recommended for long-term use.

IMPORTANT

The seat ventilation cannot be started when passenger compartment temperature is below 5 °C. This is to avoid chilling anyone sitting in the seat.



Seat heating, outer rear seats (Executive)

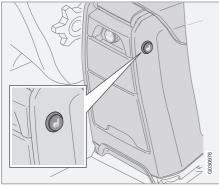

Button for rear seat heating, On/Off.

The seat heating in the rear seats is controlled with a button control in accordance with the illustration above. There is one control on each side of the rear centre console for each respective rear seat.

To start seat heating:

- Press the button.
 - > The symbol in the button illuminates.


To stop the heating:

- Press the button.
 - > The lamp goes out.

03

Electronic Climate Control, ECC

Control panel

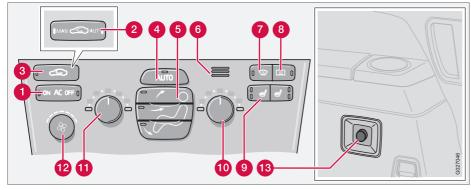

- AC On/off (ON/OFF)
- 2 Recirculation/Multifilter with sensor*
- 8 Recirculation
- 6 Air distribution
- 6 Passenger compartment temperature sensor
- **7** Defroster, windscreen and side windows
- 8 Rear window and door mirror defrosters
- 9 Heated front seats

- 10 Temperature, right-hand side
- Temperature, left-hand side

😰 Fan

13 Fan, rear passenger compartment*

Functions

1. AC - ON/OFF

ON: The air conditioning is on. It is controlled by the system's AUTO function. This way, incoming air is cooled and dehumidified.

OFF: When the defroster function is activated the air conditioning is switched on automatically (can be switched off using the **AC** button).

2. Air quality system, recirculation/ multifilter*

Certain cars are equipped with a "Multifilter" and air quality sensor. The Multifilter separates gases and particles, thus reducing the volume of odours and pollutants. The air quality sensor detects increased levels of contaminants in the outside air. When the air quality sensor detects contaminated outside air, the air intake is closed and the air in the passenger compartment is recirculated. The Multifilter also cleans the air recirculating in the passenger compartment.

Electronic Climate Control, ECC



A green light (**AUT**) illuminates in the button when the air quality sensor is active.

Operation:

Press AUTO to activate the air quality sensor (normal setting).

Or:

Select one of the following three functions by repeatedly pressing

- The lamp for **MAN** illuminates. Recirculation is now activated.
- No lamp illuminates. Recirculation is not activated unless needed to cool in a warm climate.
- The lamp for **AUT** illuminates. Recirculation is now activated.

Keep the following in mind:

- Make it a rule to have the air quality sensor activated at all times.
- Recirculation is limited in cold weather to avoid misting.
- If misting occurs, you should deactivate the air quality sensor.

- If misting occurs, you can use the defroster functions for the windscreen, side windows and rear window.
- Follow the Volvo service programme for the recommended replacement interval of the Multifilter. If the car is used in environments where more contaminants are present, it may be necessary to change the Multifilter more often.

3. Recirculation

Recirculation can be used to shut out bad air, exhaust, etc. from the passenger compartment. The air in the passenger compartment is recirculated, i.e. no outside air is taken into the car when this function is activated.

If you allow the air in the car to recirculate, there is a risk of icing and misting, especially in winter.

The timer function (cars with Multifilter and air quality sensor have no timer function) minimises the risk for ice, misting and bad air.

Activate the function as follows:

- 1. Press for more than 3 seconds. The lamp flashes for 5 seconds. The air recirculates in the car for 3-12 minutes depending on the outside temperature.
- 2. The timer function is activated each time you press

To switch off the timer function:

 Press again for more than 3 seconds. The lamp illuminates for 5 seconds to confirm your selection.

4. AUTO

The **AUTO** function automatically regulates climate control and maintains the selected temperature. The automatic function controls heating, air conditioning, air quality sensor, fan speed, recirculation and air distribution. If you select one or more manual functions, the other functions continue to be controlled automatically. All manual settings are switched off when **AUTO** is switched on.

5. Air distribution

- When the top button is depressed, air is directed to the windows
- When the centre button is depressed, air is directed to the head and body
- When the lower button is depressed, air is directed to the legs and feet

Press **AUTO** to return to automatic air distribution.

6. Passenger compartment temperature sensor

The passenger compartment temperature sensor monitors the temperature inside the car.

03

Electronic Climate Control, ECC

7. Defroster, windscreen and side windows

03

Used to quickly remove misting and ice from the windscreen and side windows. Air flows to the windows at high fan speed. The light in the defroster button illuminates when the function is active.

When the function is selected the following also takes place to provide maximum dehumidification of the air in the passenger compartment:

- the air conditioning (AC) is automatically engaged (can be switched off with the AC button).
- recirculation is automatically disengaged.

When the defroster function is switched off the climate control system returns to the previous settings.

8. Rear window and door mirror defrosters

Use this button to quickly remove misting and ice from the rear window and door mirrors, see page 57 for further information about this function.

9. Heated front seats

To activate front seat heating:

1. Press once: High heat – both lamps illuminate.

- 2. Press once more: Low heat one lamp illuminates.
- Press once more: Heating switched off no lamps illuminate.

Volvo recommends that an authorised Volvo workshop adjusts the temperature.

10 and 11. Temperature selector The two knobs can be used to set the temperature for the passenger and driver's sides of the car.

i NOTE

Heating or cooling cannot be hastened by selecting a higher or lower temperature than the actual desired temperature.

12. Fan


Turn the knob to increase or decrease fan speed. If **AUTO** is selected then fan speed is regulated automatically. The previously set fan speed is disengaged.

i) NOTE

If the knob is turned anticlockwise and the fan indicator in the display goes out, the fan and the air conditioning are switched off. **13. Fan, rear passenger compartment (option in cars seating seven)** Fan speed can be increased or decreased by turning the knob. This only applies if AC is selected for both front and rear* passenger compartment. The button for rear passenger compartment is in the centre console switch panel, see page 55.

Fuel-driven parking heater*

General information about heaters

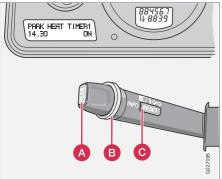

A READ button

- B Thumbwheel
- RESET button

The electrical system must be "awakened" before the parking heater can be programmed.

This is done by:


- pressing the READ button or
- activating main beam or
- turn the remote control key to key position I.

The parking heater can be started immediately or set with two different start times using

TIMER 1 and **TIMER 2**. Here, time refers to the time when the car is heated and ready. The car's electronic system calculates when heating should be started based on the outside temperature.

The heater is not run if the outside temperature exceeds 25 °C. At -10 °C and below, the maximum running time of the parking heater is 60 minutes.

If the parking heater does not start, despite repeated attempts, Volvo recommends that you contact an authorised Volvo workshop. A message is shown in the display.

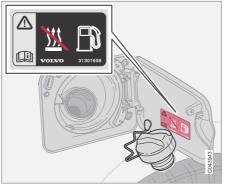

Warning decal on fuel filler flap.

The car must be outdoors when the parking heater is used.

Switch off the parking heater before refuelling. Fuel which spills out could be ignited.

Check in the display that the parking heater is off. (When the parking heater is running, **PARK HEAT ON** is shown in the display.)

Messages in the display

Once the settings for **TIMER 1**, **TIMER 2** and **Direct Start is activated** are activated, the amber warning symbol in the combined instrument panel illuminates and explanatory text is shown in the display.

When you leave the car, you will receive a message regarding the current settings of the system. The message disappears when the car is locked from the outside using the remote control key.

Parking on a hill

If you park your car on a steep incline, the front of the car should be facing down the slope to ensure the supply of fuel to the parking heater.

Fuel-driven parking heater*

Clock/timer

If the car clock is reset after the heater timers are programmed, the selected times will be cancelled.

Setting the TIMER

For safety reasons, you can only programme times for the following 24 hours, not several days in advance.

- 1. Scroll using the thumbwheel until **TIMER** 1 or 2 is shown in the display.
- 2. Briefly press **RESET** so that the hours setting starts to flash.
- 3. Scroll with the thumbwheel to the desired hour.
- 4. Briefly press **RESET** to move to the flashing minutes setting.
- 5. Scroll with the thumbwheel to the desired minute.
- 6. Briefly press RESET to confirm the setting.
- 7. Press RESET to activate the timer.

Deactivating timer-started parking heater

Proceed as follows to manually switch off the parking heater before the set time has elapsed:

1. Press READ.

- 2. Use the thumbwheel to scroll to the text **PARK HEAT TIMER 1** or 2. The text **ON** flashes on the display.
- Press RESET. The text OFF is shown with a constant glow and the parking heater is switched OFF.

Direct start

- Scroll with the thumbwheel until DIRECT START is shown in the display.
- 2. Press **RESET** to access the options **ON** or **OFF**.
- 3. Select ON.

The heater will now run for 60 minutes. Heating of the passenger compartment will begin as soon as the engine coolant has reached a temperature of 30 $^\circ$ C.

Immediate stop of heater

- 1. Scroll with the thumbwheel until **DIRECT START** is shown in the display.
- Press RESET to access options ON or OFF.
- 3. Select OFF.

) ΝΟΤΕ

The car can be started and driven while the parking heater is still running.

Battery and fuel

If the battery has insufficient charge or the fuel level is too low, the parking heater will be switched off automatically. A message is shown in the display. Acknowledge the message by pressing **READ** once.

IMPORTANT

Repeated use of the parking heater combined with short journeys may discharge the battery and impair starting. If the heater is used regularly, the car must be driven for the same time as the heater is used in order to ensure that the alternator has time to charge the battery.

Additional heater (diesel)*

Extra heat from the additional heater may be required in cold weather to reach the correct temperature in the passenger compartment.

The additional heater starts automatically when extra heat is required if the engine is running. It is switched off automatically when the correct temperature is reached or when the engine is switched off.



Front seats	96
Front seats - Executive	99
Interior lighting	. 100
Storage spaces in the passenger compartment	. 102
Storage spaces in the passenger compartment - Executive	. 107
Rear seat	. 108
Loading	. 110
Cargo area	. 111



INTERIOR



Front seats

Seating position



The driver's and passenger seats can be adjusted to the optimum sitting and driving positions.

- Forward/backward: lift the handle to adjust the distance to the steering wheel and pedals. Check that the seat is locked after changing position.
- 2 Raise/lower the front of the seat cushion, pump up/down, (driver's and passenger side*).
- 8 Raise/lower the seat, pump up/down, (driver's and passenger side*).


- 4 Lumbar support¹, turn the wheel.
- Backrest rake: turn the wheel.
- Control panel for power seat*.

WARNING

Adjust the position of the driver's seat before setting off, never while driving.

Check that the seat is locked in position.

Tipping the front seat backrest

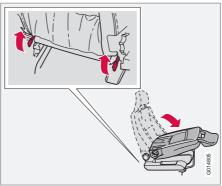

The passenger seat backrest can be folded forward to make room for long loads.

- 1. Move the seat as far back as possible.
- 2. Adjust the backrest to an upright position 90 degrees.
- 3. Lift the catches on the rear of the backrest while folding it forwards.
- Slide the seat forward so that the head restraint is "locked in place" under the glovebox.

Raising takes place in reverse order.

🔥 WARNING

Grasp the backrest and make sure that it is properly locked after being folded up in order to avoid personal injury in the event of sudden braking or an accident.

¹ Also applies to power seat.

Front seats


Floor mats*

Volvo supplies floor mats especially produced for your car.

🚹 WARNING

The floor mat at the driver's seat must be firmly fitted and secured in the attachment clips to prevent it from being trapped around and under the pedals.

Power seat*

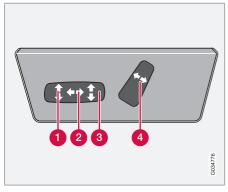


The seats can be adjusted for a certain time after unlocking the door with the remote control key without the key being inserted into the ignition switch. The seat can always be adjusted in ignition position I or II.

- Front edge of seat cushion up/down
- 2 Seat forward/rearward
- 3 Seat up/down
- 4 Backrest rake

An overload protection is deployed if one of the seats is blocked. If this happens, turn off the ignition and wait a short time before adjusting the seat again. Only one of the seat's settings can be adjusted at a time.

Memory function*

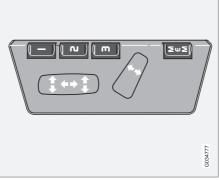

Buttons for memory function.

Store setting

- 1. Adjust seat.
- 2. Press and hold button **MEM** while pressing button **1**, **2** or **3** simultaneously.

Using a stored setting

Press one of the memory buttons **1–3** until the seat stops. If you release the button then the movement of the seat will stop.

Key memory in remote control key

The driver's seat positions are stored in the key memory when the car has been locked with the remote control key. When the car is unlocked with the same remote control key the driver's seat and rearview mirrors adopt the stored positions when the driver's door is opened.



The key memory is independent of the seat memory.

Emergency stop

If the seat accidentally begins to move, press any of the buttons to stop the function.



Front seats


🔥 WARNING

Risk of crushing. Make sure that children do not play with the controls.

Check that there are no objects in front of, behind or under the seat during adjustment.

Ensure that none of the backseat passengers will be trapped.

Front seats - Executive

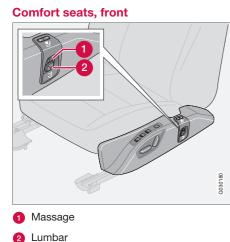


Massage



- Button for activating massage.
- Hard massage
- Soft massage

Each front seat has massage in the backrest. The massage is performed by air cushions that can massage with either a hard or soft setting. When one of the settings is selected the massage is carried out in accordance with the cycle: massage 6 minutes - pause 4 minutes massage 6 minutes etc.

When the button is in the centre position, or when the remote control key is in position **0**, massage is not activated. Setting lumbar

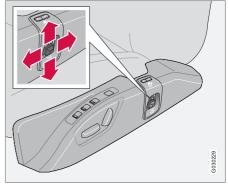

Button for setting lumbar.


The lumbar support is set with the same air cushions used for massage. Adjustment can be made steplessly both in terms of depth and height using the control button, see the illustration above.

The lumbar support can be set when massage is not active.

A memory function recalls the lumbar support's setting when massage is stopped or when the pressure in the air cushions has decreased, e.g. after a longer period of parking.

Interior lighting

Reading lamps and interior lighting

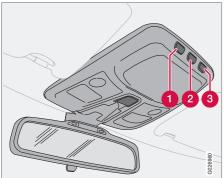

Controls in roof console for front reading lamps and passenger compartment lighting.

- 1 Reading lamp left-hand front
- 2 Interior lighting
- 3 Reading lamp right-hand front

Passenger compartment lighting¹ is switched on with a short press on button (2), at the same time automatic lighting is activated, see page 101. Passenger compartment lighting is switched off with a short press on button (2).

All lighting in the passenger compartment can be switched on in ignition position I and II as

well as when the engine is running. The lighting can also be activated within 10 minutes after:


- the engine has been switched off and the ignition is in position **0**
- the car has been unlocked but the engine has not been started

Following which, it is switched off automatically.

Front roof lighting

The front reading lamps are switched on or off by pressing the relevant button in the roof console.

Rear roof lighting

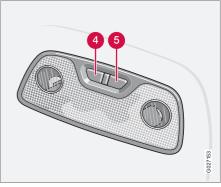

Rear reading lamps

- 4 Reading lamp left-hand rear, On/Off
- 6 Reading lamp right-hand rear, On/Off

The lamps are switched on or off by pressing the relevant button.

There are also reading lamps for the third row of seats in cars that seat seven.

Courtesy lighting

Courtesy lighting (and passenger compartment lighting) is switched on and off respectively when a side door is opened or closed.

¹ Courtesy lighting follows passenger compartment lighting.

Interior lighting

Cargo area lighting


The cargo area has a lamp on the inside of the tailgate.

The rear lamp in the passenger compartment and the lamp in the tailgate are switched on and off respectively when the tailgate is opened or closed.

Glovebox lighting

Glovebox lighting is switched on and off respectively when the lid is opened or closed.

Vanity mirror*

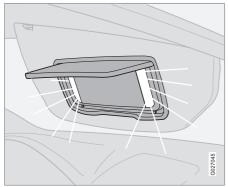

The light illuminates automatically when the cover is lifted.

Automatic lighting

Automatic lighting can be disengaged by pressing button (2), see page 100, and holding it depressed for more than 3 seconds. A short press on the button re-engages automatic lighting.

When automatic lighting is activated the passenger compartment lighting is switched on automatically² and remains on for 30 seconds:

- the car is unlocked with the key or remote control key
- the engine is switched off and the key is turned to the **0** position.

Passenger compartment lighting is switched on and remains on for 10 minutes if one of the doors is open and the passenger compartment lighting is not switched off.

Passenger compartment lighting is switched off when:


- the engine is started
- the car is locked with the key or remote control key.

The programmed times, 30 seconds and 10 minutes, can be changed by a Volvo work-shop.

² The function is light-dependent and is only activated when it is dark.



Storage spaces

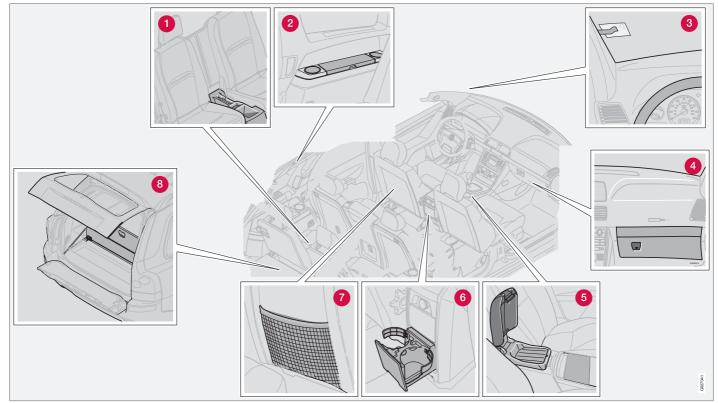

- 1 Storage compartment in third row of seats
- 2 Storage compartment and cup holder
- 3 Ticket clip
- 4 Glovebox
- 5 Storage tray in centre console
- 6 Cup holder for rear seat passengers
- Storage pocket (also on the front edge of the front seat cushions)
- 8 Bag holder

\Lambda WARNING

Ensure that no hard, sharp or heavy objects lie or protrude in such a way that they could cause injury during heavy braking.


Always secure large and heavy objects with a seatbelt or cargo retaining straps.

Pen holder



The centre console contains a pen holder.

Glovebox

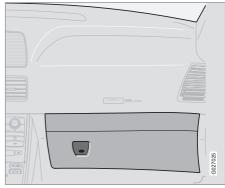


The glovebox can be used to store things such as the owner's manual, maps, pens and petrol cards.

Coat hanger



The coat hanger is only intended for light garments.

Ashtray for rear seat passengers*

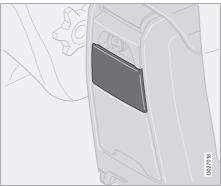


Open the ashtray by pulling the top edge outward.

To empty:

- 1. Open the ashtray.
- 2. Press the cover outwards and tip it back.
- 3. Then lift it out.

Cup holder/bottle holder for rear seat passengers

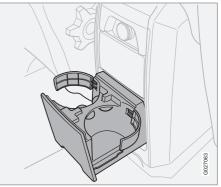


Pull the bottom edge of the insert to open.

The cup holder insert can be removed:


 Detach the two clips so the holder can be used for large bottles.

Storage compartment and cup holder (cars seating seven)

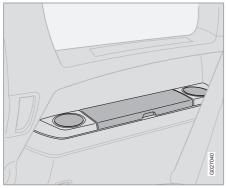

This storage compartment can be used for CDs, books and the like.


Storage tray in centre console

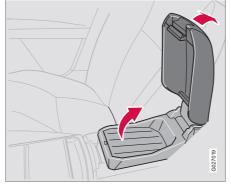

The centre console contains a storage tray for food and drinks, for example. The armrest can be folded back to make a "table" for rear seat passengers.

Under the storage tray is a storage compartment, e.g. for CD discs.

Cup holder

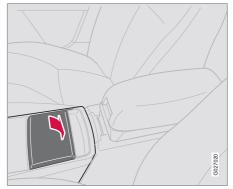


Cup holder for front seat passengers.

Ashtray*

- Pull out the insert to empty the astray.




Storage compartment in the third row of seats (cars seating seven)

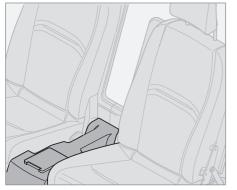

This storage compartment can be used for pens and other small items.

Storage spaces in the passenger compartment - Executive

Cooler box

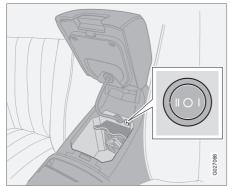

There is a cooler box under front seat's folding armrest. Adjust the cooling level with the button (see illustration). The cooler box works when the engine is running or in key position **II**.

Store bottles well sealed in the cooler box and make sure that the door is closed for the journey.



Rear seat

Rear seats - second row (cars seating seven)



Lowering the backrest for entry into the car

Lift the handle (1) up while pushing the seat forward. Do the reverse to return the seat to its original position.

Adjusting the seat front - rear

Lift the bracket (2) to move the seat forwards or backwards.


Sliding seat (cars seating seven)



The centre seat in the second row can be slid farther forward than the other seats. Sliding the seat completely forward improves contact between a child sitting on the integrated booster cushion and front seat occupants.

Lift the bracket (A) to move the seat forwards or backwards.

Removing the rear section of the centre console

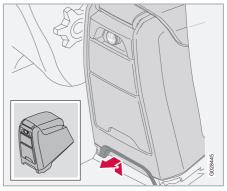


The centre console must first be removed if you wish to slide the centre seat in the second row forward.

- 1. Remove the rear section of the centre console by pulling the catch straight out as illustrated above.
- 2. Then lift the console out of the way.

Rear seat

Head restraint, rear seat - centre seat

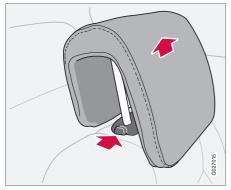

The lowest position should only be used when the backrest is to be folded down or when no one is sitting in this seat.

After raising the backrests in the second and third row, it is important to make sure that the backrests have locked into position. Otherwise the protective system of the seats may be compromised.

i) NOTE

The head restraint cannot be removed completely.

The centre seat head restraint can be adjusted to four different heights. Raise the head restraint as necessary.

Press in the release button to lower it. See illustration.



Loading

General

Payload depends on the car's kerb weight. The total of the weight of the passengers and all accessories reduces the car's payload by a corresponding weight. For more detailed information on weights, see page 274.

🚹 WARNING

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

Load on the roof

Load carriers

Load carriers designed by Volvo are recommended in order to avoid damaging the car and for maximum possible safety while driving.

Carefully follow the mounting instructions enclosed with the load carriers.

- Check periodically that the load carriers and load are properly secured. Lash the load securely with retaining straps.
- Distribute the load evenly over the load carriers. Put the heaviest objects at the bottom.
- The size of the area exposed to the wind, and therefore fuel consumption, increase with the load's size.

• Drive gently. Avoid quick acceleration, heavy braking and hard cornering.

M WARNING


Load no more than 100 kg on the roof, inclusive of the load carriers or space box. The car's centre of gravity and driving characteristics are altered by roof loads.

Cargo area

Extending the cargo area – second row of seats

IMPORTANT

There must be no objects on the rear seat when the backrest is to be folded down. The seat belts must not be connected either. Otherwise there is a risk of damaging the rear seat upholstery.

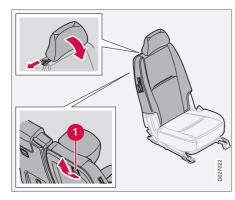

- 1. Set the seats in their rearmost positions (applies only to cars seating seven).
- 2. Lower the head restraint.

3. Release the catch (1) and fold down the backrest. Press down to lock the backrest in its folded position.


🚹 WARNING

For reasons of safety, no passengers should sit in the third row of seats if the outer head restraints in the second row are lowered.

Extending the cargo area – third row of seats (cars seating seven)

IMPORTANT

There must be no objects on the rear seat when the backrest is to be folded down. The seat belts must not be connected either. Otherwise there is a risk of damaging the rear seat upholstery.

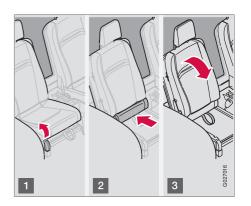

Push the second row of seats to its front position, see page 96.

- Lift the handle upward.
- 2 Slide the seat cushion to its rearmost position. Fold in the right and left-hand cargo eyes in order to avoid damage when lowering the backrest.
- 3 Fold down the backrest (The head restraint folds in automatically when the backrest is folded).


Repositioning the third row of seats

- 1. Raise the backrest to its normal position.
- 2. Take hold of the eyes and pull out the seat cushion until you hear a click.

Cargo area

- 3. Raise the head restraint.
 - > The seat is now ready for use.

General

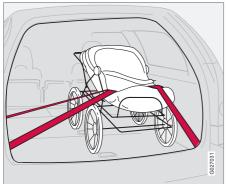

Payload depends on the car's kerb weight. The total of the weight of the passengers and all accessories reduces the car's payload by a corresponding weight. For more detailed information on weights, see page 274.

Loading the cargo area

The seatbelts and airbags provide the driver and passengers substantial protection, especially in frontal collisions. However, you must also remember to protect yourself against injuries from behind. When loading cargo, bear in mind that improperly secured or incorrectly loaded objects in the cargo area could be thrown forward with great speed and force in the event of a collision or sudden braking, causing serious injuries.

Bear in mind that if an object weighing 20 kg is subjected to a frontal collision at a speed of 50 km/h, its impact weight will be 1000 kg.

Think about the following when loading:

- Do not load extremely heavy objects up by the front seats. The lowered backrest will be pressed down unnecessarily hard.
- Place the load by the backrest.
- Position heavy loads as low as possible.
- Position wide loads on each side of the division in the backrest.
- Cover sharp edges with something soft.
- Secure the load with retaining straps using the car's lashing eyes.
- Never load above the backrest without a load net.

🔥 WARNING

The driving characteristics of the car change based on the car's kerb weight and how heavily it is loaded.

Never load cargo above the backrests! If you do so, the load could be thrown forward in the event of sudden braking or a collision and severely injure you or your passengers. Remember to always secure (bind) the load properly.


If the rear seat backrest is lowered, do not load the car higher than 50 mm under the top edge of the rear passenger windows. Leave 10 cm of free space from the windows inwards. Otherwise, the intended protection of the inflatable curtain, which is hidden in the headlining, may be compromised.

Always secure the load. Always secure the load. During heavy braking the load may otherwise shift, causing personal injury to the car's occupants.

Turn off the engine and apply the parking brake when loading or unloading long objects! Otherwise you may accidentally knock the gear lever or gear selector with the load and cause a gear to engage and the car to move off.

Cargo area

Safety net

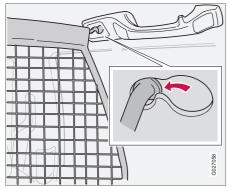


The safety net prevents luggage and cargo from being thrown forward in the passenger compartment during heavy braking.

The net is made of a strong nylon fabric and can be secured two different ways:

- Behind the rear seat backrest
- Behind the front seats if the rear seat is lowered.

Fitting the safety net

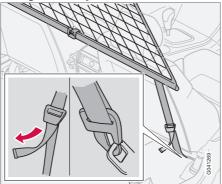


If the car is equipped with a cargo area cover, remove it before fitting the safety net.

- 1. Hook the upper rod in the front or rear roof mounting.
- 2. Hook the other end of the rod in the roof mounting on the other side.
- 3. Secure the safety net anchoring straps in the eyes on the floor if the net is secured in the rear roof mountings.
- 4. Use the eyes in the seat slide rail if the net is secured in the front roof mountings.

Only applies to cars seating seven:

- 1. Make sure the net lies in front of the side panel armrest when securing.
- 2. Tension the safety net using the anchoring straps.

Folding up the safety net

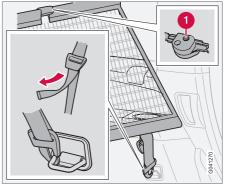

The safety net can be folded up and placed in the cargo area floor (for cars seating five).

 Press the buttons (1) in the safety net hinges to release the hinges and fold up the net.


Cargo area

🔥 WARNING

Make sure that the upper mountings of the safety net are correctly fitted and that the anchoring straps are securely fastened.

Do not use a damaged net.

Steel safety grille*

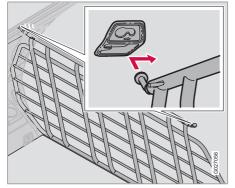


The protective grille in the cargo area prevents cargo or pets from being thrown forward in the passenger compartment in the event of heavy braking.

For reasons of safety, the protective grille must always be mounted and secured correctly.

Fit the protective grille as follows:

- Lift in the protective grille through the tailgate opening or one of the rear doorways (fold down the seats in the second row if necessary).
- 2. Insert one of the protective grille mountings in its bracket above the rear door behind the second row of seats.

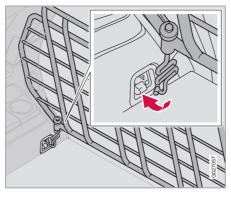


- 3. Slide the protective grille mounting to the front position of the bracket.
- 4. Place the other protective grille mounting in its bracket above the other rear door and slide it to the front position.

- 5. Insert the attaching brace through the lower mounting in the protective grille from underneath, as indicated in the illustration.
- 6. Fit the spring on the attaching brace and screw in the knob.
- Fit the hook from the attaching brace in the load securing eyelet and tighten the knob until the attaching brace takes hold in the load securing eyelet.
- 8. Do the same on the other side.
- 9. Tighten both attaching braces alternately.
- 10. Fit protective caps on the exposed screw threads above the knobs.

🔥 WARNING

For cars seating seven: For reasons of safety, no passengers should sit in the third row of seats if the protective grille is positioned behind the second row of seats.

Cargo area

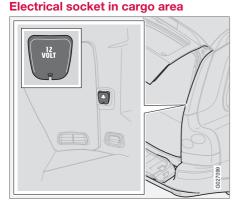


Slide down the cover when you wish to use the socket. It works regardless of whether the ignition is on or off.

If the ignition is switched off and a power consumer that uses more than 0.1 A is connected to the electric socket, a warning message is shown in the display.

i note

Remember not to use the electrical socket with the engine switched off because of the risk of discharging the car's battery. Cargo cover*

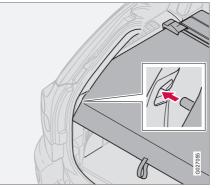


Pull out the cargo area cover, pull it over the cargo and hook it into the holes in the rear pillars of the cargo area.

Removing the cargo area cover

Press the end pieces of the cargo area cover inwards, pull up and release. When fitting, press the end pieces of the cargo area cover down into the holders.

\Lambda WARNING

Do not place objects on the cargo area cover. They could injure passengers during braking or evasive manoeuvres. Bag holder*

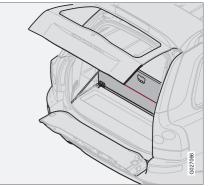


Open the hatch in the cargo area. Hang or secure your grocery bags using the tensioning straps or holders.



Cargo area

Cargo area compartment, contents

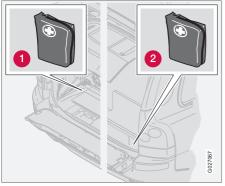

- 1 Location of first aid kit in cars seating five.
- 2 Location of first aid kit in cars seating seven.

The following is housed in the floor compartment:

- Warning triangle*
- Tool kit
- First aid kit*
- Jack (alternative location)

(i) NOTE

Some components of the first-aid kit have an expiration date and should be replaced before this date.

Opening the compartment in the cargo area floor (cars seating five)

- Lift up the cover in the cargo area floor.

If the car is equipped with a carrier bag holder:

 Lift the cover, detach the tensioning straps to the grocery bag holder.

Opening the compartment in the cargo area floor (cars seating seven)

- Lift up the cover.

If the car is equipped with a carrier bag holder:

 Open the upper cover, detach the tensioning straps to the grocery bag holder, if fitted, and open the lower cover.

IMPORTANT

Remember not to put anything in the area that the cushions fold into. The cushions and seat mechanisms could be damaged.



1		
	Remote control key - key with remote control	120
	Locking and unlocking	122
	Child safety locks	125
	Alarm*	127




LOCKS AND ALARM



Remote control key - key with remote control

Keys - Electronic immobiliser

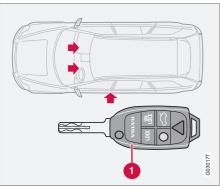

Remote control key. This key opens all locks.

The car is supplied with two remote control keys - they are collapsible and equipped with built on remote control.

Loss of key

If you should lose one of your remote control keys, you are recommended to bring the remaining keys to an authorised Volvo workshop. The code of the missing key must be erased from the system as a theft prevention measure. The other keys must be re-coded in the system at the same time. The key blade's unique code is provided by authorised Volvo workshops, which are recommended when ordering new key blades.

A maximum of six remote control keys can be programmed and used for one single car.

Immobiliser


The keys are fitted with coded chips. The code must be accepted by the reader (receiver) in the ignition switch. The car can only be started if the correct key with the correct code is used.

I) NOTE

The key blade on the remote control key must be fully extended (as illustrated) when starting the car. Otherwise there is a risk that the immobiliser function will prevent the car from starting.

Ignition keys and electronic immobiliser The remote control key must not hang with other keys or metal objects on the same key ring. The electronic immobiliser could be activated erroneously and the car will not start.

Remote control functions

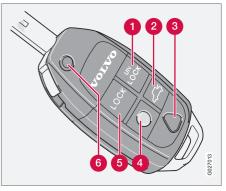

1 Unlocking

 Press the button once to unlock all doors, the tailgate and the fuel filler flap simultaneously.

2 Tailgate

- Press the button once to unlock the tailgate only.
- Two presses both unlocks and opens the tailgate slightly.

8 Panic function

Panic function - Can be used to attract attention in an emergency. Press and hold the red button for at least 3 seconds or press it 2 times

Remote control key - key with remote control

within the same space of time to activate the direction indicators and the horn. The panic alarm is deactivated automatically after 25 seconds or by pressing any of the buttons on the remote control key.

4 Approach light duration

Do the following when you approach the car:

 Press the yellow button on the remote control key.

The interior lighting, position/parking lamps, number plate lighting, door mirror lamps* will now switch on. The lighting on a coupled trailer will also switch on. These lamps remain lit for 30, 60 or 90 seconds. A suitable time setting can be made at a workshop - an authorised Volvo workshop is recommended.

To extinguish the approach lighting:

Press the yellow button again.


6 Locking

Lock all doors, tailgate and fuel filler flap with the button. There is a delay of approx. 10 minutes for the fuel filler flap.

6 Folding/opening key

The remote control key can be folded by pressing the button and folding the key blade section into the keypad at the same time. The folding key will open automatically with one press of the button.

Replacing the remote control key's battery

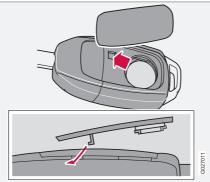


Replace the battery after repeated failure by the locks to respond when remote control key signals are transmitted within a normal distance.

- 1. Remove the cover by carefully prising up the rear edge of with a small screwdriver.
- Replace the battery (type CR 2032, 3 V) with the plus side facing up. Avoid touching the battery and its terminals with your fingers.

- 3. Refit the cover. Make sure the rubber seal is properly fitted and free from damage to prevent water from entering.
- 4. Return the old battery to your Volvo workshop so that it is disposed of in an environmentally safe manner.

Locking and unlocking

Locking/unlocking the car from outside

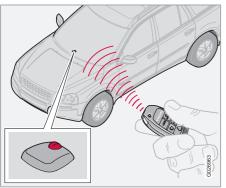

05

The remote control key locks/unlocks all side doors and the tailgate simultaneously. The side door lock buttons and inside handles are disengaged¹.

The fuel filler flap can be opened when the car is unlocked. The flap remains unlocked for 10 minutes after the car has been locked.

i NOTE


The car can be locked even if a door or the tailgate is open. When the door is closed there is a risk that the keys will be locked in.

Automatic relocking

If none of the doors or the tailgate is opened within 2 minutes of unlocking with the remote control key then all are locked again automatically. This function prevents the car from being left unlocked unintentionally.

For cars with alarms, see page 127.

Automatic locking

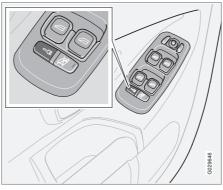

Automatic locking is activated and deactivated from the control panel in the driver's door. The function operates by locking the doors automatically when the speed of the car exceeds 7 km/h. They remain locked until a door is opened from the inside or when all doors are unlocked from the control panel.

Activating/deactivating

The remote control key must be in key position ${\bf I}$ or ${\bf II}.$

Press the **READ** button in the left-hand stalk switch to acknowledge any messages on the display.

Press and hold the button for central locking until a new message for lock status is shown in the display.

The messages AUTOLOCK ACTIVATED (the car is also locked when it moves) and AUTOLOCK DEACTIVATED respectively are shown on the display.

¹ Applies to certain markets

Locking and unlocking


Locking/unlocking the car from inside



All the doors and the tailgate can be locked or unlocked simultaneously using the control panel in the driver's door (or passenger door).

All doors can be locked using the lock button on the control panel by each respective door.


Locking the glovebox

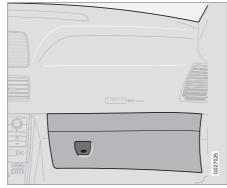

The glovebox can be locked with the remote control key's key blade.

Locking/unlocking the tailgate

The alarm for the tailgate can be disarmed and the tailgate unlocked on its own by using the remote control key's *button.

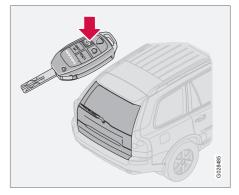

If the car is equipped with an alarm^{*} the alarm indicator on the instrument panel stops to show that alarm for the whole of the car is not armed. The alarm's level and movement sensors and the sensors for opening the tailgate are disconnected.

The doors remain locked and armed.

The tailgate can be opened in two different ways

One press – The tailgate is unlocked but remains closed. Disengage the lock with the outside handle and open the tailgate.

If the tailgate is not opened within 2 minutes then it is relocked and the alarm is re-armed.

Locking and unlocking

Two presses – The tailgate is unlocked and the lock plunger is disengaged, at which point the tailgate is opened a few centimetres. Lift the outside handle in order to open the tailgate. Rain, cold, frost or snow could prevent the tailgate from disengaging from the lock plunger.

i) NOTE

- When the boot lid/tailgate is unlocked with 2 presses, automatic relocking does not take place because the boot lid/tailgate is open - it must be closed manually.
- After the boot lid/tailgate has been closed it is unlocked and the alarm is not armed relock it and re-arm the alarm with the remote control key's **LOCK** button.

Deadlocks*2


When deadlocked, the doors cannot be opened from the inside if they are locked.

The deadlocks function is activated from the outside with the remote control key's **LOCK** button, or by locking the driver's door with the key blade, and is set after a 10-25 second delay after the doors have been locked. All doors

must be closed before deadlocks can be activated.

The car can only be unlocked from a deadlock state with the remote control key's **UNLOCK** button. The driver's door can also be unlocked with the key blade.

Temporary deactivation

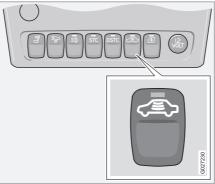

If someone is going to stay in the car but the doors must be locked from the outside, then the deadlocks function can be temporarily switched off.

- Insert the remote control key into the ignition switch, turn it to key position II and then back to position I or 0.
- Press the button. Note that the alarm's* movement and tilt detectors are switched off at the same time, see page 128.

The lamp in the button illuminates until the car is locked with the remote control key. A message is shown on the display as long as the remote control key remains in the ignition switch.

Next time the engine is started the system is reset to zero and the deadlocks function and the alarm's movement and tilt detectors are then re-engaged.

) ΝΟΤΕ

- Remember that the car's alarm is armed when the car is locked.
- If any of the doors are opened from the inside then the alarm will be triggered.

WARNING

Do not allow anyone to remain in the car without deactivating the deadlocks function.


² Only in combination with alarm.

Child safety locks

Manual child safety locks – tailgate and rear doors

The controls for the child safety locks are in the bottom edge of the tailgate and in the rear edge of the rear doors. The controls are only accessible when the tailgate is open or the rear doors are open.

Tailgate

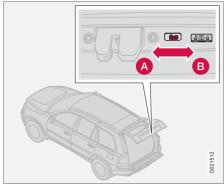


Control for child safety lock - tailgate.

Adjust the tailgate control by sliding it sideways between the outer positions (use a flat metal object, such as a screwdriver):

- Not child-safe position the tailgate can be opened from inside.
- B Child-safe position the rear doors cannot be opened from inside; turn outwards.

Rear doors

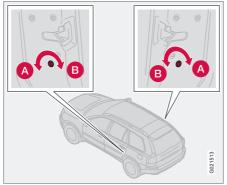


Controls for the child safety locks – left and righthand rear doors.

Adjust the control in the respective rear door by turning it between the outer positions (use a flat metal object, such as a screwdriver).

- A Child-safe position the rear doors cannot be opened from inside: Turn outwards.
- B Not child-safe position the rear doors can be opened from inside: Turn inwards.

Electric child safety locks – rear side doors*

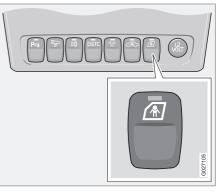

Use the button in the centre console to activate/deactivate the child safety locks in the rear doors.

- 1. Turn the ignition key to position I or II, see page 140.
- 2. Press the button.

When the light in the button illuminates, the rear power windows and rear doors are locked.

A message appears on the display, the child safety locks are activated/deactivated.

05

Child safety locks

i NOTE

As long as the child safety lock is activated the rear doors cannot be opened from the inside.


Alarm*

Alarm system

When the alarm is armed, it continually monitors all alarm inputs.

The alarm is triggered if:

- a door, the bonnet or tailgate opens
- a non-approved key is used in the ignition or if an attempt is made to force the lock
- a movement is detected in the passenger compartment (if fitted with a movement detector)
- the car is raised or towed away (if fitted with a tilt detector)
- a battery cable is disconnected
- anyone tries to disconnect the siren.

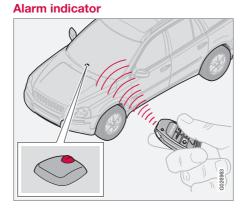

A red LED on the instrument panel indicates the alarm system's status:

- LED not lit the alarm is not armed.
- The LED flashes once every other second Alarm is armed.
- The LED flashes rapidly after disarming the alarm and until the remote control key is turned to key position **II** the alarm has been triggered.

If there is a fault in the alarm system, a message appears on the display. At which point you should contact a workshop - an authorised Volvo workshop is recommended.

) ΝΟΤΕ

Do not attempt to repair or modify alarm system components. All such attempts could affect the terms of insurance.

Arming the alarm

 Press the LOCK button. A long flash from the car's direction indicators confirms that the alarm is armed and that all the doors are locked.

IMPORTANT

The alarm is fully armed when the car's direction indicators have made one long flash and the LED on the instrument panel flashes once every other second.

Disarming the alarm

 Press the remote control key's UNLOCK button. Two short flashes from the car's direction indicators confirm that the alarm has been deactivated.

If the remote control key's batteries are discharged then the alarm can be disarmed by turning the key to key position **II**.

Alarm*

Automatic alarm activation

This function prevents you accidentally leaving the car without the alarm on.

If none of the doors or the tailgate is opened within two minutes of disarming the alarm (and the car has been unlocked with the remote control key), the alarm is automatically rearmed. The car is locked at the same time.

Automatic alarm activation

In certain countries (e.g. Belgium, Israel) the alarm is activated after a certain delay if the driver's door was opened and closed but the car was not re-locked.

Deactivating a triggered alarm

 Press the remote control key's UNLOCK button or insert it into the ignition switch.


Confirmation is given by two short flashes from the direction indicators.

Alarm signals

When the alarm is triggered, the following happens:

- A siren sounds for less than 25 seconds. The siren has its own battery which is used if the car battery has insufficient charge or is disconnected.
- All direction indicators flash for 5 minutes or until the alarm is deactivated.

Reduced alarm level

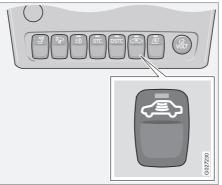

To avoid inadvertently triggering of the alarm for example when leaving a dog in the car or during a ferry crossing - the movement and tilt detectors can be temporarily switched off.


- Insert the remote control key into the ignition switch, turn it to key position II and then back to position I or 0.
- 2. Press the button.

The lamp in the button illuminates until you lock the car. A message is shown on the display as long as the remote control key remains in the ignition switch. Note that the deadlocks function is switched off at the same time, see page 124.

Next time the engine is started the system is reset to zero and the movement and tilt detectors and the deadlocks function are then reengaged.

General	132
Refuelling	134
Starting the engine	140
Manual gearbox	142
Automatic gearbox	143
All-wheel drive*	146
Brake system	147
Stability and traction control system*	149
Parking assistance*	151
Blind Spot Information System - BLIS*	153
Towing and recovery	157
Start assistance	159
Driving with a trailer	160
Towing equipment*	162
Detachable towbar*	164
Adjusting headlamp pattern	168



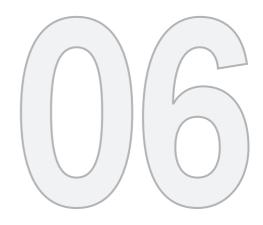

STARTING AND DRIVING





General

Economical driving

Driving economically means driving smoothly while thinking ahead and adjusting your driving style and speed to the prevailing conditions. For more advice on reducing environmental impact. see page 13.

- Do not run the engine to operating temperature at idling speed, but rather drive with a light load as soon as possible - a cold engine consumes more fuel than a warm one.
- Use the parking heater* in cold weather -۰ the engine reaches normal operating temperature more quickly.
- Avoid sudden unnecessary acceleration and heavy braking.
- Do not drive with unnecessary loads in the • car.
- Remove the load carriers when not in use.
 - Do not use winter tyres when the winter season is over.
- Avoid driving with open windows. .

Slippery driving conditions

Practise driving on slippery surfaces under controlled conditions to learn how the car reacts.

Engine and cooling system

Under special conditions, for example when driving in hilly terrain, extreme heat or with heavy loads, there is a risk that the engine and cooling system will overheat.

Avoid overheating the cooling system

- Maintain a low speed when driving with a trailer up long, steep ascents.
- Do not turn the engine off immediately you • stop after a hard drive.
- Remove any auxiliary lamps from in front • of the arille if driving in extreme high temperatures.

Avoid overheating the engine

Do not exceed engine speeds of 4500 rpm (diesel engines: 3500 rpm) if driving with a trailer or caravan in hilly terrain. The oil temperature could then become too high.

Open tailgate

WARNING

Do not drive with the tailgate open. Toxic exhaust fumes can be drawn into the car through the cargo area.

Driving on rough roads

The Volvo XC90 is primarily designed for driving on main roads, but also has good handling properties on uneven or rough roads. Keep the following in mind in order to preserve the service life of your car:

- Drive slowly on rough roads so you do not damage the car's underbody.
- If the ground is loose or is made up of dry • sand or snow, it is always best to keep the car moving at all times and avoid shifting. Do not stop the car.
- If the road is extremely steep and there is a risk of overturning, never try to turn the car around. Reverse back down. Do not drive diagonally across an incline. Drive in the direction of the incline.

General

i note

Avoid driving on steep slopes if the fuel level is low. The catalytic converter could be damaged if the engine does not receive enough fuel. When driving on extremely steep slopes, make sure the tank is more than half full to avoid the risk of breakdown.

Driving in water

The car can be driven through water at a maximum depth of 40 cm at a maximum speed of 10 km/h. Extra caution should be exercised when passing through flowing water.

IMPORTANT

Engine damage can occur if water enters the air filter.

In greater depths, water can enter the transmission. This reduces the lubricating ability of the oils and shortens the service life of the systems.

During driving in water, maintain a low speed and do not stop the car. When the water has been passed, depress the brake pedal lightly and check that full brake function is achieved. Water and mud for example can make the brake linings wet resulting in delayed brake function.

NOTE

Clean the electric contacts of the electric engine block heater and trailer coupling after driving in water and mud.

IMPORTANT

Do not let the car stand with water over the sills for any long period of time. This could cause electrical malfunctions.

In the event of engine stop in water do not try restart. Tow the car from the water.

Do not overload the battery

The electrical functions in the car load the battery to varying degrees. Avoid having the remote control key in key position **II** when the engine is switched off. Instead use the **I** mode - which uses less power.

Note that the 12 volt outlet in the cargo area supplies power even when the remote control key has been removed from the ignition switch.

Also, be aware of different accessories that load the electrical system. Do not use functions which use a lot of power when the engine is switched off. Examples of such functions are:

- ventilation fan
- windscreen wipers


- audio system (high volume)
- headlamps.

If the battery voltage is low the information display shows the text **LOW BATTERY POWER SAVE MODE**. The energy-saving function then shuts down certain functions or reduces certain functions such as the ventilation fan and/or audio system.

 In which case, charge the battery by starting the engine and then running it for at least 15 minutes - battery charging is more effective during driving than running the engine at idling speed while stationary.



Opening the fuel filler flap

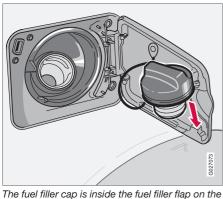

Emergency unlocking of the fuel filler flap

The fuel filler flap can be opened manually when necessary if it cannot be opened normally.

The fuel filler flap can be opened when the car is unlocked.

right-hand rear wing and hangs up on the inside of


i NOTE

the fuel filler flap.


The filler flap remains unlocked for ten minutes after the car is locked. It then locks automatically.

06 Starting and driving

Refuelling

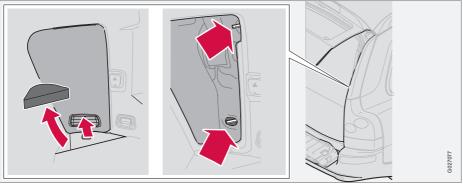

Steps 1-3.

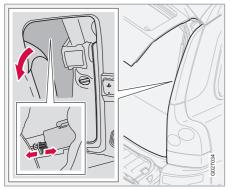

- 1. Lift up the corner piece from the floor in the rear right-hand corner of the cargo area.
- 2. Open the fuel filler flap by lifting up the handle and pulling it out.
- 3. Fold aside the insulation in order to access the flap's electrical lock.
- 4. Insert your hand and locate the lock. Its location is approximately inside the rear edge of the fuel filler flap.
- 5. Pull the lock plunger straight back. The flap can now be folded out.

After refuelling the flap can be relocked by closing it and pushing the lock plunger forward.

Proceed as follows:

\Lambda WARNING

There are sharp edges behind the panel so move your hands slowly and carefully.



Fuel cap

A certain overpressure may arise in the tank in the event of high outside temperatures. Open the cap slowly

i note

Put the petrol cap back on after refuelling. Turn until one or more clear clicks are heard.

Filling up with fuel

Do not overfill the tank but fill until the pump nozzle cuts out.

i note

Excess fuel in the tank can overflow in hot weather.

Fuel of a lower quality than that specified in this chapter should not be used as engine power and fuel consumption can be negatively affected.

General information on fuel

MARNING

Always avoid inhaling fuel vapour and getting fuel splashes in the eyes.

In the event of fuel in the eyes, remove any contact lenses and rinse the eyes in plenty of water for at least 15 minutes and seek medical attention.

Never swallow fuel. Fuels such as petrol, bioethanol and mixtures of them and diesel are highly toxic and could cause permanent injury or be fatal if swallowed. Seek medical attention immediately if fuel has been swallowed.

Fuel which spills on to the ground can be ignited by the exhaust fumes.

Switch off the fuel-driven heater before starting to refuel.

Never carry an activated mobile phone when refuelling. The ring signal could cause spark build-up and ignite petrol fumes, leading to fire and injury.

IMPORTANT

Mixing different types of fuel or the use of fuel not recommended invalidates Volvo's guarantees, and any associated service agreement. This applies to all engines. NOTE: It does not apply to cars with engines that are adapted to run on ethanol fuel (E85).

For detailed information on CO_2 emissions, fuel consumption and tank volume, see page 281.

Petrol

Petrol must meet the EN 228 standard. Most engines can be run with octane ratings of 91, 95 and 98 RON.

- 91 RON must not be used for 4-cylinder engines and should only be used in exceptional cases with other engines.
- 95 RON can be used for normal driving.
- 98 RON is recommended for optimum performance and minimum fuel consumption.

When driving in temperatures above +38 °C, fuel with the highest possible octane rating is recommended for optimum performance and fuel economy.

IMPORTANT

- Always refuel with unleaded petrol so as not to damage the catalytic converter.
- Do not use additives not recommended by Volvo.

Catalytic converter

The purpose of the catalytic converter is to purify exhaust gases. It is located in the flow of exhaust gases close to the engine so that it quickly reaches operating temperature. The catalytic converter consists of a monolith (ceramic or metal) with channels. The channel walls are lined with a thin layer of platinum/rhodium/palladium. These metals act as catalysts, i.e. they participate in and accelerate a chemical reaction without being used up themselves.

Lambda-sond[™] oxygen sensor

The Lambda-sond is part of a control system intended to reduce emissions and improve fuel economy.

An oxygen sensor monitors the oxygen content of the exhaust gases leaving the engine. This value is fed into an electronic system that continuously controls the injectors. The ratio of fuel to air directed to the engine is continuously adjusted. These adjustments create optimal conditions for efficient combustion of harmful emissions (hydrocarbons, carbon monoxide and nitrous oxides) using the three-way catalytic converter.

Diesel

Diesel must meet the EN 590 or JIS K2204 standards.



Only ever use fuel that fulfils the European diesel standard.

Diesel type fuels which must not be used: special additives, Marine Diesel Fuel, fuel oil, RME¹ (Rape Methyl Ester) and vegetable oil. These fuels do not fulfil the requirements in accordance with Volvo recommendations and generate increased wear and engine damage that is not covered by the Volvo warranty.

Diesel engines are sensitive to contaminants, such as excessively high volumes of sulphur particles for example. Only use diesel fuel from well-known producers. Never use diesel of dubious quality.

At low temperatures (-40 °C to -6 °C), a paraffin precipitate may form in the diesel fuel, which may lead to ignition problems. Special diesel fuel designed for low temperatures around freezing point is available from the major oil companies. This fuel is less viscous at low temperatures and reduces the risk of paraffin precipitate.

IMPORTANT

Use special winter grade fuel during cold months.

⁰⁶

¹ Diesel fuel may contain a certain amount of RME, but further amounts must not be added.



The risk of condensation in the fuel tank is reduced if the tank is kept well filled. When refuelling, check that the area around the fuel filler pipe is clean. Avoid spilling fuel onto the paintwork. Wash off any spillage with detergent and water.

IMPORTANT

The sulphur content must be a maximum of 50 ppm.

Empty tank

The design of the fuel system in a diesel engine means that if the vehicle runs out of fuel, the tank may need to be vented in the workshop in order to restart the engine after fuelling.

Once the engine has stopped due to fuel starvation, the fuel system needs a few moments to carry out a check. Do this before starting the engine, once the fuel tank has been filled with diesel:

- Insert the remote control key in the ignition switch and turn to key position II (see page 140).
- 2. Wait approx. 1 minute.
- 3. To start the engine: Depress the brake and/ or clutch pedal, and turn the remote control key to start position **III**.

Draining condensation from the fuel filter

The fuel filter separates condensation from the fuel. Condensation can disrupt engine operation.

The fuel filter must be drained at the intervals specified in the Service and Warranty Booklet or if you suspect that the car has been filled with contaminated fuel.

IMPORTANT

Certain special additives remove the water separation in the fuel filter.

Diesel particle filter (DPF)

Diesel cars may be equipped with a particle filter, which results in more efficient emission control. The particles in the exhaust gases are collected in the filter during normal driving. Socalled "regeneration" is started in order to burn away the particles and empty the filter. This requires the engine to have reached normal operating temperature.

Regeneration of the filter takes place automatically at an interval of approximately 300 – 900 km depending on driving conditions. Regeneration normally takes 10 - 20 minutes. It may take a little longer at a low average speed. Fuel consumption may increase slightly during regeneration. The rear window heating may be activated automatically to increase the load on the engine during regeneration without warning.

Regeneration in cold weather

If the car is frequently driven short distances in cold weather then the engine does not reach normal operating temperature. This means that regeneration of the diesel particle filter does not take place and the filter is not emptied.

When the filter has become

approximately 80% full of particles, the yellow information symbol on the instrument panel illuminates, and the message **SOOT FILTER FULL - SEE MANUAL** is shown on the instrument panel display.

Start regeneration of the filter by driving the car until the engine reaches normal operating temperature, preferably on a main road or motorway. The car should then be driven for approximately 20 minutes more.

ΝΟΤΕ

A smaller reduction of engine power may be noticed temporarily during regeneration.

When regeneration is complete the message is cleared automatically.



Use the parking heater* in cold weather so that the engine reaches normal operating temperature more quickly.

IMPORTANT

If the filter fills up it may be incapable of functioning. Then it can be difficult to start the engine and there is a risk that the filter will have to be replaced.



Starting the engine

Before starting the engine

Apply the parking brake.

Automatic gearbox

- Gear selector in position P or N.

Manual gearbox

 Put the gear lever in neutral and hold the clutch pedal fully depressed. This is particularly important in very cold conditions.

🚹 WARNING

Never remove the remote control key from the ignition switch while driving or when the car is being towed. The steering lock could otherwise be activated, making it impossible to steer the car.

The remote control key must be in key position **II** when the car is being towed.

06

i) NOTE

The remote control key's key blade must be fully extended when starting the car, see page 120. Otherwise there is a risk that the immobiliser function will prevent the car from starting.

) NOTE

The idling speed can be noticeably higher than normal for certain engine types during cold starting. This is in order that the emissions system can reach normal operating temperature as quickly as possible, which minimises exhaust emissions and protects the environment.

Starting the engine

Petrol

Turn the remote control key to key position
 III. If the engine does not start within
 5-10 seconds, release the key and try again.

Diesel

1. Turn the remote control key to key position **II**.

An indicator symbol in the combined instrument panel shows that engine preheating is underway, see page 53.

2. Turn the ignition key to position **III** when the indicator symbol goes out.

Ignition switch and steering lock

0 - Locked position



The steering lock is activated when the remote control key is removed from the ignition switch.

I – Radio position



Certain electrical components can be switched on. The engine's electrical system is not activated.

II – Driving position



The remote control key's position when driving. The car's electrical system is energised.

Starting the engine

III - Start position



The starter motor is engaged. When the remote control key is released it springs back automatically to the driving position, once the engine has started.

If the key is hard to turn, the front wheels may be turned in such a way that there is tension in the steering wheel lock. In which case, turn the wheel back and forth to make it easier to turn the key.

Autostart (3.2 and V8)

Using the autostart function, the remote control key does not need to be kept in the start position (key position **III**) until the engine has started. Turn the key to the start position and then release it - the starter motor then operates automatically (up to 10 seconds) until the engine has started.

i) NOTE

Make sure the steering wheel locks when you leave the car. This reduces the risk of theft.

Remote control keys and electronic immobiliser

The remote control key must not hang with other keys or metal objects on the same key ring. The electronic immobiliser could be activated accidentally.

Never rev up the engine hard immediately after a cold start!

If the engine does not start or misfires, contact a workshop - a Volvo workshop is recommended.

\Lambda WARNING


You must **never** turn the remote control key to key position I or **0** and **never** remove the remote control key from the ignition switch while the car is moving. The steering lock could otherwise be activated, making it impossible to steer the car.

Always remove the remote control key from the ignition switch when leaving the car – especially if children are left alone in the car.



Manual gearbox

Gear positions

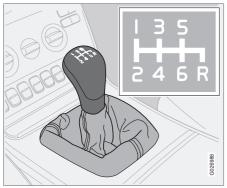

- 1. Depress the clutch pedal fully during each gear change.
- 2. Take your foot off the clutch pedal between gear changes. Follow the shifting pattern indicated.

Use 6th gear as often as possible for the best possible fuel economy.


Reverse gear inhibitor

The reverse gear inhibitor hinders the possibility of mistakenly attempting to engage reverse gear during normal forward travel.

Only engage reverse gear when the car is stationary.

Automatic gearbox

Gear positions

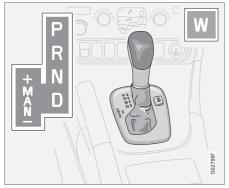

P – Parking position

Select position ${\bf P}$ when you wish to start the engine or park the car.

IMPORTANT

The car must be stationary when position ${\ensuremath{\textbf{P}}}$ is selected.

I) NOTE

The brake pedal must be depressed to move the gear lever from the **P** position.

The gearbox is mechanically blocked when the **P** position is engaged. Always apply the parking brake when parking the car.

R – Reverse

The car must be stationary when position ${\boldsymbol{\mathsf{R}}}$ is selected.


N – Neutral

N is the neutral position. No gear is engaged and the engine can be started. Apply the parking brake when the car is stationary with the gear selector in position N.

D – Drive

 ${f D}$ is the normal driving position. The car automatically shifts between the different gears of the gearbox based on the level of acceleration and speed. The car must be stationary when the gear selector is moved to position ${f D}$ from position ${f R}$.

Gear selector inhibitor

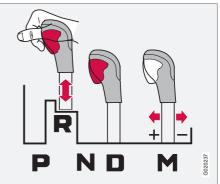


The gear selector can always be moved freely between N and D. Other positions are locked with a latch that is released with the inhibitor button on the gear selector.

With one press on the inhibitor button you can move the lever forwards or backwards between the gear positions, **N**, **R** and **P**.



Automatic gearbox

Manual positions

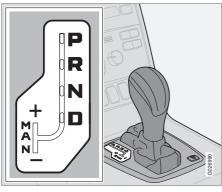

To move from the automatic driving position ${\bf D}$ to a manual position, move the gear selector to position ${\bf M}$. To go from position ${\bf M}$ to the automatic driving position ${\bf D}$, move the selector to position ${\bf D}$.

On the 5-speed automatic gearbox, gears $\mathbf{3}$, $\mathbf{4}$ and $\mathbf{5}^1$ have the Lock-up function (locked gears), which provides better engine braking and lower fuel consumption.

While driving

The manual gearshift mode can be selected at any time while driving. The engaged gear is locked until you choose another gear.

If the gear selector is moved to – (minus) the car changes down a gear and engine brakes at the same time as the accelerator pedal is released. If the gear selector is moved to + (plus) the car changes up a gear.

Third gear **3** is the highest gear that can be used when starting.

W - Winter



Press the **W** button to activate and deactivate the winter program. Display of the **W** symbol in the combined instrument panel indicates that the winter program is

active.

The winter programme starts the gearbox in 3rd gear to make it easier to pull off on slippery roads. When the programme is engaged, lower gears are activated only by kick-down.

The W program can be selected regardless of the position of the gear selector, but is only operational when the selector is in position D.

Cold start

When starting in low temperatures, the gear changes can sometimes feel hard. This is due to the gearbox oil's viscosity at low temperatures. To reduce engine emissions, the gearbox shifts up later than normal when the engine is started at low temperatures.

Depending on the engine temperature when the engine is started, the idle speed after a cold start may be higher than normal for certain engine types.

Adaptive system

The gearbox is controlled by what is known as an adaptive system. The system continually monitors how the gearbox is behaving and senses every gear change for optimum change quality.

Lock-up function

The gears have a lock-up function (locked gears), which gives better engine braking and lower fuel consumption.

⁰⁶

¹ 2nd and 6th gear also have lock-up on the 6-speed automatic gearbox.

Automatic gearbox

Kick-down

When the accelerator pedal is pressed all the way to the floor, beyond the position normally regarded as full acceleration, a lower gear is immediately engaged. This is known as kick-down.

If the accelerator is released from the kickdown position, the gearbox automatically changes up.

Kick-down is used when maximum acceleration is needed, such as for overtaking.

To prevent overrevving, the gearbox control program has a protective downshift inhibitor which prevents the kick-down function.

The kick-down function cannot be used in manual gear position.

Safety systems

Cars with an automatic gearbox have special safety systems:

Keylock

To remove the remote control key from the ignition switch, the gear selector must be in the ${\bf P}$ position. The key is locked in all other positions.

Parking position (P)

Stationary car with engine running:

 Keep your foot on the brake pedal when moving the gear selector to another position.



All-wheel drive*

All-wheel drive – AWD

All-wheel drive is always engaged.

All-wheel drive means that all four road wheels are driven at the same time. The power is automatically distributed between the front and rear wheels. An electronically controlled clutch system distributes the power to the pair of wheels that grips best. This provides the best traction and prevents wheel spin.

Under normal driving conditions, the majority of power is transmitted to the front wheels.

All-wheel drive improves driving safety in rain, snow and icy conditions.

Brake system

Brake servo

If the car is rolling or is being towed with the engine turned off, the brake pedal must be pressed about five times harder than when the engine is running. If the brake pedal is depressed when the engine is started, you will feel the pedal drop. This is normal and due to the brake servo becoming active. This may be more noticeable if the car has Emergency Brake Assistance (EBA).

🔥 WARNING

The brake servo only works when the engine is running.

i NOTE

If braking with the engine switched off, press the brake pedal sharply once, not repeatedly.

Brake circuits



This symbol illuminates if a brake circuit is not working.

If a fault should occur in one of the circuits, it is still possible to brake

the car. The brake pedal will travel further and may feel softer than normal. Harder pressure on the pedal is needed to produce the normal braking effect.

Dampness can affect braking characteristics

Brake components become wet when the car is driven in heavy rain, through pools of water or when the car is washed. This may alter brake pad friction characteristics so that there is a delay before braking effect is noticed.

Press the brake pedal lightly from time to time if driving for long stretches in rain or slushy snow, as well as after setting off in very damp or cold weather. This warms up the brake pads and dries off any water. This precaution is also recommended before parking the car for a long period in such weather conditions.

If the brakes are used heavily

When driving in the Alps or other roads with similar characteristics, the car's brakes are heavily loaded even if the brake pedal is not being depressed especially hard.

Because speed is often low, the brakes are not cooled as effectively as when driving on flat roads at higher speed.

So as not to overload the brakes, shift down when driving downhill instead of using the foot brake. Use the same gear driving downhill as you would use driving uphill. This uses engine braking more efficiently so the foot brake is only required for brief periods. Bear in mind that driving with a trailer puts an additional load on the car's brakes.

Anti-lock braking system (ABS)



The anti-lock braking system (ABS) prevents the wheels from locking up during braking.

This means the ability to steer is

maintained and it is easier to swerve to avoid a hazard for example.

After the engine has been started, the ABS will perform a brief self-test at a speed of about 20 km/h. This can be felt and heard as pulses in the brake pedal.

To get the most out of the ABS:

- 1. Depress the brake pedal with full force. Pulses will be felt.
- 2. Steer the car in the direction of travel. Do not release the pressure on the pedal.

Practice braking with the ABS system in a traffic-free area and in different weather conditions.

The ABS symbol illuminates for two seconds if there was a fault in the ABS system when the engine was last running.



Brake system

Electronic brake force distribution system – EBD

The Electronic Brakeforce Distribution system (EBD) is an integrated part of the ABS system. The EBD system controls the brake force to the rear wheels so that the best possible braking force is always available. Pulses will be heard and felt through the brake pedal when the system regulates brake force.

If the BRAKE and ABS warning symbols illuminate at the same time, there may be a fault in the brake system. If the level in the brake fluid reservoir is normal at this stage, drive carefully to the nearest workshop and have the brake system checked - an authorised Volvo workshop is recommended.

If the brake fluid is under the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The reason for the loss of brake fluid must be investigated.

Emergency Brake Assistance – EBA

(Emergency Brake Assistance) For sudden braking, full-strength braking is provided instantaneously. The EBA function senses when heavy braking is underway by registering how quickly the brake pedal is depressed. Continue braking without easing off on the brake pedal. The function is suspended when the pressure on the brake pedal eases. This function is always active. It cannot be disengaged.

i NOTE

When EBA is activated the brake pedal lowers slightly more than usual, depress (hold) the brake pedal as long as necessary. If the brake pedal is released then all braking ceases.



Stability and traction control system*

General

The Dynamic Stability and Traction Control system (DSTC) improves the car's traction and helps the driver to avoid skidding.

A pulsing sound may be noticed during braking or acceleration when the system is in action. The car may accelerate slower than expected when the accelerator pedal is depressed.

Active Yaw Control

The function limits the driving and brake force of the wheels individually in order to stabilise the car.


Spin Control

The function prevents the driving wheels from spinning against the road surface during acceleration.

Traction control system

The function is active at low speed and transfers power from the driving wheel that is spinning to the one that is not.

Reduced operation

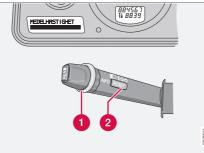

- Thumbwheel
- 2 RESET button

System operation during skidding and acceleration can be partially deactivated.

Operation during skidding is then delayed and so allows more skidding which provides greater freedom for dynamic driving. Traction in deep snow or sand is improved at the same time as acceleration is no longer limited.

Operation

1. Turn the thumbwheel (1) until the DSTC menu appears.

DSTC ON means that the system function is unchanged.

DSTC SPIN CONTROL OFF means that system operation is reduced.

2. Press and hold **RESET** (2) until the **DSTC** menu is changed.

The system remains reduced until the driver reactivates it or until the engine is switched off - after the engine is started the next time the DSTC is back in its normal mode again.

Suppressing system function may alter the driving characteristics of the car.

i) NOTE

DSTC ON is shown for several seconds on the display each time the engine is started.

06

Messages in the display

TRACTION CONTROL TEMPORARILY OFF means that the system has been temporarily reduced due to excessive brake temperature.

 The function is reactivated automatically when the brakes have cooled.

DSTC SERVICE REQUIRED system disabled due to a fault.

06

Stability and traction control system*

- Stop the car in a safe place and turn off the engine.
 - > If the message remains when the engine is restarted, drive to a workshop. An authorised Volvo workshop is recommended.

Symbols in the combined instrument panel



DSTC system

The symbol illuminates and goes out again after approx. 2 seconds when the engine is started

Indicates system check.

The symbol flashes

• Indicates that the system is operating.

The symbol illuminates and stays lit At the same time the display shows DSTC SERVICE REQUIRED.

- Indicates a fault in the **DSTC** system.
- 1. Stop the car in a safe place and turn off the engine.
- 2. Restart the engine.

- If the warning symbol goes out, the fault was temporary and it is not necessary to visit a workshop.
- If the warning symbol remains illuminated then a workshop should check the system - an authorised Volvo workshop is recommended.

The symbol illuminates with a constant yellow glow



Symbol for Warning At the same time the display shows

TRACTION CONTROL TEMPORARILY OFF.

 Indicates that the system has been temporarily reduced due to excessive brake temperature.

Automatic reactivation of the function takes place when the brake temperature has returned to normal.


🔥 WARNING

Under normal driving conditions, the **DSTC** system improves the car's road safety, but this should not be taken as a reason to increase speed.

Always follow the usual precautions for safe cornering and driving on slippery road surfaces.

Parking assistance*

General¹

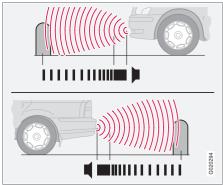

Parking assistance front and rear.

Parking assistance is used as an aid to parking. A signal indicates the distance to a detected object.

🔥 WARNING

Parking assistance does not relinquish the driver's own responsibility during parking. The sensors have blind spots where objects cannot be detected. Be aware of children and animals near the car.

Variants

Parking assistance is available in two variants:

- Rear only
- Both front and rear

Function

The system is switched on automatically when the car is started at which point the lamp in the switch for parking assistance illuminates.

The display shows the text message **PARK ASSIST ACTIVE** if reverse gear is engaged or if the front sensors detect an object.

Parking assistance is active at speeds below 15 km/h. The system is deactivated at higher speeds. When the speed is below 10 km/h the system is reactivated.

The frequency of the signal increases as you come closer to an object in front of or behind the car. If the volume of another audio source from the audio system is high, then this is automatically lowered.

The tone becomes constant at a distance of about 30 cm. If there are objects within this distance behind or in front of the car, the signal alternates between left and right-hand speakers.

Rear parking assistance

The distance covered to the rear of the car is about 1.5 m. Rear parking assistance is activated when reverse gear is engaged. The signal comes from the rear loudspeakers.

The system must be deactivated when reversing with a trailer, or bike carrier on the towbar or similar. Otherwise the trailer or bike carrier would trigger the sensors.

Rear parking assistance is deactivated automatically when towing a trailer if a Volvo genuine trailer cable is used.

Front parking assistance

The distance covered to the front of the car is about 0.8 metres. The signal comes from the front loudspeakers.

Front parking assistance cannot be combined with extra lights because the sensors are affected by the extra lights.

Fault indicator



If the information symbol illuminates with constant glow and the display shows **PARK ASSIST SERVICE REQUIRED** then parking assistance is disengaged.

•

¹ Depending on the market, the **Parking assistance** system may be either Standard, Option or Accessory.




Parking assistance*

IMPORTANT

In certain conditions the parking assistance system may produce incorrect warning signals that are caused by external sound sources that emit the same ultrasonic frequencies that the system works with.

Examples of such sources include horns, wet tyres on asphalt, pneumatic brakes and exhaust noises from motorcycles etc.

Off/On

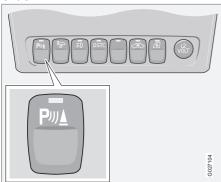


Button position in the row may vary.

Parking assistance can be deactivated with the button in the switch panel. The lamp in the switch goes out. Parking assistance is

switched on again with the switch and the lamp illuminates.

Cleaning the sensors

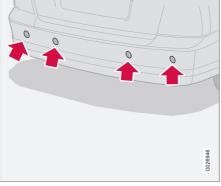


Parking assistance sensors.

The sensors must be cleaned regularly to ensure that they work properly. Clean them with water and car shampoo.

(i) NOTE

Dirt, ice and snow covering the sensors may cause incorrect warning signals.

General

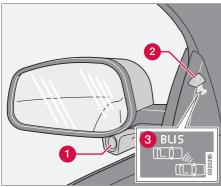

Rearview mirror with BLIS system.

- BLIS camera
- 2 Indicator lamp
- BLIS symbol

M WARNING

The system is a supplement to, not a replacement for, a safe driving style and use of the rearview mirrors. It can never replace the driver's attention and responsibility. The responsibility for changing lanes safely always rests with the driver.

BLIS is an information system that under certain conditions can help to draw the driver's attention to vehicles moving in the same direction in the so-called "blind spot".

The system is designed to work most effectively when driving in dense traffic on multi-lane highways.

BLIS is based on digital camera technology. The cameras (1) are located under the door mirrors.


When a camera has detected a vehicle inside the blind spot zone the indicator lamp (2) illuminates with a constant glow.

i) NOTE

The lamp illuminates on the side of the car where the system has detected the vehicle. If the car is overtaken on both sides at the same time then both lamps illuminate.

BLIS advises the driver with a message if a fault arises in the system. If for example the system's cameras are obscured then the BLIS indicator lamp flashes and a message is shown in the information display. In such cases, check and clean the lenses. If necessary, the system can be switched off temporarily by pressing the BLIS button, see page 154.

Blind spots

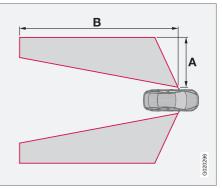

"Blind spots" intended to be covered by BLIS cameras.

Distance A = approx. 3.0 m

Distance B = approx. 9.5 m

Cleaning

In order to work most effectively the BLIS camera lenses must be clean. The lenses can be cleaned with a soft cloth or damp sponge. Clean the lenses carefully so that they are not scratched.



IMPORTANT

The lenses are electrically heated to melt ice or snow. If necessary, brush snow away from the lenses.

When BLIS operates

The system operates when the car is driven at a speed above 10 km/h.

Overtaking

The system is designed to react if you overtake another vehicle at a speed of up to 10 km/h faster than the other vehicle.

The system is designed to react if you are overtaken by a vehicle travelling up to 70 km/h faster than your vehicle.

\Lambda WARNING

BLIS does not work in sharp bends.

BLIS does not work when the car is reversing.

A wide trailer coupled to the car can conceal other vehicles in adjacent lanes. It can prevent the vehicle in the screened area from being detected by BLIS.

Daylight and darkness

In daylight the system reacts to the shape of the surrounding vehicles. The system is

designed to detect motor vehicles such as cars, trucks, buses and motorcycles.


In darkness the system reacts to the headlamps of surrounding vehicles. Vehicles with headlamps that are switched off are not detected by the system. This means for example that the system does not react to a trailer without headlamps which is towed behind a car or truck.

\Lambda WARNING

The system does not react to cyclists or moped riders.

The BLIS cameras have limitations similar to those of the human eye, i.e. they do not see as well in e.g. heavy snowfall, strong oncoming light or thick fog.

Activating/deactivating

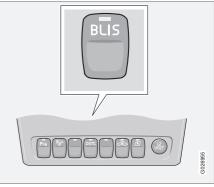

Button for activating/deactivating.

BLIS is activated when the engine is started. The indicator lamps in the door panels flash three times when BLIS is activated.

The system can be deactivated/activated by pressing **BLIS**.

When BLIS is deactivated the light in the button goes out and a text message is shown on the instrument panel display.

When BLIS is activated the light in the button illuminates, a new text message is shown on the display and the indicator lamps in the door panels flash three times. Press the **READ** button to clear the text message. For more information on messages, see page 54.



BLIS system message

Text on the dis- play ^A	Specification		
BLIND-SPOT INFO SYSTEM ON	The BLIS system is activated.		
BLIND-SPOT SYST SERVICE REQUIRED	Blind spot syst. dis- engaged - contact a workshop.		
BLIND-SPOT SYST FUNCTION REDUCED	Reduced function in the data transmis- sion between the BLIS system's cam- era and the car's electrical system.		
	The camera resets itself when the data transmission between the BLIS system's camera and the car's electri- cal system returns to normal.		
BLIND-SPOT SYST R CAMERA BLOCKED	Right camera blocked - clean the lens.		

Text on the dis- play ^A	Specification
BLIND-SPOT SYST L CAMERA BLOCKED	Left camera blocked - clean the lens.
BLIND-SPOT SYST CAMERAS BLOCKED	One or both cam- eras blocked - clean the lenses.
BLIND-SPOT INFO SYSTEM OFF	The BLIS system is deactivated.

A Messages above are only shown if the remote control key is in key position II (or if the engine is running) and **BLIS** is active (i.e. if the driver has not switched off the system).

IMPORTANT

Repair of the BLIS system components must only be performed by a workshop - an authorised Volvo workshop is recommended.

Limitations

In some situations the BLIS indicator lamp may illuminate despite there being no other vehicle within the blind spot.

NOTE

If the BLIS indicator lamp illuminates on isolated occasions despite there being no other vehicle within the blind spot then this does not mean that a fault has arisen in the system.


In the event of a fault in the BLIS system the display shows the text **BLIS Serv.** required.

Here are several examples of situations where the BLIS indicator lamp may illuminate even if there is no other vehicle within the blind spot.




Reflection from shiny wet road surface.





Own shadow on large, light, smooth surface, e.g. noise barrier or concrete road surface.



Low sun in the camera.

Towing and recovery

Start assistance

Use a donor battery if the battery is discharged and the engine does not start. Do not tow the car to bump start it, see page 159.

IMPORTANT

Bump starting the car can damage the catalytic converter.

Towing

Find out the highest legal speed for towing before towing the car.

The car must always be towed facing forward.

- 1. Unlock the steering wheel lock so that the car can be steered.
- 2. For the driver of the towing vehicle: Drive gently.

For the driver of the vehicle being towed: Keep the towline taut by holding your foot gently pressed on the brake pedal in order to avoid unnecessary jerking.

🚹 WARNING

The steering lock remains in the position it was in when the power was cut off. The steering lock must be unlocked before towing.

The remote control key must be in key position **II**. Never remove the remote control key from the ignition switch while driving or when the car is being towed.

🚹 WARNING

The brake servo and power steering do not work when the engine is switched off. The brake pedal must be pressed about five times harder than normal, and the steering will be considerably heavier than normal.

Manual gearbox

 Move gear lever into neutral and release the parking brake.

Automatic gearbox


Move the gear selector to position N and release the parking brake.

Cars with automatic gearbox must not be towed at speeds above 80 km/h or further than 80 km.

Towing eye

Before towing the towing eye must be bolted securely onto the bumper. The socket and cover for the towing eye are on the right-hand side of each bumper.

The towing eye is in the tool kit in the cargo area.

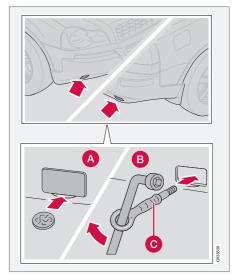



Towing and recovery

Proceed as follows:

- 1. Release the bottom edge of the cover (A) with a screwdriver or a coin.
- 2. Screw in the towing eye (B).
- Screw the eye securely into place right up to the flange (C). You can use a wheel wrench.
- After use, unscrew the towing eye and refit the cover.

IMPORTANT

On certain cars with fitted towbar the towing eye cannot be secured in the rear mounting. In which case, secure the tow rope in the towbar. For this reason, it is advisable to always store the detachable towbar in the car.

Recovery

The car must always be towed with the wheels rolling forward.


• An all-wheel drive car (AWD) with raised front suspension must not be towed at speeds above 70 km/h. It should not be towed further than 50 km.

\Lambda WARNING

The towing eye is only designed for towing on roads - not for recovering the car. Call a recovery service for recovery assistance.

Start assistance

Starting with a donor battery

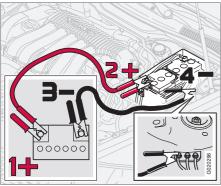

If the battery in the car has become discharged, you can "borrow" electric current from either a separate battery or from another car. Always make sure the crocodile clips on the jump leads are attached securely to eliminate sparks during the start attempt.

When jump starting the car, the following steps are recommended to avoid risk of explosion:

- Turn the remote control key to key position
 0.
- 2. Ensure that the other battery is 12 volt.

- 3. If the donor battery is in another car, switch off the engine in the other car and ensure that the cars do not touch one another.
- Connect the red jump lead between the positive terminal on the donor battery (1+) and the positive terminal in your car (2+).
- 5. Connect one end of the black jump lead to the donor battery's negative terminal (3–).
- Connect the other end of the black jump lead to the earthing point (4–) by the lefthand strut tower.
- Start the engine of the "donor car". Let the engine run a few minutes at a speed slightly higher than idle (1500 rpm).
- 8. Start the engine of the car with the flat battery.
- Remove the jump leads first the black and then the red.

Make sure that none of the clamps on the black jump lead comes into contact with the battery's positive terminal or the clamp connected to the red jump lead.

IMPORTANT

Do not touch the crocodile clips during the start procedure. There is a risk of sparks forming.

The battery can generate oxyhydrogen gas, which is highly explosive. One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode.

The battery contains sulphuric acid, which can cause serious burns. If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water.

If acid splashes into the eyes, seek medical attention immediately.



Driving with a trailer

General

Payload depends on the car's kerb weight. The total of the weight of the passengers and all accessories, e.g. towbar, reduces the car's payload by a corresponding weight. For more detailed information on weights, see page 274.

If the towing bracket is fitted by an authorised Volvo workshop, then the car is delivered with the necessary equipment for driving with a trailer.

- The car's towing bracket must be of an approved type.
- If the towbar is retrofitted, check with your Volvo dealer that the car is fully equipped for driving with a trailer.
- Distribute the load on the trailer so that the weight on the towing bracket follows the specified maximum towball load.
- Increase the tyre pressure to the recommended pressure for a full load. For tyre pressure decal location, see page 178.
- Clean the towing bracket regularly and grease the towball¹.
- Do not tow a heavy trailer when the car is brand new. Wait until it has been driven at least 1000 km.

- The brakes are loaded much more than usual on long and steep downhill slopes.
 Downshift to a lower gear and adjust your speed.
- The engine is loaded more heavily than usual when driving with a trailer.
- The engine and gearbox can overheat if the car is driven with a heavy load in hot weather. If the temperature gauge for the engine's cooling system goes into the red zone, stop and let the engine idle for a few minutes. The automatic gearbox responds through a built-in protection system. See the message on the information display. If the car overheats, the air conditioning may be switched off temporarily.
- In the interests of safety, speed should be restricted to 80 km/h, even if the laws of certain countries allow for higher speeds.
- Move the gear selector to park position P when parking an automatic car with a hitched trailer. Always use the parking brake. Block the wheels with chocks when parking a car with hitched trailer on a hill.

Trailer weights

Information on permitted trailer weights, see page 274.

WARNING

Follow the stated recommendations for trailer weights. Otherwise, the car and trailer may be difficult to control in the event of sudden movement and braking.

The stated maximum permitted trailer weights are those permitted by Volvo. National vehicle regulations can further limit trailer weights and speeds. Towbars can be certified for higher towing weights than the car can actually tow.

Automatic gearbox, driving with a trailer

ΝΟΤΕ

Some models require an oil cooler for the automatic gearbox when driving with a trailer. Check with your nearest Volvo dealer as to what applies to your car if you have a retrofitted towbar.

¹ Does not apply to the towball if using a stabiliser hitch.

Driving with a trailer

Parking on a hill

- 1. Apply the parking brake.
- 2. Move the gear selector to parking position **P**.

Starting on a hill

- Move the gear selector to driving position D.
- 2. Release the parking brake (foot brake pedal).

Steep inclines

- Select an appropriate manual gear position when climbing steep inclines or at low speeds. This prevents the gearbox from changing up and keeps the gearbox oil cooler.
- Do not use a higher manual gear than the engine can "handle". It is not always economical to drive in high gears.
- Avoid driving with a trailer on inclines of more than 12%.

Assisted starting with a trailer

Cars equipped with a V8 engine have an integrated function which reduces the risk of significant jerking and wheelspin when starting with a trailer hitched to the car.

Activating

To activate, the cables from the trailer must be connected to the trailer socket which is fitted beside the towbar, see page 162.

Deactivating Unplug the cables from the electrical socket.

I NOTE

The function is also activated when any other electrical equipment is plugged into the trailer socket. The car then accelerates more gently when pulling away.

Levelling

If your car is equipped with automatic levelling, the rear suspension always retains the correct ride height regardless of load. When the car is stationary, the rear suspension sinks. This is completely normal. When starting with a load, the level is pumped up after a certain distance.



Towing equipment*

Towbar

If the car is equipped with a detachable towbar, the installation instructions for the loose section must be followed carefully, see page 164.

If the car is fitted with a Volvo detachable towbar:


- Follow the installation instructions carefully.
- The detachable section must be locked with the key before setting off.
- Check that the indicator window shows green.

Important checks

 The towbar's towball must be cleaned and greased regularly.

i) NOTE

If a towball hitch with vibration damper is used, it is not necessary to grease the towball.




T

Towbar storage space.

IMPORTANT

Always remove the towbar after use and store it in the appointed location in the car, firmly fastened with its strap.

Trailer cable

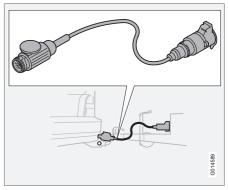

An adapter is required if the car's towing bracket has 13 pin electrics and the trailer has 7 pin electrics. Use an adapter cable approved by Volvo. Make sure the cable does not drag on the ground.


Towing equipment*

Dimensions for mounting points (mm)


	Α	В	С	D	E	F	G
Fixed or detachable towbar	1110	85	1081	541	122	50	354
1	Side member						
2	Ball centre						




Fitting the towbar

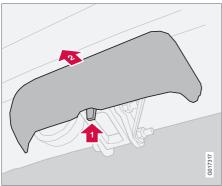


 Remove the protective cover by first pressing in the catch i and then pulling the cover straight back 2.

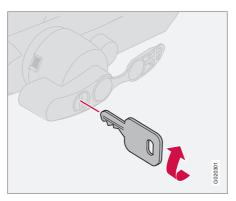


2. Ensure that the mechanism is in the unlocked position by turning the key clock-wise.

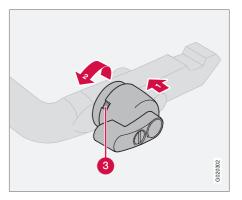


 Check that the indicator window (3) shows red. If the window does not show red, press in (1) and turn the locking wheel anticlockwise (2) until you hear a click.

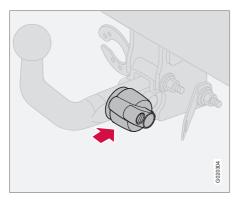


4. Insert the towbar until you hear a click.

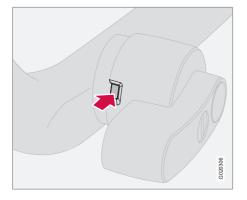

5. Check that the indicator window shows green.

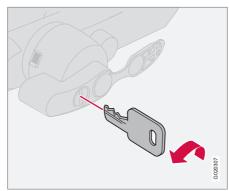

6. Turn the key anticlockwise to locked position. Remove the key from the lock.

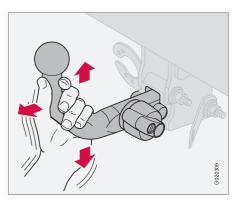

7. Check that the towbar is secure by pulling it up, down and back.

\Lambda WARNING


If the towbar is not fitted correctly then it must be detached and reattached in accordance with the previous instructions.

IMPORTANT

Only grease in the ball for the towing hitch, the remainder of the towbar should be clean and dry.

•




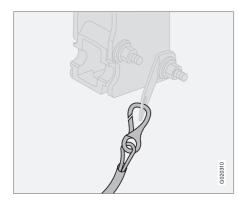


8. Safety cable.

🚹 WARNING


Be sure to attach the trailer's safety cable to the correct place.

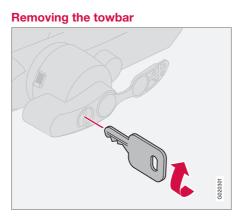

1. Insert the key and turn it clockwise to the unlocked position.

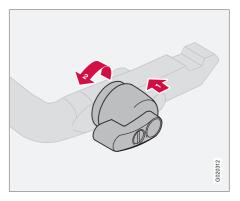


2. Push in the locking wheel (1) and turn it anticlockwise (2) until you hear a click.

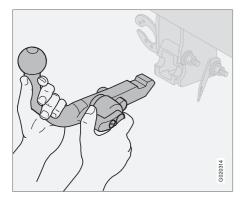

 Turn the locking wheel down fully, until it comes to a stop. Hold it in this position while pulling the towbar rearward and upward.

M WARNING

Secure the towbar safely if it is stored in the car, see page 162.

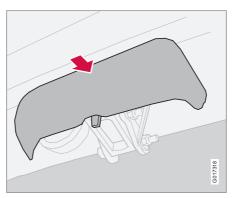


4. Push on the protective cover.

06

I

Correct light pattern for left or righthand traffic

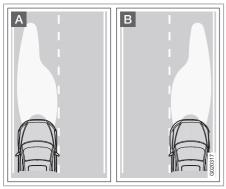

Headlamp pattern for left-hand traffic.

B Headlamp pattern for right-hand traffic.

So as not to dazzle oncoming drivers, the headlamp beam pattern can be altered by masking the headlamps. The quality of the beam pattern may not be as good.

Headlamp masking

Copy the templates, see page 168. Transfer the pattern to a self-adhesive, waterproof material such as opaque tape for example.

The mask is positioned using the dot (5) in the headlamp lens as a reference point, which

should align with the red dot on the respective template. The long red line on the illustrations corresponds to the line in the headlamp lens to which the template should be matched.

After copying the templates, check the measurements so that the reference measurements cover enough of the beam pattern.

The templates are for both LHD and RHD variants and are positioned as illustrated.

The upper illustration is for LHD cars. The lower illustration is for RHD cars.

Halogen headlamps

Copy templates 1 and 2. Check the measurements to ensure they are correct. Transfer the template to a self-adhesive, waterproof material and cut it out.

Position each template so that the arrows point towards the centre and the dot on the template matches the dot on the headlamp lens.

Reference measurements template 1 and 2

The long sides of the templates should be approx. 82 mm.

Xenon headlamps

Copy templates 3 and 4. Check the measurements to ensure they are correct. Transfer the

template to a self-adhesive, waterproof material and cut it out.

Position each template so that the arrows point towards the centre and the dot on the template matches the dot on the headlamp lens. The template marking > < should be aligned with the line on the headlamp lens.


Reference measurements template 3

The line between the > < markings on the templates should be approx. 140 mm.


Reference measurements template 4

The line between the > < markings on the templates should be approx. 112 mm.


Adjusting headlamp pattern for Active Xenon headlamps (ABL), see page 56.

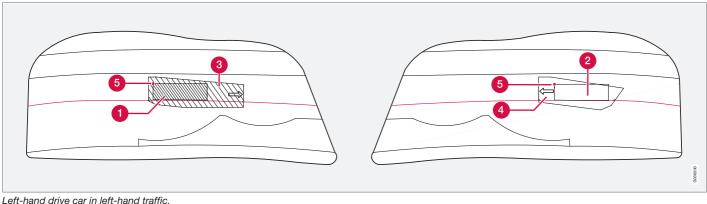

- Masking on right-hand halogen lens 0
- Masking on left-hand halogen lens
- Masking on right-hand Xenon lens 8
- 4 Masking on left-hand Xenon lens
- **6** Control point in headlamp lens.

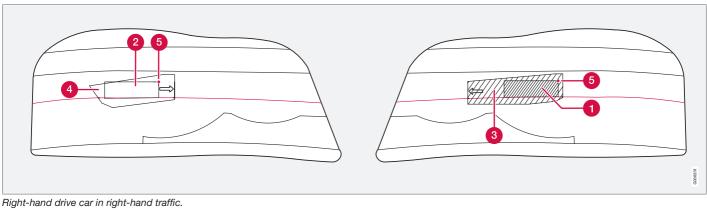

- Masking on left-hand halogen lens
- 2 Masking on right-hand halogen lens
- 3 Masking on left-hand Xenon lens
- 4 Masking on right-hand Xenon lens
- **(5)** Control point in headlamp lens.

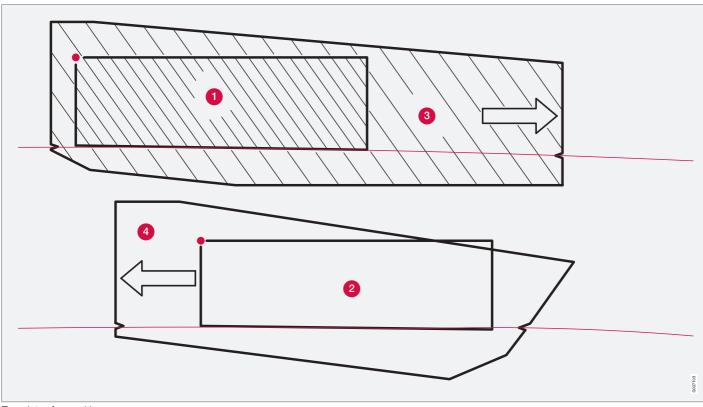


Templates for masking.

General	174
Tyre pressure	177
Warning triangle* and spare wheel *	
Changing wheels	. 182
Emergency puncture repair*	. 184



WHEELS AND TYRES

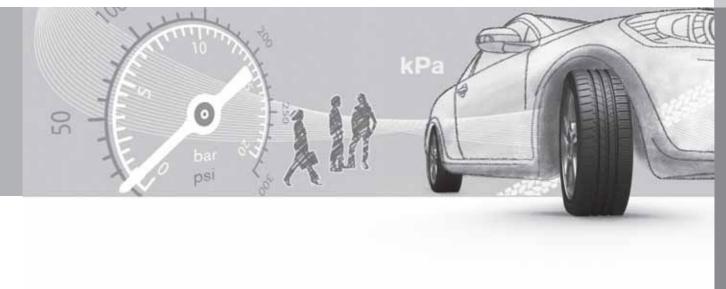



General

Driving characteristics and tyres

The tyres greatly affect the car's driving characteristics. The type of tyre, dimensions, tyre pressure and speed rating are important for how the car performs.

When changing tyres, ensure that tyres of the same type and dimensions, and preferably also the same make, are fitted to all four wheels. Follow the recommended tyre pressures specified on the tyre pressure label, for location see page 177.

Designation of dimensions

The dimensions are stated on all car tyres. Example of designation:

235/60R18 103 V.

235	Tyre width (mm)
60	Ratio between tyre wall height and tyre width (%)
R	Radial ply
18	Rim diameter in inches (")
103	Tyre load index (in this case 615 kg)
V	Speed rating for maximum permit- ted speed (in this case 210 km/h).

Speed ratings


The car is approved as a whole, which means that dimensions and speed ratings must not differ from those specified on the vehicle registration document. The only exception to these conditions is winter tyres (both those with metal studs and those without). If such a tyre is chosen, the car must not be driven faster than the speed rating of the tyre (for example, class Q can be driven at a maximum of 160 km/h).

Remember that traffic regulations determine how fast a car can be driven, not the speed class of the tyres.

Note! Maximum permitted speeds indicated.

Q	160 km/h (used only on winter tyres)
Т	190 km/h
Н	210 km/h
V	240 km/h
W	270 km/h
Υ	300 km/h

New tyres

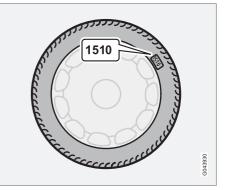

Tyres are perishable. After a few years they begin to harden at the same time as the friction capacity/characteristics gradually deteriorate. For this reason, aim to get as fresh tyres as possible when you replace them. This is especially important with regard to winter tyres. The last four digits in the sequence mean the week and year of manufacture. This is the tyre's DOT marking (Department of Transportation), and this is stated with four digits, for example 1510. The tyre in the illustration was manufactured in week 15 of 2010.

Tyre age

All tyres older than six years should be checked by an expert even if they seem undamaged.

General

The reason for this is that tyres age and decompose, even if they are hardly ever or never used. The function can therefore be affected due to the tyre's constituent materials being broken down. In such a case the tyre should then not be used. This also applies to spare tyres, winter tyres and tyres saved for future use. Examples of external signs which indicate that the tyre is unsuitable for use are cracks or discoloration.

The age of the tyre can be determined by the DOT marking, see illustration above.

More even wear and maintenance

The correct tyre pressure results in more even wear, see page 178. Driving style, tyre pressure, climate and road condition affect how guickly your tyres age and wear. To avoid differences in tread depth and to prevent wear patterns arising, the front and rear wheels can be switched with each other. A suitable distance for the first change is approx. 5000 km and then at 10 000 km intervals. Volvo recommends that you contact an authorised Volvo workshop for checking if you are uncertain about tread depth. If significant differences in wear (>1 mm difference in tread depth) between tyres have already occurred, the least worn tyres must always be placed on the rear. Understeer is normally easier to correct than oversteer, and leads to the car continuing forwards in a straight line rather than having the rear end skidding to one side, resulting in possible complete loss of control over the car. This is why it is important for the rear wheels never to lose grip before the front wheels.

Wheels should be stored lying down or hanging up, and not standing up.

Tyres with tread wear indicators



Tread wear indicators.

Tread wear indicators are narrow treadless bands across the width of the tread. On the side of the tyre are the letters TWI (Tread Wear Indicator). When the tyre's tread depth is down to 1.6 mm, the tread depth will be level in height with the tread wear indicators. Change to new tyres as soon as possible. Remember that tyres with little tread depth provide very poor grip in rain and snow.

Winter tyres

Volvo recommends winter tyres with specific winter tyre dimensions. Tyre dimensions are dependent on engine variant. When driving on winter tyres, they must be fitted to all four wheels.

i NOTE

Ask a Volvo dealer which rim and tyre types are most suitable.

Studded tyres

Studded winter tyres should be run in gently for 500 - 1000 km so the studs settle properly into the tyre. This gives the tyre, and especially the studs, a longer service life.

i) NOTE

The legal provisions for the use of studded tyres vary from country to country.

Tread depth

Road conditions with ice, slush and low temperatures place considerably higher demands on tyres than summer conditions. It is therefore recommended not to drive on winter tyres that have a tread depth of less than four millimetres.



07 Wheels and tyres

General

Snow chains


Snow chains may only be used on the front wheels. This also applies to all-wheel-drive cars.

Never drive faster than 50 km/h with snow chains. Avoid driving on bare ground as this wears out both the snow chains and tyres. Check that the snow chain does not make contact anywhere and that it is correctly fitted and well tensioned.

🚹 WARNING

Use Volvo genuine snow chains or equivalent chains designed for the car model, and tyre and rim dimensions. In the event of uncertainty Volvo recommends that you consult an authorised Volvo workshop. The wrong snow chains may cause serious damage to your car and lead to an accident.

Summer and winter wheels

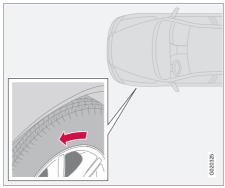

The arrow shows the tyre's direction of rotation


When summer and winter wheels are changed, see page 182, the wheels should be marked with which side of the car they were mounted on, for example L for left and R for right. Tyres with a tread pattern which are designed to only turn in one direction have the direction of rotation marked with an arrow. The tyre must always rotate in the same direction throughout its lifespan. Tyres should only be switched between front and rear positions, never between left and right-hand sides, or vice versa. If the tyre is mounted incorrectly, the car's braking characteristics and capacity to force rain, snow and slush out of the way are

adversely affected. Tyres with the greatest tread depth should always be fitted to the rear of the car (to decrease the risk of skidding).

Volvo recommends that you contact an authorised Volvo workshop for checking if you are uncertain about tread depth.

Tyre pressure

Recommended tyre pressure

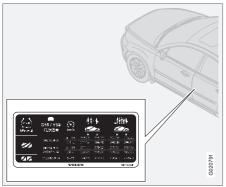

The tyre pressure label on the driver's side door pillar shows which pressures the tyres should have at different loads and speed conditions. Stated on the decal:

- Tyre pressures for the car's recommended tyre size
- ECO pressure¹
- Spare wheel tyre pressure (Temporary Spare).

Checking the tyre pressure

Check the tyre pressure regularly.

i) note

Tyre pressure decreases over time, this is a natural phenomenon. Tyre pressure also varies depending on ambient temperature.

Even after several kilometres of driving, the tyres warm up and the pressure increases. So air must not be released if the pressure is checked when the tyres are warm. While the pressure must be increased if it is too low. Inadequately inflated tyres increase fuel consumption, shorten tyre lifespan and impair the car's roadholding. Driving on tyres with tyre pressure that is too low can also result in the tyres overheating and disintegrating.

For information on the correct tyre pressure, see page 178. The specified tyre pressures refer to "cold tyres". ("Cold tyres" means the tyres are the same temperature as the ambient temperature.)

Fuel economy, ECO pressure

At speeds under 160 km/h, the general tyre pressure for full load is recommended in order to obtain optimum fuel economy.

Tyre pressure affects travelling comfort, road noise and steering characteristics.

¹ ECO pressure results in improved fuel economy.



Tyre pressure

Tyre pressure table


Variant	Tyre size	yre size Speed (km/h) ^A	Load, 1-3 persons		Max. load	ECO pres- sure ^B	
			Front (kPa)	Rear (kPa)	Front (kPa)	Rear (kPa)	
All	235/65R17 235/60R18	0-160	220	220	270	270	270
		160+	220	220	270	270	-
	255/50R19 255/45R20	0-160	240	240	270	270	270
		160 +	240	240	270	270	-
Temporary Spare Tyre		0-80	420	420	420	420	-

A In certain countries there is the "bar" unit beside the SI unit "Pascal": 1 bar = 100 kPa (270 kPa = 2.70 bar).

^B Economical driving, see page 177.

Warning triangle* and spare wheel *



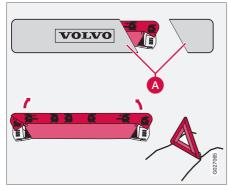

Follow the regulations in force for the use of a warning triangle* in the country in which you are driving.

Use the warning triangle as follows:

- 1. Detach the warning triangle case. It is held in place with a Velcro strap.
- 2. Remove the warning triangle from its case (A).
- 3. Fold out the four support legs on the warning triangle.
- 4. Fold out both red sides of the warning triangle. Position the warning triangle in a suitable place with regard to traffic.

After use:

Pack everything in reverse order.

Make sure that the warning triangle with case is securely fastened in the compartment.

Spare wheel Temporary Spare*

The spare wheel (Temporary spare) is only intended for use temporarily and must be replaced by an ordinary wheel as soon as possible. The car's handling may be altered by the use of the spare wheel. The spare wheel is smaller than the normal wheel. The car's ground clearance is affected accordingly. Pay attention to high kerbs and do not machine wash the car. If the spare wheel is fitted on the front axle, you cannot use snow chains at the same time. On all-wheel drive cars the drive on the rear axle can be disconnected. The spare wheel must not be repaired. The correct tyre pressure for the spare wheel is stated in the tyre pressure table, see page 178.

IMPORTANT

Never drive faster than 80 km/h with a spare wheel on the car.


IMPORTANT

The car must never be driven fitted with more than one "Temporary Spare" wheel.



Warning triangle* and spare wheel *

Spare wheel - removing

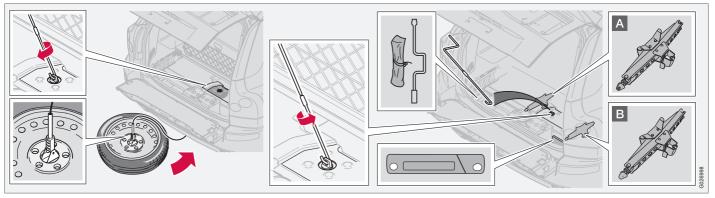

The spare wheel is located under the car. The jack*, tool kit* and crank are located under the floor hatch. The crank is in two parts. One part is in the tool kit, and the other is under the tool kit.

07


(i) NOTE

There is a puller spanner in the tool kit to remove the hub cap (certain wheel options).

The location of the jack varies:



Cars seating seven



Proceed as follows to release the spare wheel:

- 1. Lower the bottom of the tailgate and lift up the floor hatch in the cargo area.
- 2. Take the two parts of the crank and assemble.
- 3. Fit the crank in the winch.
- 4. Loosen the tyre by cranking anticlockwise until you reach the stop.

(i) NOTE

The cable could damage the car if it hangs free while driving.

- 5. Release the wheel from the cable and wind up the cable clockwise.
- Place the punctured tyre in the cargo area. The tool kit contains a plastic bag for the tyre.

Warning triangle* and spare wheel *

i note

The spot under the car is only intended for the car's original spare wheel. Do not place any other wheels there.

Spare wheel - refitting

It is best to have two people put the spare wheel back in place. One person to crank and the other to guide the wheel.

- 1. Crank out the cable and place its anchor in the centre hole of the wheel.
- 2. Slowly crank (clockwise) the cable in a bit.
- 3. Angle the wheel so that it comes in over the exhaust system.
- 4. Hold down the rear edge of the wheel while cranking it in.
- 5. Place the wheel above the rear axle, against the floor.
- 6. Crank to the stop point.
- 7. Check that the wheel is properly secured.

🔨 WARNING

Check that the right mounting points are being used. A production anchorage with pin is located between the jacking points. This is not strong enough to use to lift the car. If you are unsure about the location of the jacking points, Volvo recommends that you contact an authorised Volvo workshop. An incorrectly fitted jack could damage the door and body.

Tools - returning into place

The tools and jack* must be returned to their correct places after use. The jack must be cranked to the correct position, see the preceding illustration, in order to have space.

IMPORTANT

The tools and jack* must be stored in the intended location in the car's cargo area when not in use.


First aid*

A case with first aid equipment is located in the cargo area.



Changing wheels

Removing wheels

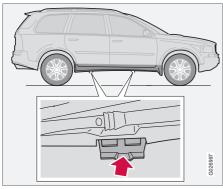

Remember to set out the warning triangle if you must change a wheel in a trafficked area. There are two jacking points on each side of the car. The jacking points are centred under the bottom of the doors.

- 1. Park the car on an even, firm surface with no incline.
- Apply the parking brake and engage reverse gear (manual gearbox) or move the gear selector to the P position (automatic gearbox). Place chocks in front of and behind the wheels which will remain on the ground. Use stones or wooden blocks for example.

\Lambda WARNING

Check that the jack is not damaged, that the threads are thoroughly lubricated and that it is free from dirt.

i NOTE

Volvo recommends only using the jack* that belongs to the car model in question, which is indicated on the jack's label.

The label also indicates the jack's maximum lift capacity at a specified minimum lifting height.

3. Take out the jack*, wheel brace and crank, see location see page 180. If another jack is selected, see page 199.

Never crawl under the car when it is raised on the jack. The car could fall, causing injuries.


The car's original jack should only be used when changing wheels. All other work on the car should be done using workshop jacks and axle stands under the part of the car that is raised.


The jack screw should be kept well lubricated.

If the surface is too soft, the jack could slide to the side and the car could fall. No one should be in the car when the wheel is being changed.

4. Use the wheel brace to loosen the wheel bolts 1/2-1 turn. Turn anticlockwise.

Changing wheels

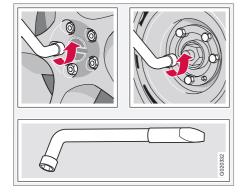

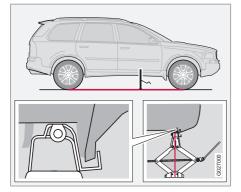

📐 WARNING

Never position anything between the ground and the jack, nor between the jacking point and the jack.

🚹 WARNING

If the jack is positioned incorrectly, the car could fall. Risk of injury.

5. Place the jack under the jacking point and crank it up towards the car floor. There is an recess in the plastic cover at each anchorage point. Check that the jack sits securely in the anchorage. Then adjust the jack so that its foot is positioned vertically under the anchorage. See illustration.

IMPORTANT

The ground must be firm, smooth and level.

- 6. Lift the car until the wheel is free.
- 7. Remove the wheel bolts and lift off the wheel.

Fitting the wheel

- 1. Clean the contract surfaces on the wheel and hub.
- 2. Put on the wheel. Screw in the wheel bolts.
- 3. Lower the car so that the wheel cannot rotate.
- Tighten the wheel bolts alternately and in torque steps. Tightening torque: 140 Nm (14.0 kpm). It is important that they are tightened to the correct torque. Check with a torque wrench.
- 5. Screw the jack all the way down before returning it to the cargo area. Then secure it in place.
- 6. Check that the new tyre has the correct amount of pressure.

NOTE

This wheel bolt may also be used for steel wheel rims.

Make sure to use the correct type of bolt. Volvo recommends that you contact the nearest Volvo workshop if you are in any doubt. 07



Emergency puncture repair*

General

The emergency puncture repair kit is used to seal a puncture as well as to check and adjust the tyre pressure. It consists of a compressor and a bottle with sealing fluid. The kit works as a temporary repair. The sealing fluid bottle must be replaced before its expiration date and after use.

The sealing fluid effectively seals tyres punctured in the tread.

i note

The emergency puncture repair kit is only intended for sealing tyres with a puncture in the tread.

i) NOTE

The jack is an option on cars equipped with emergency puncture repair kit.

The emergency puncture repair kit has limited capacity to seal tyres which have punctures in the wall. Do not seal tyres with the emergency puncture repair kit if they have larger slits, cracks or similar damage.

12 V sockets for connecting the compressor are located by the centre console in the front, by the rear seat and in the cargo area. Choose the electrical socket that is nearest the punctured tyre.

\Lambda WARNING


You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Volvo recommends that you visit an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Taking out the emergency puncture repair kit

The emergency puncture repair kit, with compressor and tools, is located under the floor in the cargo area.

- 1. Fold away the rear edge of the floor mat, forward from the back.
- 2. Lift up the emergency puncture repair kit.


Overview

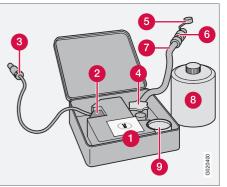

- 1 Label, maximum permitted speed
- 2 Switch
- 3 Cable
- 4 Bottle holder (orange cap)
- 6 Protective cap
- 6 Pressure reducing valve
- Air hose
- 8 Sealing fluid bottle
- 9 Pressure gauge

Emergency puncture repair*

Sealing punctured tyres

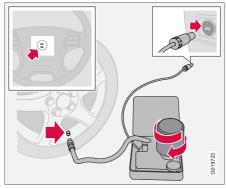

For information on the function of the parts, see preceding illustration.

- 1. Open the lid of the emergency puncture repair kit.
- 2. Detach the decal for maximum permitted speed and affix it to the steering wheel.

The sealing fluid can irritate the skin. In the case of contact with skin, wash away the fluid with soap and water.

3. Check that the switch is in position **0** and locate the cable and the air hose.

i) NOTE

Do not break the bottle's seal before use. The seal is broken automatically when the bottle is screwed in.

4. Unscrew the orange cap and unscrew the bottle's stopper.

📐 WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

- 5. Screw the bottle into its holder.
- Unscrew the wheel's dust cap and screw in the air hose valve connection to the bottom of the thread on the tyre's air valve.

🚹 WARNING

Do not leave children in the car without supervision when the engine is running.

7. Plug the cable into the 12 V socket and start the car.

WARNING

Never stand next to the tyre when the compressor is running. If cracks or unevenness arise then the compressor must be switched off immediately. The journey should not be continued. Contacting an authorised tyre centre is recommended.

i) NOTE

When the compressor starts, the pressure can increase up to 6 bar but the pressure drops after approximately 30 seconds.

8. Flick the switch to position I.

IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

9. Inflate the tyre for 7 minutes.

🔥 WARNING

If the pressure is below 1.8 bar then the hole in the tyre is too big. The journey should not be continued. Contacting an authorised tyre centre is recommended.



Emergency puncture repair*

- Switch off the compressor to check the pressure on the pressure gauge. Minimum pressure is 1.8 bar and maximum is 3.5 bar.
- 11. Switch off the compressor and unplug the cable from the 12 V socket.
- 12. Detach the hose from the tyre valve and fit the valve cap.
- As soon as possible, drive approximately 3 km at a maximum speed of 80 km/h so that the sealing fluid can seal the tyre.

Rechecking the repair and pressure

- 1. Reconnect the equipment.
- 2. Read the tyre pressure on the pressure gauge.
- 3. If it is below 1.3 bar then the tyre is insufficiently sealed. The journey should not be continued. Contact a tyre centre.
- If the tyre pressure is higher than 1.3 bar then the tyre must be inflated to the pressure specified on the tyre pressure label. Release air using the pressure reducing valve if the tyre pressure is too high.

WARNING

Do not unscrew the bottle, it is equipped with a reverse catch to prevent leakage.

5. Switch off the compressor. Detach the air hose and cable. Refit the dust cap.

) NOTE

The sealing fluid bottle and the hose must be replaced after use. Volvo recommends that this replacement is performed by an authorised Volvo workshop.

📐 WARNING

Check the tyre pressure regularly.

- 6. Return the emergency puncture repair kit to the cargo area.
- 7. Volvo recommends that you drive to the nearest authorised Volvo workshop for the replacement/repair of the damaged tyre. Advise the workshop that the tyre contains sealing fluid.

🚹 WARNING

You should not drive faster than 80 km/h after the emergency tyre repair kit has been used. Volvo recommends that you visit an authorised Volvo workshop for inspection of the sealed tyre (maximum driving distance is 200 km). The staff there can determine whether or not the tyre can be repaired or if it needs to be replaced.

Inflating the tyres

The car's original tyres can be inflated by the compressor.

- The compressor must be switched off. Make sure that the switch is in position 0 and locate the cable and air hose.
- 2. Unscrew the wheel's dust cap and screw in the air hose valve connection to the bottom of the thread on the tyre's air valve.

WARNING

Do not leave children in the car without supervision when the engine is running.

Emergency puncture repair*

🚹 WARNING

Inhaling car exhaust fumes can result in danger to life. Never leave the engine running in sealed areas or areas that lack sufficient ventilation.

- 3. Connect the cable to one of the car's 12 V sockets and start the car.
- 4. Start the compressor by flicking the switch to position **I**.

IMPORTANT

Risk of overheating. The compressor must not run for more than 10 minutes.

- Inflate the tyre to the pressure specified on the tyre pressure decal. (Release air using the pressure reducing valve if the tyre pressure is too high.)
- 6. Switch off the compressor. Detach the air hose and cable.
- 7. Refit the dust cap.

Changing the sealing fluid canister

Replace the bottle when the expiration date has passed. Treat the old bottle as environmentally hazardous waste.

\Lambda WARNING

The bottle contains 1.2-Ethanol and natural rubber-latex.

Harmful if ingested. Could result in allergic reaction in the event of skin contact.


Avoid contact with the skin and eyes.

Store out of the reach of children.


i) NOTE

Leave the container at a collection point for storing dangerous waste.

Cleaning	190
Touching up paintwork	
Rustproofing	195

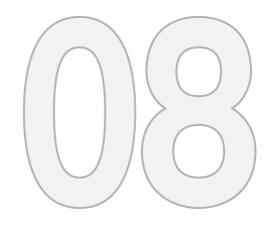

CAR CARE

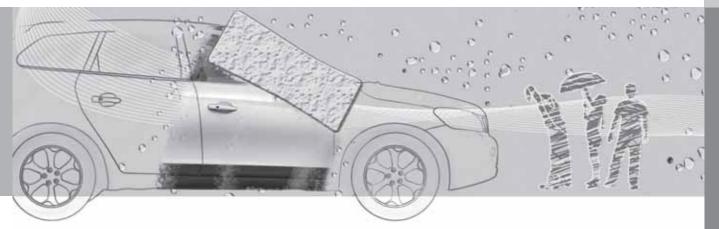

Cleaning

Washing the car

Wash the car as soon as it becomes dirty. Use car shampoo. Dirt and road salt can lead to corrosion.

- Do not park the car in direct sunlight. Washing a car with hot paintwork can cause permanent paintwork damage. Wash the car in a car wash with waste water separator.
- Hose down the underbody thoroughly.
- Wash using a sponge, car shampoo and plenty of lukewarm water.
- If the dirt is difficult to dislodge, wash the car using a cold degreasing agent.
- Dry the car using a clean, soft chamois or a water scraper.

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.

IMPORTANT

Dirty headlamps have impaired functionality. Clean them regularly, when refuelling for example.

NOTE

Outside lighting such as headlamps, fog lamps and rear lamps may temporarily have condensation on the inside of the lens. This is a natural phenomenon, all outside lighting is designed to withstand this. Condensation is normally vented out of the lamp when it has been switched on for a time.

Cleaning the wiper blades

Asphalt, dust and salt residue on wiper blades, as well as insects, ice etc. on the windscreen, impair the service life of wiper blades.

I) NOTE

Wash the wiper blades and windscreen regularly with lukewarm soap solution or car shampoo.

Do not use any strong solvents.

Removing bird droppings

Wash away bird droppings from the paintwork as soon as possible. Bird droppings contain chemicals that affect and discolour paintwork very quickly. This discoloration can only be removed by a specialist.

Chromed wheels

IMPORTANT

Rim cleaning agents can cause stains on chrome-plated wheels. Wash using a sponge, car shampoo and plenty of lukewarm water.

Automatic car washes

An automatic car wash is a simple and quick way of washing the car, but it can never replace a proper handwashing. The brushes of an automatic car wash cannot reach everywhere.

IMPORTANT

Washing by hand is gentler to the paintwork than an automatic car wash. Paintwork is also more sensitive when it is new. For this reason, handwashing is recommended during the first few months with a new car.

High-pressure washing

When using high-pressure washing, use sweeping movements and make sure that the nozzle does not come closer than 30 cm to the surface of the car (the distance applies to all exterior parts).

Cleaning

IMPORTANT

Rinse the entire car to remove loose dirt. When using a pressure washer: Make sure that the nozzle of the pressure washer is not closer than 30 cm to the bodywork. Do not spray directly onto the locks.

Testing the brakes

🔥 WARNING

Always test the brakes after washing the car, including the parking brake, to ensure that moisture and corrosion do not attack the brake linings and reduce braking performance.

Lightly depress the brake pedal now and then when driving long distances in rain or slush. This heats and dries the brake pads. Do the same thing after starting in very damp or cold weather.

Exterior plastic, rubber and trim components

A special cleaning agent available from Volvo dealers is recommended for the cleaning and care of coloured plastic parts, rubber and trim components (such as glossy trim mouldings). When using such a cleaning agent the instructions must be followed carefully.

IMPORTANT

Avoid waxing and polishing on plastic and rubber.

When using degreasant on plastic and rubber, only rub with light pressure if it is necessary. Use a soft washing sponge.

Polishing glossy trim mouldings could wear away or damage the glossy surface.

Polishing agent that contains abrasive must not be used.

Polishing and waxing

Polish and wax the car if the paintwork is dull or to give the paintwork extra protection.

The car does not need to be polished until it is at least one year old. However, the car can be waxed before this time. Do not polish or wax the car in direct sunlight.

Wash and dry the car thoroughly before you begin polishing or waxing. Clean off asphalt and tar stains using tar remover or white spirit. More stubborn stains can be removed using fine rubbing paste designed for car paintwork.

Polish first with a polish and then wax with liquid or solid wax. Follow the instructions on the packaging carefully. Many preparations contain both polish and wax.

IMPORTANT

Only paint treatment recommended by Volvo should be used. Other treatment such as preserving, sealing, protection, lustre sealing or similar could damage the paintwork. Paintwork damage caused by such treatments is not covered by Volvo warranty.

Water-repellent coating*



Never use products such as car wax, degreaser or similar on glass surfa-

ces as this could ruin their water-repellent properties.

Take care when cleaning so as not to damage the glass surface.

To avoid damaging glass surfaces when removing ice – only use plastic ice scrapers.

There is natural wear of the water-repellent coating.

i) NOTE

Treatment with a special finishing agent available from Volvo dealers is recommended in order to maintain the waterrepellent properties. This should be used first after three years and then each year.

Cleaning

Cleaning the interior

Treatment of stains on textile upholstery and headliner

Only use cleaning agents and car care products recommended by Volvo. Clean regularly and follow the instructions included with the car care product. Other chemicals can impair the fire retardant qualities of the upholstery.

Vacuuming is important prior to using cleaning agents.

Volvo's cleaning agents can also be used for stains on the mat after vacuuming.

Sharp objects and Velcro may damage the fabric upholstery.

A special fabric cleaning agent, available from authorised Volvo dealers, is recommended to avoid impairing the fire retardant qualities of the upholstery. Use water and a synthetic detergent to clean the seatbelts. Make sure the seatbelt is dry before allowing it to retract.

Treating stains on leather upholstery

Volvo's leather upholstery is chromium-free and approved in accordance with the Oeko-Tex 100 standard and is treated to preserve its original appearance. Leather upholstery ages and acquires a beautiful patina over time. The leather is refined and processed so that it retains its natural characteristics. It is given a protective coating, but regular cleaning is required in order to maintain both characteristics and appearance. Volvo offers a comprehensive product for the cleaning and treatment of leather upholstery which, when used in accordance with the instructions, preserves the leather's protective coating. After a period of use the natural appearance of the leather will nevertheless emerge, depending more or less on the surface texture of the leather. This is a natural maturing of the leather and shows that it is a natural product.

To achieve best results Volvo recommends cleaning and the application of protective cream once to four times per year (or more if necessary). The Volvo Leather Care kit is available from your Volvo dealer.

IMPORTANT

- Certain items of coloured clothing (for example, jeans and suede garments) may stain the upholstery.
- Never use strong solvents. Such products may damage fabric, vinyl and leather upholstery.

Washing instructions for leather upholstery

- 1. Pour the leather cleaner on the dampened sponge and squeeze out a strong foam.
- 2. Work the dirt away with gentle circular movements.
- 3. Dab accurately with the sponge on the stains. Allow the sponge to absorb the stain. Do not rub.
- 4. Wipe off with soft paper or a cloth and allow the leather to dry completely.

Protective treatment of leather upholstery

Vacuuming is important prior to using leather care agents.

- 1. Pour a small amount of the protective cream on the felted cloth and massage in a thin layer of cream with gentle circular movements on the leather.
- 2. Allow the leather to dry for 20 minutes before use.

The leather has now been given improved protection against stains and improved UV protection.

08 Car care

Cleaning

IMPORTANT

Sharp objects may damage the leather, (e.g. rings).

Washing instructions for the leather steering wheel

- Remove dirt and dust with a soft pre-moistened sponge and neutral soap.
- Leather needs to breathe. Never cover the leather steering wheel with protective plastic.
- Use natural oils. Volvo's leather care agents are recommended for best results.

If the steering wheel has stains:

Group 1 (ink, wine, coffee, milk, sweat and blood)

 Use a soft cloth or sponge. Mix a 5% ammonia solution. (For blood stains, use a solution of 2 dl water and 25g salt.)

Group 2 (fats, oils, sauces and chocolate)

- 1. Same procedure as group I.
- 2. Polish with an absorbent paper or cloth.

Group 3 (dry dirt, dust)

- 1. Use a soft brush to remove the dirt.
- 2. Same procedure as group I.

Treating stains on interior plastic, metal and wood parts

A special cleaning agent, available from Volvo dealers, is recommended for cleaning interior parts and surfaces. Do not scrape or rub stains. Never use strong stain removers.

Cleaning seatbelts

Use water and a synthetic detergent. A special textile cleaning agent is available from your Volvo dealer. Make sure the seatbelt is dry before allowing it to retract.

Touching up paintwork


Paintwork

Paint is an important part of the car's rustproofing and should therefore be checked regularly. To avoid the onset of rust, damaged paintwork should be rectified immediately. The most common types of paintwork damage are stone chips, scratches, and marks on the edges of wings and doors.

Colour code

VOLVO CAR CORPORATION
VOLVO

Data plate.



It is important that the correct colour is used. For product decal location, see page 272.

Stone chips and scratches



Before touching up paintwork, the car must be clean and dry and at a temperature above $15 \, {}^{\circ}\text{C}.$

Materials

- Primer in a can
- Spray can or touch-up pen¹
- Masking tape.

Minor stone chips and scratches

If the stone chip has not penetrated to the bare metal and there is an undamaged colour coat, you can paint straight after cleaning the damaged area.

If the stone chip has penetrated to the bare metal

- 1. Apply a piece of masking tape over the damaged surface. Then remove the tape to remove any loose paint.
- 2. Stir the primer well and apply using a fine brush or a matchstick. Apply paint using a brush once the primer is dry.
- 3. For scratches, proceed as above, but mask around the damaged area to protect the undamaged paintwork.
- 4. After a few days, polish the touched-up areas. Use a soft rag and a small amount of lapping paste.

¹ Follow the instructions contained in the touch-up pen's packaging.

Rustproofing

Inspection and maintenance

Your car has already received a thorough and complete rustproofing at the factory. Parts of the body are made of galvanised sheet metal. The underbody is protected by a wear-resistant anti-corrosion compound. A thin, penetrating rustproofing fluid was sprayed into the members, cavities and closed sections.

Maintain the car's rustproofing.

- Keep the car clean. Hose down the underbody. If using a pressure washer, keep the nozzle at least 30 cm from the painted surfaces.
- Regularly check and touch-up the rustproofing treatment as necessary.


The car's rustproofing does not normally require treatment for approximately 12 years. After this period, it should be treated at threeyear intervals. If the car needs further treatment, Volvo recommends that you engage an authorised Volvo workshop for assistance.

Volvo service	198
Self-maintenance	199
Bonnet and engine compartment	201
Oils and fluids	
Wiper blades	207
Battery	209
Replacing bulbs	211
Fuses	218



(

MAINTENANCE AND SERVICE

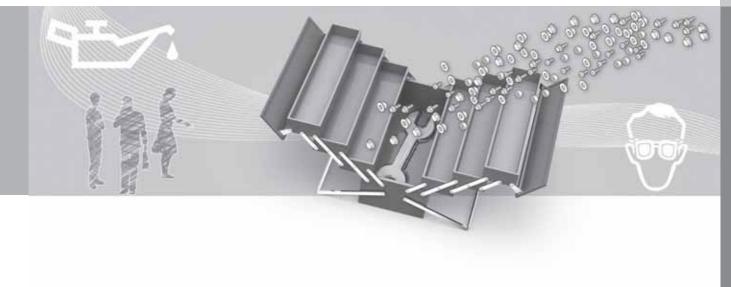



Volvo service

Volvo service programme

Before the car left the factory, it was thoroughly test driven. It was checked again in accordance with Volvo Car Corporation regulations before it was handed over to you.

To keep your Volvo as safe and reliable as possible, follow the Volvo service programme specified in the Service and Warranty Booklet. Volvo also recommends that you engage an authorised Volvo workshop to perform the service and maintenance work. Volvo workshops have the personnel, special tools and service literature to guarantee the highest quality of service.

IMPORTANT

For the Volvo warranty to apply, check and follow the instructions in the Service and Warranty Booklet.

Special service measures

Certain service measures which affect the car's electrical system can only be performed using electronic equipment specially developed for your car. Similarly, Volvo recommends that you contact an authorised Volvo workshop before starting or performing service work that affects the electrical system.



Before starting work on the car

Battery

Check that the battery cables are correctly connected and tightened.

Never disconnect the battery when the engine is running (e.g. if replacing the battery).

Never use a quick charger to charge the battery. The battery cables must be disconnected when charging the battery.

The battery contains acid that is both corrosive and toxic. It is therefore important to handle the battery in an environmentally correct manner. Let your Volvo dealer assist you.

High output from the ignition system. The voltage in the ignition system is highly dangerous. The ignition must therefore always be switched off for work in the engine compartment.

Do not touch the spark plugs or ignition coils when the ignition is on or the engine is hot.

Check regularly

Check the following at regular intervals, for example, when refuelling:


- Coolant The level must be between the MIN and MAX marks on the expansion tank.
- Engine oil The level must be between the **MIN** and **MAX** marks.
- Power steering fluid The level must be between the MIN and MAX marks.
- Washer fluid The reservoir should be well filled. Use washer antifreeze at temperatures around freezing.
- Brake and clutch fluid The level must be between the MIN and MAX marks.

🔥 WARNING

Bear in mind that the radiator fan may start automatically some time after the engine has been switched off.

Always have the engine cleaned by a workshop. There is a risk of fire if the engine is hot.

Lifting the car

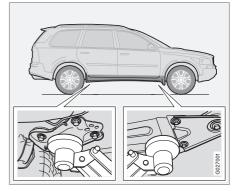

i NOTE

Volvo recommends only using the jack that belongs to the car model in question. If a jack other than one recommended by Volvo is selected, then follow the instructions included with the equipment

If the car is lifted with a workshop jack; position the jack with the front edge on the subframe.

Do not damage the splashguard under the engine. Ensure that the jack is positioned so that the car cannot slide off the jack. Always use axle stands or the like.



09




Self-maintenance

If you lift the car using a two pillar workshop lift, ensure that the front and rear lift arms are fixed under the lifting points on the door sill. See previous illustration.

Bonnet and engine compartment

Ð

Opening the bonnet

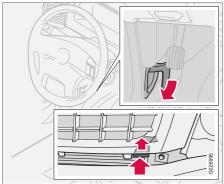

\Lambda WARNING

Close the bonnet by placing your hand on its top and pressing down. Do not close it by holding the grille. Engine components on the inside could injure your fingers.

- 1. Pull the handle on the far left (or right if the car is RHD) under the instrument panel. You will hear when the lock releases.
- 2. Insert your hand to the right under the front edge of the bonnet (below the grille).
- 3. Press up the safety catch handle.
- 4. Release the handle and open the bonnet.


🚹 WARNING

Check that the bonnet locks properly when closed.



Bonnet and engine compartment

Engine compartment

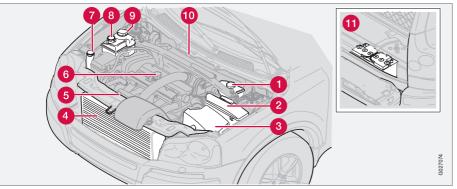


- 1 Clutch and brake fluid reservoir
- 2 Relay and fuses
- **3** Air filter. (The cover has a different design depending on engine variant.)
- 4 Radiator
- 5 Engine oil dipstick
- 6 Engine oil filling
- Washer fluid reservoir
- 8 Power steering fluid reservoir
- 9 Expansion tank, cooling system

- (1) Chassis data plate
- 1 Battery (in cargo area)



Oils and fluids

Engine compartment decal for oil grade.

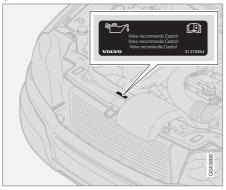

Using oil of a higher than specified grade is permitted. If the car is driven in adverse conditions, Volvo recommends using an oil of a higher grade than that specified on the decal, see page 277.

Checking the engine oil and oil filter

Volvo recommends Castrol oil products. Change the oil and oil filter in accordance with the intervals specified in the Service and Warranty Booklet.

IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil (see the engine compartment decal) for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.

Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Volvo uses different systems for warning of low oil level or low oil pressure. Certain variants have an oil pressure sensor, and then the lamp for oil pressure is used. Other variants have an oil level sensor, and then the driver is informed via the warning symbol in the centre of the instrument unit as well as by display texts. Certain models have both variants. Volvo recommends that you contact an authorised Volvo dealer for more information.


Checking the oil level in a new car is especially important before the first scheduled oil change. The Service and Warranty Booklet specifies the odometer readings for oil changes.

Volvo recommends checking the oil level every 2 500 km. The most accurate measurements are made on a cold engine before starting. The measurement will be inaccurate if taken immediately after the engine is switched off. The dipstick will indicate that the level is too low because the oil has not had time to flow down into the oil sump.



Oils and fluids

Checking the oil

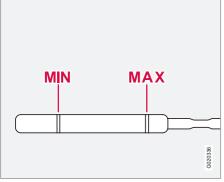

The oil level must be within the area marked on the dipstick.

Checking the oil in a cold engine

- 1. Wipe the dipstick clean before checking the level.
- 2. Check the oil level using the dipstick. The level must be between the **MIN** and **MAX** marks.
- 3. If the level is close to the **MIN** mark, start by topping up with 0.5 litres. Top up until the oil level is nearer the **MAX** than the **MIN** mark on the dipstick, see page 277 and forward for capacities.

Checking the oil in a warm engine

- Park the car on a level surface, switch off the engine and wait 10 – 15 minutes to allow the oil time to run back to the sump.
- 2. Wipe the dipstick clean before checking the level.
- 3. Check the oil level using the dipstick. The level must be between the **MIN** and **MAX** marks.

If the level is close to the **MIN** mark, start by topping up with 0.5 litres. Top up until the oil level is nearer the **MAX** than the **MIN** mark on the dipstick, see page 277 and forward for capacities.


📐 WARNING

Do not spill oil onto the hot exhaust manifold due to the risk of fire.

IMPORTANT

Never fill above the **MAX** mark. Oil consumption may increase if too much oil is poured into the engine.

Washer fluid, filling

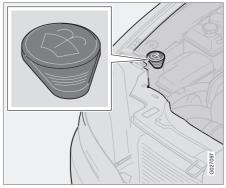

Location of washer fluid reservoir.


The windscreen and headlamp washers have the same reservoir. Add antifreeze in the winter so that the fluid does not freeze in the pump, reservoir and hoses. See capacities on page 279.

NOTE

TIP! Clean the wiper blades when topping up washer fluid. Mix the washer antifreeze and water before filling the reservoir.

Oils and fluids

Checking and topping up the coolant

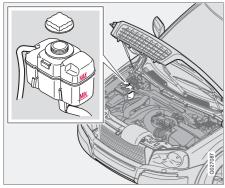

When topping up the coolant, follow the instructions on the packaging. It is important that the mixture of coolant concentrate and water is correct for the prevailing weather conditions. Never top up with water only. The risk of freezing increases with both too little and too much coolant concentrate.

IMPORTANT

Always use coolant with anti-corrosion agent as recommended by Volvo. New cars are filled with coolant that can withstand temperatures down to approximately ca -35 °C. See capacities on page 279.

Check the coolant regularly

The level must lie between the **MIN** and **MAX** marks on the expansion tank. If the system is not filled sufficiently, high local temperatures could occur, causing a risk of damage (cracks) to the cylinder head. Top up the coolant when the level falls to the **MIN** mark.

🚹 WARNING

Coolant can be very hot. If the coolant requires topping up when the engine is at operating temperature, unscrew the expansion tank cap slowly to gently release the overpressure.

IMPORTANT

- A high content of chlorine, chlorides and other salts may cause corrosion in the cooling system.
- Always use coolant with anti-corrosion agent as recommended by Volvo.
- Ensure that the coolant mixture is 50% water and 50% coolant.
- Mix the coolant with approved quality tap water. In the event of any doubt about water quality, used ready-mixed coolant in accordance with Volvo recommendations.
- When changing coolant/replacing cooling system components, flush the cooling system clean with approved quality tap water or flush with ready-mixed coolant.
- The engine must only be run with a wellfilled cooling system. High temperatures may occur, causing a risk of damage (cracks) to the cylinder head.


For capacities and for standards regarding water quality, see the table under Fluids and lubricants on page 279.

09



Oils and fluids

Checking and topping up the brake and clutch fluid

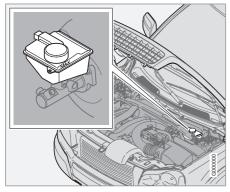

Brake and clutch fluid have a common reservoir¹. The fluid level must be between the **MIN** and **MAX** marks. Check the level regularly. Change the brake fluid every other year or at every other regular service.

See the capacities and recommended fluid grade on page 279.


The fluid should be changed annually on cars driven in conditions requiring hard, frequent braking, such as driving in mountains or tropical climates with high humidity.

📐 WARNING

If the brake fluid is under the **MIN** level in the brake fluid reservoir, do not drive further before topping up the brake fluid.

The reason for the loss of brake fluid must be investigated.

Checking and topping up the power steering fluid

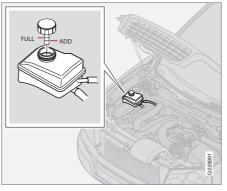

i NOTE Check the level frequently. Check the level frequently. The fluid does not require changing. The level must lie between the **ADD** and **FULL** marks. See the capacities and recommended grade on page 279.

ΝΟΤΕ

If a fault should arise in the power steering system or if the car is without power and must be towed, it can still be steered. However, the steering will be much heavier than normal and it will require more effort to turn the steering wheel.

¹ Location dependent on whether car is left or right-hand drive.

Wiper blades

67)

09

Wiper blades


Cleaning

For cleaning wiper blades and windscreen, see page 190.

IMPORTANT

Check the wiper blades regularly. Neglected maintenance shortens the service life of the wiper blades.

Replacing the wiper blades, windscreen

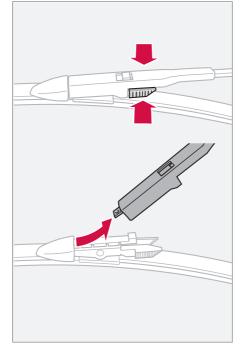


NOTE

The wiper blades are different lengths. The blade on the driver's side is longer than on the other side.

- 1. Fold out the wiper arm and grasp the wiper blade.
- 2. Press in the ribbed spring catch on the wiper blade while lifting it off at the arm extension.
- 3. Fit the new blade in reverse order and check that it is properly secured.

Changing the rear window wiper blade

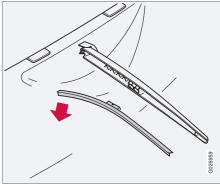

1. Fold out the wiper arm.



2. Remove the wiper blade by moving it up/ out (see illustration) towards the tailgate.

Wiper blades

- 3. Press the new wiper blade into position.
- 4. Check that the blade is firmly installed.



Battery care

The service life and function of the battery is influenced by factors such as the number of starts, discharging, driving style, driving conditions and climatic conditions.

i NOTE

An expended battery must be recycled in an environmentally safe manner as it contains lead.

🔥 WARNING

Batteries can generate oxyhydrogen gas, which is highly explosive. One spark, which can be generated if you connect the jump leads incorrectly, is sufficient to make the battery explode. The battery contains sulphuric acid, which can cause serious burns. If the acid comes into contact with eyes, skin or clothing, flush with large quantities of water. If acid splashes into the eyes, seek medical attention immediately.

NOTE

The life of the battery is shortened if it becomes discharged repeatedly.

The life of the battery is affected by several factors, including driving conditions and climate. Battery starting capacity decreases gradually with time and therefore needs to be recharged if the car is not used for a longer time or when it is only driven short distances. Extreme cold further limits starting capacity.

To maintain the battery in good condition, at least 15minutes of driving/week is recommended or that the battery is connected to a battery charger with automatic trickle charging.

A battery that is kept fully charged has a maximum service life.

Symbols on the battery

Use protective goggles.



Further information in the owner's manual.



Store the battery out of the reach of children.



The battery contains corrosive acid.



Avoid sparks and naked flames.



Risk of explosion.






Changing the battery


Battery

Removing the battery

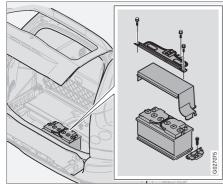

- 1. Switch off the ignition and remove the remote control key
- 2. Unscrew the bracket and cover over the battery
- Wait at least 5 minutes before touching any electrical terminals. (This allows time for the information in your car's electrical system to be stored in the control modules.)
- 4. Disconnect the negative lead first
- 5. Then disconnect the positive lead and the evacuation hose for the oxyhydrogen gas

Fitting the battery

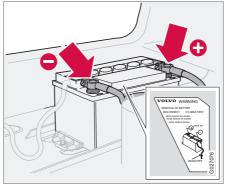

- 1. Set the battery in place
- 2. Connect the positive lead
- 3. Connect the negative lead
- 4. Make sure the evacuation hose is correctly connected to both the battery and the outlet in the bodywork.
- 5. Refit the cover and bracket



Replacing bulbs

General

All bulb specifications are given on page 284.

The following list contains bulbs and pointsource lamps that are specialised or unsuitable for changing except at a workshop:

- General interior lighting in the roof
- Reading lamps and glovebox lighting
- Indicator, door mirror and approach lighting
- High-level brake light
- Active Xenon headlamps


🚹 WARNING

On cars equipped with Xenon lamps, headlamp replacement must be performed at a workshop - an authorised Volvo workshop is recommended. The lamp must be handled with extreme caution because it is equipped with a high voltage unit.

IMPORTANT

Never touch the glass part of the bulbs with your fingers. Grease and oil from your fingers are vaporised by the heat, coating the reflector and then causing damage.

Changing front bulbs

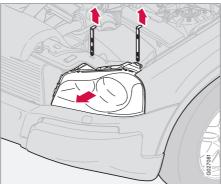

The entire lamp insert must first be removed when replacing dipped beam, main beam and parking lamp bulbs. To replace one of these bulbs, do the following and then consult the instructions for the specific lamp.


Removing the lamp housing:

- 1. Switch off all lights and turn the remote control key to position **0**.
- 2. Open the bonnet.
- 3. Release the insert by pulling up the two lock pins holding it in place.
- 4. Lift the insert straight out.

IMPORTANT

Do not pull the electrical cable, only the connector

- 5. Unplug the connector by first pressing in the catch from underneath and then pulling it up a bit from above.
- Lift out the entire headlamp insert and place it on a soft surface so as not to damage the lens.

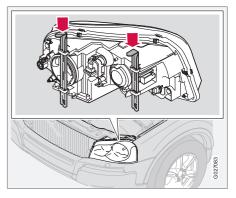


Refit the headlamp insert in reverse order. Check that the lock pins are correctly situated.




Replacing bulbs

Location of bulbs in front lamp

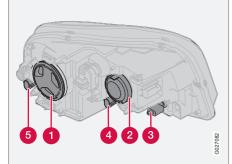

- Dipped beam
- 2 Main beam
- Oirection indicator
- 4 Parking/position lamps
- 6 Side marker lamps

Dipped beam, halogen

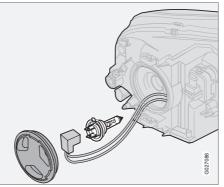


- 1. Undo the outer cover by turning it anticlockwise.
- 2. Unplug the connector.
- 3. Disconnect the spring clamp. First push to the right so that the spring clamp disconnects, then out and down.
- 4. Pull out the lamp.
- 5. Fit the new bulb. It can only fit in one position.
- 6. Press the clamp spring upwards and a little to the left so that it secures in its catch.
- 7. Press the connector back in place.

8. Screw the cover back into place; the marking **HAUT** should be at the top.

Main beam

Halogen headlamps

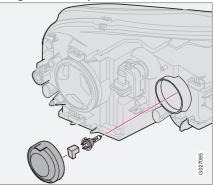


- 1. Undo the outer cover by pulling it straight out and then unplug the connector.
- 2. Disconnect the spring clamp. First push to the right so that the spring clamp disconnects, then out and down.
- 3. Pull out the lamp.
- 4. Fit the new bulb. It can only fit in one position.



Replacing bulbs

- 5. Press the clamp spring upwards and a little to the left so that it secures in its catch.
- 6. Press the connector back in place and refit the cover.

Side marker lamps and position/ parking lamps

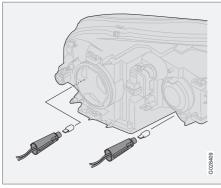


The bulbs are housed in bayonet holders.

- 1. Turn the bulb holder anticlockwise and remove.
- 2. Pull the bulb straight out.
- 3. Fit the new bulb by carefully pressing it into the recess.

4. Fit the bulb holder back in place and turn clockwise.


Direction indicators

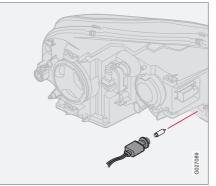

The bulbs are housed in bayonet holders.

- 1. Turn the bulb holder anticlockwise and remove.
- 2. Press in the bulb, turn anticlockwise and remove.
- 3. Fit the new bulb by pressing it into the recess and then turning clockwise.

Front fog lamps

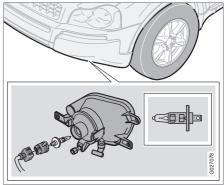


- 1. Switch off all lights and turn the remote control key to position **0**.
- 2. Turn the bulb holder slightly anticlockwise.
- 3. Remove the lamp.
- 4. Fit the new bulb. The profile of the bulb holder matches the one on the foot of the lamp.
- 5. Refit the bulb holder by turning slightly clockwise. The **TOP** mark on the bulb holder must be upward.



Replacing bulbs

Bulbs in rear lamp cluster

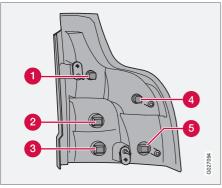

- Position lamps
- 2 Direction indicators
- 3 Reversing lamp
- 4 Position lamps
- 6 Brake light

i NOTE


If an error message remains after a faulty bulb has been replaced then we recommend that you visit an authorised Volvo workshop.

09 Maintenance and service

Replacing bulbs

09

Bulb replacement

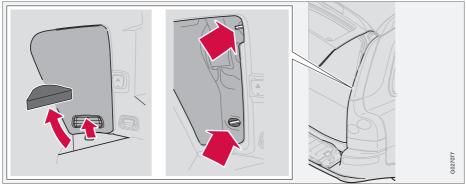

- 1. Switch off all lights and turn the remote control key to position **0**.
- 2. Lower the bottom of the tailgate and open the floor hatch. (If the car is equipped with a grocery bag holder*, undo the holder's retaining straps.)
- 3. Remove the corner piece.
- 4. Open the hatch in the side panel by pulling the catch up and towards you.
- 5. Take spanner no. 10 out of the tool kit and undo the nuts.
- 6. Pull the entire insert straight back.


- 7. Loosen the extra length of cable for better accessibility.
- 8. Place the insert on a soft surface so as not to scratch the glass.
- 9. Turn the bulb holder anticlockwise and pull it out.
- Turn the bulb anticlockwise to loosen it. (Applies to direction indicators, reversing lamps and brake lamps).
- 11. Pull the bulb straight out. (Applies to position lamps).
- 12. Replace the bulb.

- 13. Refit the bulb holder in the recess and turn clockwise.
- 14. Press back the extra length of cable.
- 15. Refit the insert against the bolt holes. Press the insert into place.
- 16. Tighten the nuts.
- 17. Refit the side panel and corner piece.




Replacing bulbs

Rear fog lamp

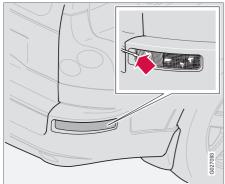


- 1. Insert a slotted screwdriver as indicated by the arrow in the illustration.
- 2. Prise out the lamp insert.
- 3. Turn the bulb holder anticlockwise to loosen it.
- 4. Turn the bulb anticlockwise and lift the bulb out.
- 5. Replace the bulb.

Number plate lighting

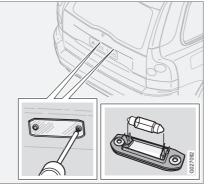

- 1. Switch off all lights and turn the remote control key to position **0**.
- 2. Remove the screws with a screwdriver.
- 3. Loosen the whole lamp housing carefully and pull it out.
- 4. Replace the bulb.
- 5. Refit the entire lamp housing and screw it into place.

Courtesy lighting

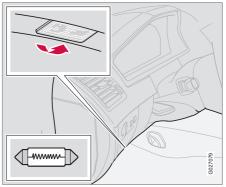


There is courtesy lighting under the instrument panel on the driver and passenger sides.

- 1. Insert a screwdriver and gently turn so that the lens detaches.
- 2. Remove the blown bulb.
- 3. Fit a new bulb.
- 4. Refit the lens.


Replacing bulbs

Bulbs in the cargo area

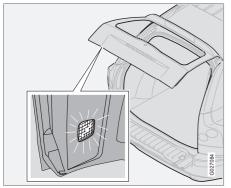

- 1. Insert a screwdriver and gently turn so that the lamp housing comes loose.
- 2. Remove the blown bulb.
- 3. Fit a new bulb. Check that the bulb lights.
- 4. Refit the lamp housing.

Vanity mirror lighting

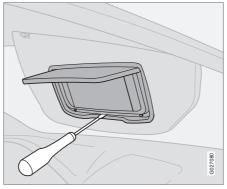

- Insert a slotted screwdriver at the side of the centre clip in the bottom edge of the mirror. Lift up so the centre clip releases.
- 2. Slide the screwdriver from side to side so that the outer clips release.
- 3. Lift out the mirror insert.
- 4. Replace the bulbs.
- 5. Refit the insert top edge first. Be sure that the upper clips are properly depressed before pressing the insert back.




09



General

Fuses

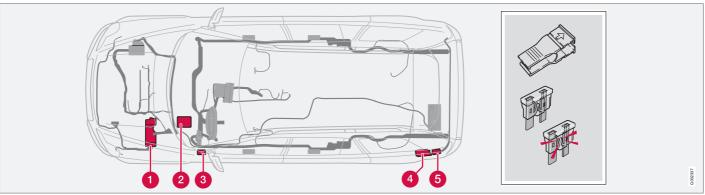

Cable routing may vary slightly due to engine variant. However, the components listed are in the same positions.

All electrical functions and components are protected with a number of fuses to protect your car's electrical system from damage by short-circuits or overloads.

The fuses are in five different locations in the car:

- Relay/fuse box in the engine compartment.
- 2 Fuse box in the passenger compartment within the sound barrier on the driver's side.
- Fuse box in the passenger compartment at dashboard end on driver's side.

- 4 Fuse box in cargo area.
- 5 Fuse box in cargo area Executive*

If an electrical component or function does not work, this may be because the component's fuse was temporarily overloaded and blew.

- 1. Look in the fuse diagram to locate the fuse.
- 2. Pull out the fuse and check from the side to see whether the curved wire has blown.
- 3. If this is the case, replace it with a new fuse of the same colour and amperage.

🚹 WARNING

Never use a foreign object, or a fuse with an amperage higher than that specified when replacing a fuse. This could cause significant damage to the electrical system and possibly lead to fire.

There are a number of spare fuses in the cover on the end face of the instrument panel. There are also pliers which facilitate the removal and fitting of fuses.

If the same fuse fails repeatedly then there is a fault in the component. In which case, Volvo

09 Maintenance and service



09


Fuses

recommends that you visit an authorised Volvo workshop for this to be checked.



Fuses

Relay/fuse box in the engine compartment

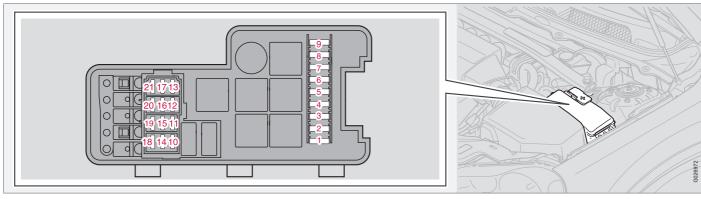

1.	ABS	30 A
2.	ABS	30 A
3.	High-pressure washer, headlamps	35 A
4.	Parking heater*	25 A
5.	Auxiliary lamps*	20 A
6.	Starter motor relay	35 A
7.	Windscreen wipers	25 A
8.	Fuel pump	15 A

9.	Transmission control module (TCM)	15 A
10.	Ignition coils (petrol), engine control module (ECM), injection valves, (diesel)	20 A
11.	Accelerator pedal sensor (APM), AC compressor	10 A

12.	Engine control module (ECM) (petrol), injec- tion valves (petrol), mass air flow sensor (petrol)	15 A
	mass air flow sensor (diesel)	5 A

09 Maintenance and service



09

Fuses


Electronic throttle module (V8), VIS (6- cyl. petrol)	10 A
Electronic throttle module (ETM), sole- noid valve, SWIRL (air mixing valve), fuel pressure regulator (diesel)	15 A
Lambda-sond (petrol)	20 A
Lambda-sond (diesel)	10 A
Crankcase ventilation heater (petrol), AC connection (petrol), solenoid valves, leak- age diagnosis (petrol), ECM, (petrol), mass air flow sensor (V8), glow heating control (diesel)	15 A
Dipped beam, left	20 A
Dipped beam, right	20 A
-	-
Engine control module (ECM) supply, engine relay	5 A
	module (V8), VIS (6- cyl. petrol) Electronic throttle module (ETM), sole- noid valve, SWIRL (air pressure regulator (diesel) Lambda-sond (petrol) Lambda-sond (diesel) Crankcase ventilation heater (petrol), AC connection (petrol), solenoid valves, leak- age diagnosis (petrol), Solenoid valves, leak- solenoid valve

20.	Position lamps	15 A
21.	Vacuum pump (petrol)	20 A



Fuses

Relay/fuse box in the passenger compartment at dashboard end on driver's side

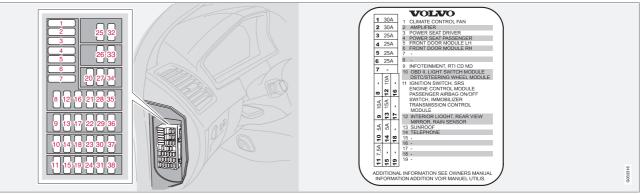

A decal which specifies the positions and amperages of the fuses is located in the end box cover.

1.	Climate control sys- tem fan	30 A
2.	Audio (amplifier)*	30 A
3.	Power driver's seat*	25 A
4.	Power passenger seat*	25 A
5.	Control module, left front door	25 A
6.	Control module, right front door	25 A

7.	-	-
8.	Radio, CD player, RSE system*	15 A
9.	RTI display, RTI unit MMM	10 A
10.	OBDII, light switch (LSM), Steering Angle Sensor (SAS), Steer- ing Wheel Module (SWM)	5 A

11.	Ignition switch, SRS- system, engine con- trol module ECM (pet- rol) SRS deactivation passenger side (PACOS), electronic immobiliser (IMMO), Transmission control module (TCM)	7.5 A
12.	General lighting, ceil- ing (RCM) Upper elec- tronic module (UEM)	10 A

09 Maintenance and service




	Fuses
--	-------

13.	Sunroof*	15 A
14.	Telephone*, Blue- tooth*	5 A
	15-38	-



Fuses

Relay/fuse box in the passenger compartment within the sound barrier on the driver's side

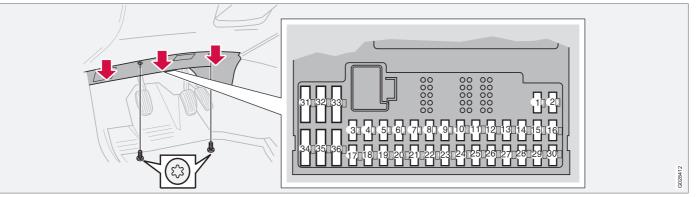

1.	Seat heating, right side	15 A
2.	Seat heating, left side	15 A
3.	Horn	15 A
4.	Reserve	-
5.	Infotainment system	10 A
6.	-	-
7.	-	-
8.	Siren*	5 A

9.	Brake lamp switch feed	5 A
10.	Combined instrument panel (DIM), climate control (CCM), parking heater, power driver's seat	10 A
11.	Front seat, rear seat and refrigerator socket*	15 A
12.	-	-
13.	-	-
14.	-	-

15.	ABS, STC/DSTC	5 A
16.	Electronic power steer- ing (ECPS)*, Active Xenon (HCM)*, head- lamp levelling*	10 A
17.	Fog lamp, front left	7.5 A
18.	Fog lamp, front right	7.5 A
19.	-	-
20.	Coolant pump (V8)	5 A

09 Maintenance and service



09


Fuses

21.	Transmission control module (TCM)	10 A
22.	Main beam, left	10 A
23.	Main beam, right	10 A
24.	-	-
25.	-	-
26.	-	-
27.	-	-
28.	Power passenger seat*, Rear Seat Enter- tainment (RSE) *	5 A
29.	Fuel pump	7.5 A
30.	BLIS*	5 A
31.	-	-
32.	-	-
33.	Vacuum pump (petrol)	20 A
34.	Washer pump	15 A
35.	-	-
36.	-	-



Fuses

Fuses in the cargo area

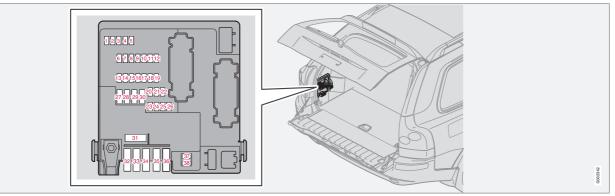

1.	Reversing lamp	10 A
2.	Position lamps, fog lamps, cargo area light- ing, number plate light- ing, lamps in brake lighting	20 A
3.	Accessories (AEM)*	15 A
4.	Reserve	-
5.	REM electronics	10 A
6.	RSE system*	7.5 A

7.	Towing bracket wiring* (30-feed)	15 A
8.	Cargo area socket	15 A
9.	Rear right door: Power window, power window lock	20 A
10.	Rear left door: Power window, power window lock	20 A
11.	-	-
12.	-	-

13.	Diesel filter heater	15 A
14.	Subwoofer, rear air conditioning (A/C) *	15 A
15.	-	-
16.	-	-
17.	Infotainment system accessories*	5 A
18.	-	-
19.	Rear wiper	15 A

09 Maintenance and service



09

Fuses


20.	Towing bracket wiring* (15-feed)	20 A
21.	-	-
22.	-	-
23.	AWD	7.5 A
24.	-	-
25.	-	-
26.	Park Assist*	5 A
27.	Main fuse: Towing bracket wiring, parking assistance, AWD	30 A
28.	Central locking system (PCL)	15 A
29.	Trailer lighting, left: Position lamps, direc- tion indicator*	25 A
30.	Trailer lighting, right: brake lamp, rear fog lamp, direction indica- tor*	25 A
31.	Main fuse: Fuse 37, 38	40 A
32.	-	-

33.	-	-
34.	-	-
35.	-	-
36.	-	-
37.	Heated rear window	20 A
38.	Heated rear window	20 A



Fuses

Fuses in the cargo area - Executive*

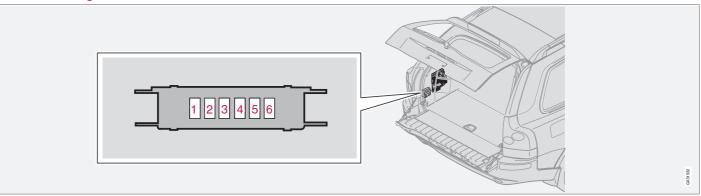

The fuse box is located behind the cover panel on the left-hand side.


1.	Relay, seat heating, rear seat, Relay, mas- sage seat, front	5 A
2.	Seat heating, rear seat, left	15 A
3.	Seat heating, rear seat, right	15 A
4.	Ventilated seat front, Massage seat front	10 A

5.	-	-
6.	-	-

09 Maintenance and service



General	232
Control panels, audio	233
Audio system functions	236
Radio functions	240
CD functions	246
Menu structure - audio system	248
Phone functions*	
Menu structure - phone	
Bluetooth handsfree*	259
RSE - Rear Seat Entertainment system - Dual Screen*	265

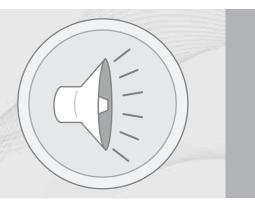



INFOTAINMENT SYSTEM





10 Infotainment system

General

Infotainment system

Infotainment is a system that integrates the audio system and phone functions.

You can easily and conveniently use your Infotainment system by means of the joint control panel or the steering wheel keypad.

XC90 can be equipped with Dolby Surround Pro Logic II¹. This offers an optimal sound experience very close to being there with a broad, natural sound profile.

The system also allows your passengers to use headphones* with separate audio sources.

Dolby Surround Pro Logic II¹

Dolby Surround Pro Logic II distributes the two stereo audio channels to left, centre, right and rear speakers. This provides a more realistic sound quality than that provided by standard two-channel stereo.



Dolby Surround Pro Logic II and the Dolby icon are trademarks of Dolby Laboratories Licensing Corporation. Dolby Surround Pro Logic II System


is manufactured under license from Dolby Laboratories Licensing Corporation.

¹ Applies to Premium Sound.



Control panels, audio

Audio controls

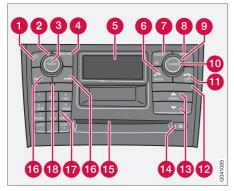

- CD shortcuts
- 2 VOLUME Volume (knob control)
- 3 POWER Audio On/Off
- AM/FM-shortcut between FM1, FM2 and AM
- 6 Display
- 6 ENTER select in the menu, activate a selection or access the folder structure and start playback of audio files if there is a disc containing audio files in the CD player. For more information, see page 246.
- **PHONE** Phone On/Off/Standby

- 8 MY KEY programmable shortcut key for your favourite function
- SELECTOR select audio source (rotary control)
- SOUND audio settings
- EXIT/CLEAR scroll back in the menu, cancel a selection, put the phone in standby mode, or erase the previous character when entering text and numbers
- SIM card holder
- 18 MENU menu selection buttons
- 14 CD and CD changer eject*


- 15 CD player and CD changer*
- Seek/change tracks/stations or scroll forward and back when entering text and digits
- Station setting buttons/selecting CD changer position* (1-6), number and character buttons for the phone and menu shortcuts
- IR* receiver for remote controls



Control panels, audio


Steering wheel keypad

10

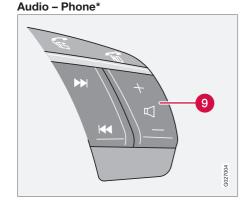

The four buttons at the bottom of the steering wheel keypad control both the radio and the phone. The function of the respective button depends on which system is active. The steering wheel keypad can be used to adjust volume, switch between preset stations and change CD tracks. The two upper buttons in the keypad (**Yes** and **No**) are used to answer and end phone calls respectively.

Menus

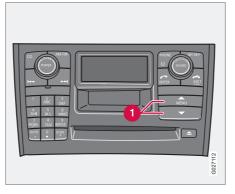

Some infotainment system functions are controlled via a menu system. The current menu level is shown at the top right of the display. Menu options are shown in the middle of the display.

- MENU leads to the menu system. Up/ down with the buttons 1 scrolls between menu options.
- **ENTER** selects or activates/deactivates a menu option.
- **EXIT** leads back one step in the menu structure. A long press on **EXIT** will exit the menu system.

Shortcuts

Menu options are numbered and can also be selected directly with the keypad **1-6**.

My own shortcut button – MY KEY

Use **MY KEY** to store a favourite function in the menu, e.g. **TP**.

 Select the function in the menu to be stored by holding **MY KEY** depressed for more than two seconds.

When **My Key stored.** is shown in the display, the function has been stored.

 Activate the function with a short press on MY KEY.

Functions that can be stored with MY KEY Random

Disc text

TP

News

Radio text

PTY scan

AF


Regional

Surround



Control panels, audio

Control panel with headphones socket*

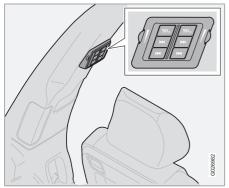

Limitations

The audio source (FM, AM, CD etc.) played back in the speakers cannot be controlled from the rear control panel.

RDS messages may not appear if the radio is playing back in the headphones while another audio source is playing back in the speakers.

Headphones with an impedance of 16 - 32 ohm and sensitivity of 102 dB or higher are recommended for best sound reproduction.

Activating/deactivating

The control panel is activated with **SEL** when the audio system is active. Deactivation is automatic when the audio system is deactivated or with a long press on **SEL**.


Scroll/search forward and backward

Short presses on 🛄 / 🔜 are used to scroll between CD tracks or preset radio stations. Long presses are used to fast-wind CD tracks or to search for radio stations automatically.



Audio system functions

On/Off switch – Audio

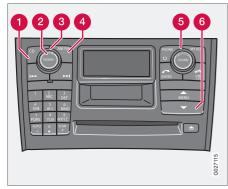

Press the **POWER** button **2** to switch the audio system on or off.

If the audio system is active when the ignition is switched off, it will reactivate automatically when the car is restarted.

Volume control

Turn the knob (Clockwise or anticlockwise to raise or lower the volume respectively. The volume control is electronic and has no end position. Volume can also be raised (+) or lowered (-) using the steering wheel keypad.

Selecting the audio source

Press the **AM/FM** (4) button repeatedly to toggle between FM1, FM2 and AM. The **CD** button (1) activates the CD player/changer.

Turn **SELECTOR** (5) to toggle between the external audio sources - **AUX** and **USB***, and the internal audio sources - **FM1**, **FM2**, **AM**, CD and CD changer*.

External audio sources

AUX

The $\ensuremath{\text{AUX}}$ AUX input can be used for connecting an iPod® or an MP3 player.

i NOTE

The audio quality may be impaired if the player is charged while the audio system is in AUX mode. In which case, avoid charging the player. Sometimes the external **AUX** audio source can be heard at a different volume to the internal audio sources. The audio quality may be impaired if the audio volume from the external audio source is too high or too low. Prevent this by adjusting the input volume of the external audio source:


- 1. Select AUX input volume in the menu and press ENTER.
- Control the volume with SELECTOR or up/ down with the buttons 6. Finish with ENTER.

) ΝΟΤΕ

Does not work for the steering wheel keypad.




Audio system functions

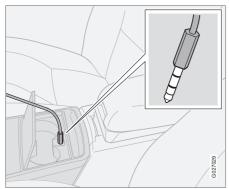

Input for external audio source (AUX) 3.5 mm.

IMPORTANT

The cover for the cup holders must be open when the connector is in the **AUX** input.

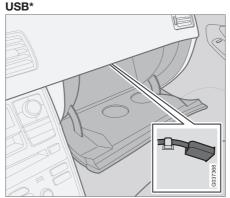

USB connection*.

If you choose to connect an iPod®, MP3 player or a USB memory stick to the USB connection* then you can control the media via the car's audio controls.

i) NOTE

Connect the media player/USB memory stick to the cable and the port, put in the parts, and close the glovebox.

- 1. Select USB using the **SELECTOR** button.
 - > Connect device appears on the display.

- Connect your iPod®, MP3 player or USB memory stick to the USB connection*, see preceding illustration.
 - > The text Loading appears on the display when the system loads the file structure on the storage media. This takes a while.

When the loading is finished the track information is shown on the display.

Now it is possible to fast-wind/change tracks using the buttons 🛛 🖃 :

- Short presses are used to scroll between tracks.
- Long presses are used to fast-wind tracks.

The steering wheel keypad can also be used for this purpose.

The system supports the playback of music files in the MP3, WMA and WAV file formats. However, there are variants of these file formats that are not supported by the system. The system also supports most iPod® models produced in 2005 or later. iPod® Shuffle is not supported.



Audio system functions

USB memory stick

To facilitate the use of a USB memory stick, avoid storing any files other than music files in the memory. It takes considerably longer for the system to load storage media that contains items other than compatible music files.

I NOTE

The system supports removable media which is compatible with USB 2.0 and the FAT32 file system, and can handle a maximum of 500 folders and 64 000 files. The memory must have a capacity of at least 256 Mb.

Optimum sound reproduction


The audio system is calibrated for optimum sound reproduction by means of digital signal processing.

This calibration takes into account loudspeakers, amplifiers, passenger compartment acoustics, listener position etc. for each combination of car model and audio system.

There is a also a dynamic calibration that takes into account the level set for the volume control, radio reception and vehicle speed.

The controls that are explained in these operating instructions, e.g. Bass, Treble and Equalizer, are only intended for the user to be able to adapt the sound reproduction according to personal taste.

Audio mode

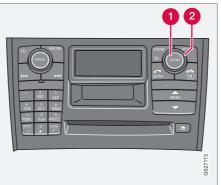

- 1. Press the SOUND button 1.
- Press the SOUND button repeatedly until you come to the function you wish to set. Choose between BASS, TREBLE, FADER, BALANCE, Subwoofer*, CENTRE* or SURROUND*.
- 3. Use the **SELECTOR** knob **2** to adjust the level. The display shows a scale from min. to max. position. The middle indicates the normal position.

ΝΟΤΕ

The level for the centre speaker can only be set if Dolby Pro Logic II (DPL II) or three channel stereo (3-CH) is selected in the menu. The level for the Subwoofer can only be set if **Subwoofer** is activated

Programme type	Display shows
Bass	BASS
Treble	TREBLE
Balance between the left and right-hand speakers	BALANCE
Balance between the front and rear speakers	FADER
Bass speaker level	Subwoofer *
Level for centre speaker	CENTRE *
Level for surround sound	SURROUND *

Audio system functions

Surround*

Surround settings govern the spatial perception of the sound. The settings, including activating and deactivating for each respective audio source, are made separately.

The **C** symbol in the display indicates that Dolby Pro Logic II is active. There are three different settings for surround sound:

- Pro Logic II
- 3 channels
- Off (two channel stereo)

Activating/deactivating surround sound

- 1. Press MENU, scroll to AUDIO MODE and press ENTER.
- 2. Select SURROUND and press ENTER.
- 3. Select Pro Logic II. 3 channels or Off and press ENTER.

Dolby Surround Pro Logic II is a trademark of Dolby Laboratories Licensing Corporation. Dolby Pro Logic II Surround System is manufactured under license from Dolby Laboratories Licensing Corporation.

Bass speaker - SUBWOOFER*

The bass speaker helps the system provide fuller sound and deeper bass.

- 1. Select AUDIO MODE in the menu and press ENTER.
- 2. Select Subwoofer and press ENTER, A check in the box indicates that Subwoofer is activated.

Equalizer front¹

This function is used to fine-tune the sound from the front speakers.

- 1. Select AUDIO MODE in the menu and press ENTER.
- Select Equalizer front and press ENTER.
- 3. Use the menu selection buttons or the SELECTOR knob to set the level.
- 4. Press ENTER to select the next frequency. You can select five frequencies.
- 5. Press ENTER until you come to menu mode to save any changes.

Equalizer rear¹

This function is used to fine-tune the sound from the rear speakers.


- 1. Select AUDIO MODE in the menu and press ENTER.
- 2. Select Equalizer rear and press ENTER.
- Use the menu selection buttons or the 3. SELECTOR knob to set the level.
- Press ENTER to select the next frequency. You can select five frequencies.
- 5. Press ENTER until you come to menu mode to save any changes.

¹ Certain audio systems.



Radio functions

Tuning

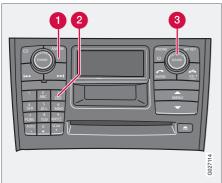

- Select radio mode AM/FM1/FM2 using the SELECTOR knob (3) or the AM/FM button (1).
- 2. A short press on the 🔤 or 证 button is used to search for the next strong station.
- 3. Press one of the buttons again to search again.

Manually seek known frequency

- Hold the or button depressed. MAN is shown in the display. The radio slowly scrolls in the desired direction, increasing its tempo after a few seconds.
- 2. Release the button when the desired frequency shows in the display.
- 3. Frequency can be adjusted with a short press on one of the arrow keys, or

Manual adjustment mode stays in effect five seconds after the last press.


Storing stations

To store a selected station under one of the station setting buttons $\mathbf{0} - \mathbf{9}$ (2):

- 1. Set the desired station.
- Press and hold the required station storage button. The sound mutes a few seconds. Channel stored is shown in the display. The station is now stored.

You can store up to 10 stations each for AM, FM1 and FM2, i.e. a total of 30 stations.

AUTOSTORE – autostoring stations

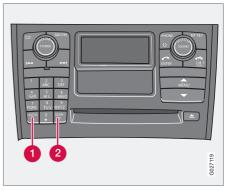

AUTO (1) seeks out the ten strongest radio stations and stores them automatically in a separate memory. The function is especially useful in areas where the radio stations and their frequencies are unfamiliar.

Start autostoring

- 1. Select wavelength using AM/FM.
- Hold AUTO (1) depressed until Autostoring appears on the display.

Once **Autostoring** disappears from the display, the stations are stored. The radio continues in Auto mode and **AUTO** appears on the display. The automatically stored stations can now be selected using the **0** - **9** buttons. If there

is no station with an adequately strong signal then the display shows **No station found**.

Cancelling automatic storage of stations

Press EXIT.

Selecting an autostored preset

Allowing the radio to remain in Auto mode provides access to the autostored presets.

- 1. Briefly press **AUTO** (1). **AUTO** appears in the display.
- 2. Press one of the 0 9 buttons.
- The radio remains in Auto mode until it is exited by a brief press on AUTO (1), EXIT or AM/FM.

Scanning

SCAN (2) automatically searches through a wavelength for strong stations. When a station is found, it is played for approx. 8 seconds before scanning is resumed.

Activating/deactivating Scan

- 1. Select wavelength using AM/FM.
- 2. Press **SCAN** (2) to activate. **SCAN** appears in the display.
- 3. Close using SCAN or EXIT.

Storing a station

A selected station can be stored as a preset while **SCAN** is active.

 Press one of the 0 - 9 buttons and hold it depressed until the message Station stored appears on the display.

SCAN is interrupted and the stored station can be selected as a preset.

RDS functions

RDS (Radio Data System) links FM transmitters into a network. An FM transmitter in such a network sends information that gives an RDS radio the following functions:

- Automatically switches to a stronger transmitter if reception in the area is poor.
- Searches for programme form, such as traffic information or news.
- Receives text information on the current radio programme.

i) NOTE

Some radio stations do not use RDS or only a selected range of its functions.

Volume control – NEWS/TP/ALARM

NOTE

If a CD for example is playing when the radio receives a traffic bulletin, the CD player is put in pause mode. The message is played at the volume selected for that type of message. Playback of the originally selected audio source is then resumed at the previous volume. If volume is adjusted while the bulletin is played, the new volume is saved and used for the next bulletin.

News – NEWS

This function interrupts other sound sources, e.g. CD, when a news broadcast starts.

- 1. Select radio mode using the **SELECTOR** knob or the **AM/FM** button.
- 2. Select News in the menu and press ENTER.
- 3. News appears on the display.
- 4. Select **News** again and press **ENTER** to deactivate the **News** function.

With this function, programmes from RDS stations that are news-coded will interrupt other audio sources using the volume setting for this specific purpose. As soon as the news broadcast is finished, the audio system returns to the



10

ous volume setting. If you do not wish to listen to a news item in progress;

previous audio source and resumes the previ-

 Press the EXIT button. The NEWS function remains active and the radio waits for the next news programme.

Traffic information – TP

This function interrupts other audio sources in order to broadcast traffic information from RDS stations. The message is heard at the volume set for this specific purpose. As soon as the message ends, the radio returns to the previous audio source and volume setting.

- 1. Select **TP** in the menu and press **ENTER**.
- 2. TP appears on the display.
- 3. Select **TP** again and press **ENTER** to deactivate the **TP** function.

TP is shown in the display when this function is active. If the set station can send traffic information then TPII appears on the display. Traffic information will only interrupt the sound source if TPII is shown in the display.

If you do not wish to listen to a traffic bulletin in progress;

 Press the EXIT button. The TP function remains active and the radio waits for the next traffic bulletin.

TP Search

This function allows you to listen to traffic information when travelling between different countries and states in Europe without needing to select a station.

- 1. Select **RADIO SETTINGS** in the menu and press **ENTER**.
- 2. Select TP and press ENTER.
- 3. Select TP search and press ENTER.

To deactivate the function, select **TP search** again and press **ENTER**.

Radio text

Some RDS stations transmit information on programme content, artists, etc. This information can be indicated with text in the display.

- 1. Press the **MENU** button.
- 2. Select Radio text in the menu and press ENTER.
- 3. Select Radio text again and press ENTER to deactivate.

Alarm

Alarms are transmitted automatically and the function cannot be deactivated. **Alarm!** is shown in the radio display when an alarm mes-

sage is broadcast. This function is used to warn motorists of major accidents and catastrophes, such as a bridge collapse or an accident at a nuclear plant.

Programme types – PTY

The PTY function can be used to select different programme types, such as pop or classical music. Use the PTY function to select from among the different programme types shown in the list below.

Display of programme type

- 1. Select **RADIO SETTINGS** in the menu and press **ENTER**.
- 2. Select **PTY** in the menu and press **ENTER**.
- 3. Select Show PTY and press ENTER.

The PTY of the selected station is now shown in the display.

ΝΟΤΕ

Not all radio stations have a PTY designation.

Programme types

Current affairs

Religion

Varied speech

Country music

Documentary

Finance

Folk music

Leisure & hobby

Children's progs

Oldies music

Information

Jazz music

Serious classic

Culture

Light classic

Easy listening

National music

Programme types

Pop music

Travel

Rock music

Social affairs

Sport

Drama

Phone in

Education

Science

Weather & Metro

Other music

Searching for a specific programme type

This function helps you find programmes with a specific focus by searching the entire frequency band.

- 1. Select **FM 1** or **FM 2** and press the **MENU** button.
- 2. Select RADIO SETTINGS and press ENTER.

- 3. Select PTY and press ENTER.
- 4. Select Select PTY and press ENTER.
- 5. Press **ENTER** for one or more of the listed programme types you select. The PTY symbol in the display illuminates when the first selection is made and the radio continues in standby for PTY.
- 6. Once you have selected all desired types, select **EXIT/CLEAR** to exit the PTY list.
- Select PTY scan and press ENTER. If the radio finds a station with the selected programme type, it is played through the speakers.
- If the radio finds a station that is unsuitable, continue the search with the I / I buttons.
- If no stations with the selected programme type are found, the radio resumes its previous frequency. PTY then remains in standby mode until the selected programme type is broadcast, at which time the radio automatically switches to the station sending the selected programme type.

In order to deactivate **PTY standby**, enter the menu and select **Clear all PTY**. The symbol **PTY** disappears from the display and the radio resumes normal mode.



Traffic information – TP STATION

Here, you set from which station traffic information is to be heeded.

Note that TPI must be shown in the display for this to work.

Activating/deactivating TP STATION

Listen to the station from which traffic information is to be heeded.

- Select RADIO SETTINGS in the menu and press ENTER.
- 2. Select TP and press ENTER.
- 3. Select TP-STATION and press ENTER.
- 4. Select Set current to activate or RESET to deactivate and press ENTER.

i note

Now only traffic information from the stored station will by played.

News – NEWS STATION

Here, you set from which station news is to be heeded.

Note that the set station in question must be an RDS station for this to work.

Activating/deactivating NEWS STATION

Listen to the station from which news is to be heeded.

- 1. Select **RADIO SETTINGS** in the menu and press **ENTER**.
- 2. Select NEWS STATION and press ENTER.
- 3. Select TP STATION and press ENTER.
- Select Set current to activate or RESET to deactivate and press ENTER.

i) note

Now only news from the stored station will by played.

Automatic frequency update – AF

The AF function selects one of the strongest transmitters for a set station. The radio may sometimes need to search through the entire FM wavelength to find a strong transmitter. If this occurs, the radio mutes and **PI Seek Press EXIT to cancel** appears in the display.

Activating/deactivating AF

- 1. Select RADIO SETTINGS in the menu and press ENTER.
- 2. Select **AF** and press **ENTER**.

To reactivate AF, select **AF** and press **ENTER**.

Regional radio programmes – REG

This function causes the radio to continue with a regional transmitter even if its signal strength is low.

- 1. Select **RADIO SETTINGS** in the menu and press **ENTER**.
- 2. Select Regional and press ENTER.
- 3. **REG** appears on the display.
- 4. To deactivate the **REG**, select **REG** again and press **ENTER**.



Radio functions

Enhanced Other Networks – EON

The EON function is especially useful in urban areas with many regional radio stations. It allows the distance between the car and the radio station transmitter to determine when programme functions should interrupt the current audio source.

- Local interrupts only if the radio station transmitter is close.
- **Distant**¹ interrupts if the station transmitter is far away, even if there is a lot of static.
- Off no interruption for programmes from other transmitters.

Activating/deactivating EON

- Select RADIO SETTINGS in the menu and press ENTER.
- 2. Select EON and press ENTER.
- 3. Select Local, Distant or Off and press ENTER.

Resetting RDS functions

Resets all radio settings to the original factory settings.


- Select RADIO SETTINGS in the menu and press ENTER.
- 2. Select Reset all and press ENTER.
- 3. Press ENTER again to confirm.

¹ Default/factory settings.



10 Infotainment system

CD functions

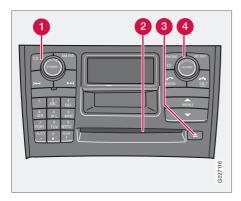

Starting playback (CD player)

If a music CD is in the player when the audio system is in CD mode then playback is started automatically. Otherwise, load a disc and change to CD mode using SELECTOR (4) or **CD**(1).

Starting playback (CD changer)

If a CD position with a music CD is already selected when the audio system is activated then playback starts automatically. Otherwise change to CD changer mode using SELECTOR (4) or CD (1) and select a disc with the number buttons 1 - 6.

Inserting a CD (CD changer)

Select an empty position with the number _ buttons 1 - 6 or Up/Down on the navigation button.

An empty position is marked on the display. The text Insert disc shows that a new disc can be inserted. The CD changer can hold up to six CDs.

Insert a CD into the CD changer slot (2).

CD eject

A CD will stay in the ejected position for max. 12 seconds. Following which it is re-inserted in the player and playback continues.

Single discs (CD player)

Eject individual discs by pressing the eject button (3).

All discs (CD changer)

Eject all discs with a long press on the eject button. The entire magazine is emptied disc by disc. The message MATA UT is shown in the display.

This function can only be activated if the car is stationary. Eject is interrupted if the car begins to move.

Pause

If the volume is turned down completely, the CD player is stopped. The player is restarted when volume is increased.

Audio files

Apart from normal music CDs, the CD player supports MP3 and WMA format audio files.

(i) NOTE

Certain types of copy-protected audio files cannot be read by the player.

When a CD containing audio files is inserted into the player the disc's directory structure is read in. It may take a while before playback starts due to the quality of the disc.

Navigation and playback

If a disc containing audio files is inside the CD player then ENTER leads to the disc's directory structure. The directory structure is navigated in the same way as the audio system's menu structure. Audio files have the symbol

and directories have the symbol

Before playback starts 🛛 🖃 🖉 can

be used to show the audio file's name if the display is too narrow. Start playback of the selected audio file with ENTER.

When the playback of a file is finished the playback of the other files in the same directory continues. Directory change takes place automatically when all files in the current directory have been played back.

CD functions

Fast-wind/change CD tracks and audio files

Short presses right/left on the 🔛 / 🖭 buttons are used to scroll between CD tracks/ audio files. Long presses are used to fast-wind CD tracks/audio files. The steering wheel keypad can also be used for this purpose.

Scan CD

This function plays the first ten seconds of each CD track/audio file. Press **SCAN** to activate. Interrupt with **EXIT** or **SCAN** to continue playback of the current CD track/audio file. Scan only works on the selected disc. The text **SCAN** is shown in the display when the function is active.

i note

If disc text is activated then **SCAN** is not shown in the display.

Random

This function plays the tracks in random order. The random CD tracks/audio files can be scrolled through in the normal way.

i note

It is only possible to scroll between random CD tracks on the current disc.

Activating/deactivating (CD player) If a normal music CD is being played:

 Select RANDOM in the menu and press ENTER.

If a disc with audio files is being played:

Select **Disc** or **Folder** in the menu and press **ENTER**.

Activating/deactivating (CD changer) If a normal music CD is being played:

- 1. Select Random in the menu and press ENTER.
- 2. Scroll to Single disc or All discs and press ENTER.

The option **All discs** only applies to the music CDs in the changer.

If a CD with audio files is being played:

- 1. Select **Single disc** or **Folder** in the menu and press **ENTER**.
- 2. Scroll to the required CD or folder and press **ENTER**.

When you select another CD the function is deactivated.

Different messages appear depending on which random function is active:

- **RANDOM** means that the tracks from only one music CD are played.
- RANDOM ALL means that all tracks on all music CDs in the CD changer are played.
- **RANDOM Folder** means that the audio files in a directory on the current CD are played.

ΝΟΤΕ

If disc text is activated then these messages are not displayed.

Disc text

If title information is stored on a CD then it can be shown in the display.

Activating/deactivating Start CD playback.

 Select **Disc text** in the menu and press ENTER.

CDs

Using CD discs burned at home could result in poor or non-existent sound.

Only use standard discs (12 cm in diameter). Do not use CDs with adhesive disc labels. The heat in the CD player may cause the label to come off, damaging the CD player.



Menu structure – audio system

FM-MENU

AM MENU

1.

- 1. News
- 2. TP
- 3. Radio text

4. RADIO SETTINGS

- 4.1. PTY
- 4.2. TP
- 4.3. NEWS STATION
- 4.4. AF
- 4.5. Regional
- 4.6. EON
- 4.7. Reset all

5. AUDIO SETTINGS*

- 5.1. Surround
- 5.2. Subwoofer
- 5.3. Equalizer front
- 5.4. Equalizer rear
- 5.5. Reset all

AUDIO SETTINGS*1

CD MENU

- 1. Random
- 2. News
- 3. TP
- 4. Disc text
- 5. AUDIO SETTINGS*1


AUX MENU

- 1. AUX input volume
- 2. News
- 3. TP
- 4. AUDIO SETTINGS*1

¹ See FM MENU.

Phone functions*

10

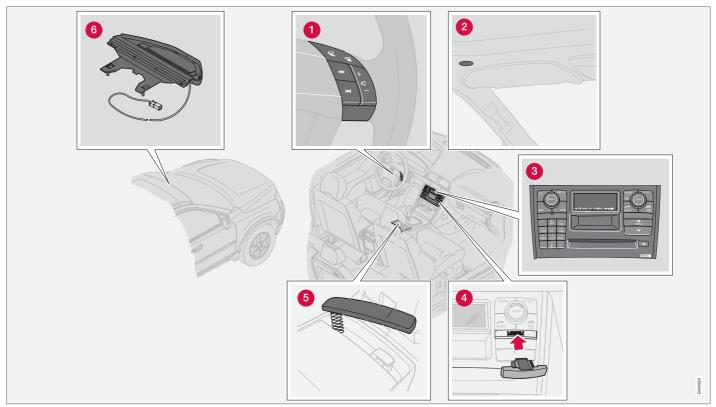

Phone system components



Phone functions*

Phone system components

- Steering wheel keypad* You can control the majority of phone functions using the steering wheel keypad. When the phone is active, the steering wheel keypad can only be used for phone functions. When in active mode, phone information is always shown in the control panel display.
- Microphone The microphone for handsfree is fitted in the roof by the sun visor.
- Centre console control panel All phone functions (except call volume) can be regulated via the control panel.
- 4 SIM card reader The SIM card is inserted into the front of the control panel.
- 6 Privacy handset* The privacy handset can be used when you do not wish to be disturbed.
- 6 Antenna The antenna is mounted against the windscreen, in front of the rearview mirror.

General


- Always put traffic safety first. ۲
- If the driver needs to use the privacy handset*, park the car in a safe place first.
- Switch off the phone system when refuel-• ling the car.
- Switch off the system near blasting work.
- Volvo recommends that an authorised Volvo workshop carries out phone system servicing.

Emergency calls

Emergency calls to alarm centres can be made without a SIM card as long as there is coverage by a GSM operator.

- Activate the phone. 1.
- 2. Ring the emergency number that applies to your region (within EU: 112).
- 3. Press ENTER in the control panel or in the steering wheel keypad.


Controls

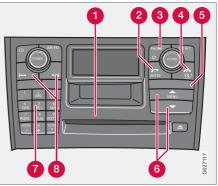

Display

- ENTER accept a call, make a menu selection or activate the phone from standby mode
- On/Off/Standby
- EXIT/CLEAR terminate/refuse a call, scroll back in the menu. cancel a selection or erase entered digits/characters
- 6 SIM card holder
- 6 Menu selection buttons

Phone functions*

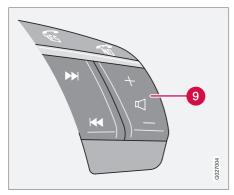

- Number/character buttons and menu shortcuts
- 8 Seek scroll forward or back when entering text and numbers
- Increase/decrease call volume during calls. The phone does not use the centre speaker*

On/Off/Standby switch

To activate the system:

Press the **PHONE** button (3) to activate the phone system.

To switch off the system:

 Hold the **PHONE** button depressed to switch off the phone system

Continuing with system in standby mode:

- 1. The phone will continue in standby mode with a brief press of the **PHONE** button or if you press **EXIT/CLEAR**.
- 2. Reactivate the system with the **PHONE** button.

When the phone is active or in standby mode, a handset is shown in the display.

If you switch off the car's ignition with the phone system on, it will be on the next time you switch on the ignition. No calls can be received when the phone system is switched off.

Volume reduction during phone call

If the phone rings when the radio is switched on, the volume is lowered when the call is answered. When the call is concluded, the volume returns to the previously set level. Radio volume can also be adjusted during a phone call, whereby the newly selected level will resume when the call is concluded. Audio system volume can also be switched off completely during a phone call, see page 258.

This function only applies to the Volvo integrated phone system.

Standby mode

In standby mode, you can receive calls while the audio system is active and information from audio system sources is shown in the display.

To use other functions of the phone system, the phone must be in active mode.

Menu shortcuts

Once you have used the menu button to enter the menu system, you can use numbers instead of the arrows and the **ENTER** button to select the right menu in the main menu level. Each menu selection is numbered. The numbers are shown in the display together with the menu alternative.

•

10




Phone functions*

Traffic safety

For reasons of safety, parts of the phone menu system cannot be accessed at speeds in excess of 8 km/h. You may only complete menu system activities that have already been started.

The speed limiter can be disconnected using menu function 5.6.

SIM card

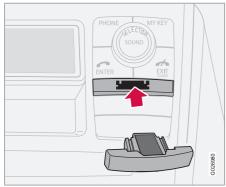

The phone can only be used with a valid SIM card Subscriber Identity Module. Your network operator supplies this card.

Always insert the SIM card when you wish to use the phone.

- 1. Switch off the phone.
- 2. Open the SIM card holder with a short press.
- 3. Insert the SIM card with the metallic surface down.
- 4. Make sure that the bevelled corner of the SIM card matches the bevel of the holder.
- 5. Press in the holder.

Contact your network operator if you experience difficulties with the SIM card.

Making and receiving calls

To call:

 Dial the number and press ENTER on the steering wheel or the control panel keypad (or lift the handset).

To receive an incoming call:

 Press ENTER or lift the handset. You can also use Automatic Answer, see page 258.

The car's audio system can be muted automatically while a phone call is in progress, see page 258.

Ending a call


 Press EXIT/CLEAR on the steering wheel or control panel keypad or hang up the handset.

The audio system resumes its previous activity.

Refuse an incoming call by pressing **EXIT/ CLEAR**.

Privacy handset*

If you wish to speak without disruptions, use the privacy handset. Lift the handset by pressing briefly on the top (A).

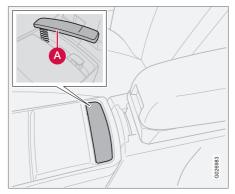

- Select the desired phone number using the centre console keypad and lift the handset

Phone functions*

to place the call. Adjust the volume with the dial on the side of the handset.

The call is ended when you replace the handset in its holder.

If you wish to switch to handsfree without ending the call:

- 1. Press on the steering wheel keypad (or control panel menu buttons) and select Handsfree.
- 2. Press **ENTER** and hang up the handset. If the handset is already removed from its cradle when a call is started, the ringing party will be audible in the handsfree system.
- 3. Press the **MENU** button, scroll to Handset and press **ENTER** in order to transfer to the handset.

Last dialled numbers

The phone automatically stores the last phone numbers/names called.

- 1. Press **ENTER** on the steering wheel or control panel keypad.
- Use the menu buttons to scroll forward or back through the last numbers dialled. They are shown in the display.
- 3. Press ENTER.

Speed dial

Storing speed dial numbers

A number stored in the phone book can be linked to a speed dial button (1 - 9).

Proceed as follows:

- 1. Select Phone book in the menu and press ENTER.
- 2. Scroll to **One-key dial** (see page 258) and press **ENTER**.
- 3. Select which number is to be the speed dial number. Press **ENTER** to confirm.
- 4. Search for the desired name or phone number in the phone book. Press **ENTER** to select.

Using speed dial

- 1. To make a call, press and hold the desired speed dial button for about two seconds or press the button briefly and then press **ENTER**.
- 2. Once you switch on the phone, wait a moment before using speed dial.

i) NOTE

If you wish to use a speed dial number then Menu 3.4 must be activated. See Speed dial under Description of menu options on page 257.

Call waiting

If you hear two beeps in your speaker during a phone call, someone else is calling. This function can be selected or deselected in the menu.

When this occurs, you may accept or decline the call. If you do not wish to take the call, press **EXIT/CLEAR** or do nothing.

If you do wish to take the call, press **ENTER**. Your current call will be put in "park mode". If you press **EXIT/CLEAR**, both calls will be terminated.

Functions during a call

The following functions are available during a call (scroll with the arrows and press **ENTER** to make a selection)

Secret mode/ Secret mode off	Secret mode
Hold/Resume	Choose if the call is to be parked or resumed
Handset/Hands- free	Using the handset or handsfree
Phone book	Show phone book

10



Phone functions*

The following functions are available when you have a current call and a parked call (scroll with the arrows and press **ENTER** to make a selection)

Secret mode/ Secret mode off	Secret mode
Handset/Hands- free	Using the handset or handsfree
Phone book	Show phone book
Join	Speak with both parties simultane- ously (conference call)
Swap	Switch between the two calls

Call volume

Increase or decrease call volume during calls by pressing the + or - buttons in the steering wheel keypad.

When the phone is activated, the steering wheel keypad only controls the phone functions.

The phone must be in standby mode in order to adjust the audio system with these buttons, see page 251.

Phone book

Phone numbers and names can be stored in either the phone memory or the SIM card memory.


If the number of the person calling is found in the phone book, his or her name is shown in the display.

The phone memory can store up to 255 names.

Storing phone numbers with names

- 1. Press the **MENU** button, select **Phone book** and press **ENTER**.
- 2. Scroll to New number and press ENTER.
- 3. Enter a name and press ENTER.
- 4. Enter a number and press ENTER.
- 5. Choose in which memory to save and press **ENTER**.

Dialling from the memory

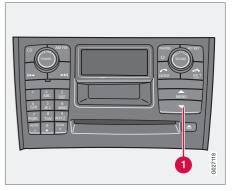

 Press the MENU button's down arrow (1) or in the steering wheel to search in the phone book.

Choose from the following alternatives:

- 1. Press **ENTER** and scroll with the arrows until you find the desired name.
- 2. Press the key for the first letter of the name (or enter the entire name) and press **ENTER**.
- 3. Press ENTER to call the selected number.



Phone functions*

Enter a name or message

Press the button with the desired character: once for the first character, twice for the second, etc. Press **1** to enter a space.


1	space 1-?!,.:"'()
2	a b c 2 ä å à æ ç
3	d e f 3 è é
4	ghi4ì
5	j k l 5
6	m n o 6 ñ ö ò Ø
7	pqrs7ß
8	tuv8üù
9	w x y z 9
*	Used if two characters are to be ended with the same button.
0	+0@*#&\$£/%

- # Switch between upper and lower case.EVIT Delete the last latter or number.
- **EXIT** Delete the last letter or number entered. If you press for a long time, the entire number and text is deleted.

Quitting text input

- 1. Clear all entered characters with a long press on the **EXIT/CLEAR** button.
- 2. Return to the menu with an additional long press on the **EXIT/CLEAR** button.

Double SIM cards

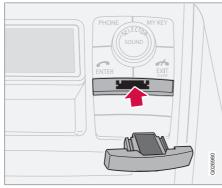

Many network operators offer double SIM cards - one for your car and one for another phone. A double SIM card allows you to have the same number for two different phones. Ask your network operator about the options available and the use of double SIM cards.

Specifications

Output	2 W
SIM card	small, 3 V
Memory entries	255 ^A
SMS	yes
Data/fax	no
Dualband	yes (900/1800)

^A The phone memory contains 255 positions. The number of SIM card memory positions varies depending on your subscription.

IMEI number

To block the phone, you must provide your network operator with the phone's IMEI number. This is a 15 digit serial number that is programmed into the phone. Dial ***#06#** to show this number in the display. Write it down and keep it in a safe place.

10



Menu structure - phone

Overview 1. Cal

Call register

- 1.1. Missed calls
- 1.2. Received calls
- 1.3. Dialled no.
- 1.4. Erase list
- 1.4.1 All calls1.4.2 Missed calls1.4.3 Received calls1.4.4 Dialled no.
- 1.5. Call duration
 - 1.5.1 Last call 1.5.2 Call count
 - 1.5.3 Total time
 - 1.5.4 Reset timer

2. Phone book

- 2.1. Search 2.2. New num
- 2.2. New number
- 2.3. Copy all
 - 2.3.1 SIM to phone 2.3.2 Phone to SIM

2.4. Speed dial 2.4.1 Active 2.4.2 Select numbers Erase SIM 2.5. 2.6. Erase phone 2.7. Memory status Messages 3.1. Read 3.2. Write 3.3. Message settings 3.3.1 SMSC number 3.3.2 Validity time 3.3.3 Message type **Call options** 4.1. Send my no. 4.2. Call waiting 4.3. Auto answer Automatic redial 4.4. 4.5 Voice mail number Call divert 4.6

3.

4.

4.6.1 All calls

- 4.6.2 When engag.
- 4.6.3 Not answered
- 4.6.4 Not reachable
- 4.6.5 Fax calls
- 4.6.6 Data calls
- 4.6.7 Cancel all

5. Change phone

- 5.1. Car phone
- 5.2. Add phone
- 5.3–7. Added phones¹

i NOTE

6.

The menu above only applies to cars with Bluetooth $^{\rm TM}$ handsfree.

Tel. settings			
	6.1.	Network	
		6.1.1	Auto
		6.1.2	Manual select
	6.2.	SIM see	curity
		6.2.1	On
		6.2.2	Off

¹ Max. 5 phones.

Menu structure – phone

6.2.3 Auto
6.3. Change PIN code
6.4. Audio
6.4.1 Ring volume
6.4.2 Ring signal
6.4.3 Mute radio
6.4.4 Msg. beep
6.5. Factory settings

Description of menu options

1. Call register

1.1. Missed calls

List of missed calls. You can choose to call, erase or store the number in the phone book.

1.2. Received calls

List of received calls. You can choose to call, erase or store the number in the phone book.

1.3. Dialled no.

List of dialled numbers. You can choose to call, erase or store the number in the phone book.

1.4. Erase list

Erase the lists found in the menus 1.1, 1.2 and 1.3 as below.

1.4.1. All

1.4.2. Missed

1.4.4. Dialled

1.5. Call duration Duration of all calls or of the most recent call. The phone code is required to reset the call timer (see menu 5.4).

1.5.1. Last call

1.5.2. Call count

1.5.3. Total time

1.5.4. Reset timer

2. Phone book

2.1. Search

Search for a name in the phone book.

2.2. New number Store names and phone numbers in the phone book, see page 253.

2.3. Copy all Copy phone numbers and names from the SIM

card to the phone memory.

2.3.1. From SIM to phone memory

2.3.2. From phone to SIM memory

2.4. Speed dial

A number stored in the phone book can be stored as a speed dial number.

2.5. Erase SIM Erase the entire SIM card memory.

2.6. Erase phone Erase the entire phone memory.

2.7. Memory status

Shows how many positions are occupied in the SIM card and phone memory. The table shows how many of the total number of positions are occupied, e.g. 100 (250).

3. Messages

3.1. Read

Received text messages. Select whether to erase, forward, change or save the entire message or parts of it.

3.2. Write

Write a message using the keypad. Choose whether to save or send it.

3.3. Message sett

Enter the number (SMSC number) of the message centre to which messages are to be transferred as well as how long they are to be saved at the message centre. Contact your network operator for information on message settings. Normally, these settings should not be altered.

3.3.1. SMSC number



Menu structure – phone

3.3.2. Validity time3.3.3. Message type

4. Call options

4.1. Send my no.

Displays or hides your phone number to/from the person you call. Contact your network operator regarding ex-directory numbers.

4.2. Call waiting

Be alerted during a phone call that there is another incoming call.

4.3. Automatic answer Automatically answers incoming calls.

4.4. Call back Calls a previously engaged number.

4.5. Voice mail number Stores voice mail number.

4.6. Diversions

Choose when and what type of calls are to be diverted to a specified phone number.

4.6.1. All calls

This setting only applies during the call in progress.

4.6.2. When engag.

4.6.3. Not answered

4.6.4. Not reachable

- 4.6.5. Fax calls
- 4.6.6. Data calls 4.6.7. Cancel all

5. Change phone

5.1. Car phone Select the built-in phone.

5.2. Add phone Add mobile phones to the list Added phones.

5.3-7. Added phones Select to connect to one of the added phones (up to 5 phones).

i note

The menu above only applies to cars with BluetoothTM handsfree.

6. Phone settings

6.1. Network

Choose a network automatically or manually. The selected network is shown in the display in the phone's basic mode.

6.1.1. Auto

6.1.2. Manual select

6.2. SIM security

Select if the PIN code should be on, off or if the phone should automatically give the PIN code.

6.2.1. On 6.2.2. Off 6.2.3. Auto

6.3. Change PIN code Change PIN code. Write down and save the code in a safe place.

6.4.1. Volume

Adjust the ring tone volume.

6.4.2. Ring signal

There are five different ring signals.


6.4.3. On/Off

Mute radio.

6.4.4. Msg. beep

6.5. Factory default Reset the system's factory settings.

General

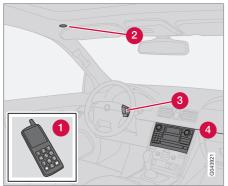


mobile phone can be operated by its own keys irrespective of whether or not it is connected.

I) NOTE

Only a selection of mobile phones are fully compatible with the handsfree function. Volvo recommends that you seek assistance from an authorised Volvo dealer or visit www.volvocars.com for information on compatible phones.

Phone functions, controls overview

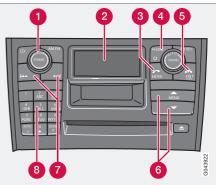

Centre console control panel.

- **VOLUME** volume, same functionality available in steering wheel keypad*.
- 2 Display
- 8 ENTER accept a call, make a menu selection or activate the phone from standby mode.
- **PHONE** on/off/standby.
- EXIT terminate/refuse a call, scroll back in the menu, cancel a selection or erase entered digits/characters.
- 6 MENU leads to the menu system. Up/ down with the buttons scrolls between menu options.

System overview.

- Mobile phone
- 2 Microphone
- 3 Steering wheel keypad*
- 4 Centre console control panel

Bluetooth ™

A mobile phone equipped with BluetoothTM can be connected wirelessly to the audio system. The audio system then works handsfree, with the option to control a range of the mobile phone's functions remotely. The microphone is fitted in the headlining by the sun visor (2). The

10



Bluetooth handsfree*

- Seek scroll forward or back when entering text and numbers.
- 8 Number/character buttons and menu shortcuts.

Remember

The menus are controlled from the centre console and the steering wheel keypad. For general information on menus, see page 234.

i note

If the car is equipped with both BluetoothTM handsfree and built-in phone then there is an additional menu in the phone menu, see page 263.

Activating/deactivating

A short press on **PHONE** activates the handsfree function. The text **PHONE** at the top of the display shows that it is in phone mode. The symbol shows that the handsfree function is active.

One long press on **PHONE** deactivates the handsfree function and disconnects a connected phone.

Connect mobile phone

A mobile phone is connected in different ways depending on whether or not it has been con-

nected previously. To connect a mobile phone for the first time, follow the instructions below:

Alternative 1 - via the car's menu system

- Make the mobile phone detectable/visible via BluetoothTM, see the mobile phone's manual or www.volvocars.com.
- 2. Activate the handsfree function with **PHONE**.
 - Menu option Add phone appears on the display. If one or more mobile phones have already been registered then these are also shown.
- 3. Select Add phone.
 - > The audio system searches for mobile phones in the vicinity. The search takes approximately 30 seconds. The mobile phones detected are specified with their respective BluetoothTM name in the display. The handsfree function's BluetoothTM name is shown in the mobile phone as **My Car**.
- 4. Choose one of the mobile phones in the audio system display.
- 5. Enter the number series shown in the audio system display via the mobile phone key-pad.

Alternative 2 - via the phone's menu system

- 1. Activate the handsfree function with **PHONE**. If there is a phone connected, disconnect the connected phone.
- 2. Search with the phone's Bluetooth[™], see the mobile phone's manual.
- 3. Select **My Car** in the list of units detected in your mobile phone.
- 4. Enter the PIN code '1234' into the mobile phone when prompted for the PIN code.
- 5. Select to connect to **My Car** from the mobile phone.

The mobile phone is registered and connected automatically to the audio system while the text **Synchronising** is shown in the display. For more information on how mobile phones are registered, see page 262.

When the connection is established the symbol is shown and the mobile phone's BluetoothTM name is shown in the display. Now the mobile phone can be controlled from the audio system.

To call

1. Make sure that the text **PHONE** is shown at the top of the display and that the symbol is visible.

2. Dial the number or use the phone book, see page 262.

3. Press ENTER.

The call is interrupted with EXIT.

Disconnecting the mobile phone

Automatic disconnection takes place if the mobile phone moves out of the audio system's range. For more information on connection, see page 262.

Manual disconnection takes place by deactivating the handsfree function with one long press on **PHONE**. The handsfree function is also deactivated when the engine is switched off.

When the mobile phone has been disconnected an ongoing call can continue with the mobile phone's built-in microphone and speaker.

I NOTE

Some mobile phones require that the changeover from handsfree is confirmed from the phone's keypad.

Making and receiving calls

Incoming call

Calls are accepted with **ENTER** even if the audio system is in CD or FM mode for example. Refuse or end with **EXIT**.

Automatic answer

The automatic answer function means that calls are accepted automatically. Activate/ deactivate under PHONE MENU \rightarrow CALL OPTIONS \rightarrow Automatic answer.

In call menu

Press **MENU** or **ENTER** during an ongoing call to access the following functions:

- Mute microphone audio system microphone is muted.
- Move call to mobile the call is transferred to the mobile phone.

I) NOTE

With certain mobile phones the connection is terminated when the privacy function is used. This is normal. The handsfree function asks if you want to reconnect.

• Phone book – searching in the phone book.

) ΝΟΤΕ

A new call cannot be started during an ongoing call.

Audio settings

Call volume

Call volume can be adjusted during calls. Use the steering wheel keypad*.

Audio system volume

In phone mode (PHONE) the audio system volume can be adjusted as usual with **VOLUME**.

The audio source can be automatically muted for incoming calls under PHONE MENU → PHONE SETTINGS → SOUNDS AND VOLUME → Mute radio.

Ring volume

Go to PHONE MENU \rightarrow PHONE SETTINGS \rightarrow SOUNDS AND VOLUME \rightarrow Ring volume and adjust with \blacktriangle / \bigtriangledown on the control panel in the centre console.

Ring signals

The handsfree function has integrated ring signals that can be selected under PHONE MENU → PHONE SETTINGS → 10



SOUNDS AND VOLUME → Ring signals → Ring signal 1 etc.

NOTE

The connected mobile phone's ring signal is not deactivated when one of the handsfree system's integrated signals is used.

In order to select the connected phone's ring signal¹, go to PHONE MENU → PHONE SETTINGS → SOUNDS AND VOLUME → RING SIGNALS → Use mobile phone signal.

More on registering and connecting

A maximum of five mobile phones can be reqistered. Registration is performed once per phone. After registration the mobile phone is in the list of added phones. Not more than one mobile phone can be connected at a time. Phones can be deregistered under PHONE MENU → BLUETOOTH → Remove phone.

Automatic connection

When the handsfree function is active and the last mobile phone connected is in range it is connected automatically. When the audio system searches for the last phone connected its name is shown in the display. To change over

to manual connection of another phone, press EXIT.

Manual connection

If you want to connect a mobile phone other than the last connected or change the connected mobile phone, proceed as follows:

Set the audio system in phone mode (PHONE) and follow the instructions on the display or change the connected mobile phone by using the menu system as described below.

The menu structure is available in two variants depending on whether the car only has Bluetooth[™] or if the car also has a built-in phone.

- For cars with only BluetoothTM the connec-• tion is made under PHONE MENU -> BLUETOOTH → Change phone → Add phone or select one of the previously connected phones.
- For cars with built-in phone and • BluetoothTM the connection is made under PHONE MENU → Change phone → Add phone or select one of the previously connected phones.

Phone book

All use of the phone book presupposes that the text **PHONE** is shown at the top of the display and that the symbol is visible.

The audio system stores a copy of the phone book from each registered mobile phone. The phone book is copied automatically to the audio system during each connection. Deactivate the function under PHONE SETTINGS -> Synch, phone book, Searching for contacts is only performed in the connected mobile phone's phone book.

NOTE

If the mobile phone does not support copying of the phone book then List is empty is shown when copying is finished.

If the phone book contains a ringing caller's contact information then this is shown in the display.

Searching for contacts

The easiest way to search in the phone book is with long presses on the keys **2–9**. This starts a search in the phone book based on the key's first letter.

¹⁰

¹ Not supported by all mobile phones.

The phone book can also be reached with the ▼ button on the control panel in the centre console or with on the steering wheel keypad. Scroll between contacts with the ▼ / ▲ buttons or with / . The search can also be carried out from the phone book's Search menu under PHONEBOOK → Search:

- 1. Enter the first few letters of the contact and press **ENTER**. Or simply press **ENTER**.
- 2. Scroll to a contact and press **ENTER** to call.

Voice recognition

The mobile phone's voice recognition function for dialling can be used by holding in **ENTER**.

i note

Only a selection of mobile phones are fully compatible with the voice recognition function. Volvo recommends that you contact an authorised Volvo dealer or visit www.volvocars.com for information on compatible phones.

Voice mail number

Voice mail number can be changed under CALL OPTIONS → Voice mail no.:. If there is no number stored then this menu can be reached with one long press on **1**. Press **1** for a long time to use the stored number.

Call lists

The call lists are copied to the handsfree function at each new connection and are then updated during the connection. Press **ENTER** to show the last dialled. Other call lists are available under **CALL REGISTER**.

i) NOTE

Certain mobile phones show a list of the last dialled calls in reverse order.

Inputting text

Input text using the keypad in the centre console. Press once for the key's first character, twice for the second etc. Continue pressing for more characters, see the table on page 255.

A short press on **EXIT** deletes an input character. One long press on **EXIT** clears all input characters. \blacktriangle / \bigtriangledown on the control panel in the centre console scrolls between the characters.

Menu structure - Bluetooth[™] handsfree

i NOTE

The menu for Bluetooth[™] handsfree is available in two variants. For cars with only Bluetooth[™] handsfree and for cars with built-in phone and Bluetooth[™] handsfree.

1. CALL REGISTER

- 1.1. Last 10 missed
- 1.2. Last 10 received
- 1.3. Last 10 dialled
- 2. PHONEBOOK
 - 2.1. Search
 - 2.2. Copy to phone
- 3. BLUETOOTH
 - 3.1. Change phone
 - 3.1.1. Add phone
 - 3.1.2–6.Added phones²
 - 3.2. Remove phone
 - 3.3. Connect fr. mobile phone
 - 3.4. Bluetooth info. for the car

10

••

² A maximum of 5 phones.



CALL OPTIONS

4.

- 4.1. Automatic answer
- 4.2. Voice mail no.:

5. PHONE SETTINGS

- 5.1. SOUNDS AND VOLUME
 - 5.1.1. Ring volume
 - 5.1.2. Ring signals
 - 5.1.3. Mute radio
- 5.2. Synch. phone book

Menu structure - Bluetooth[™] handsfree with built-in phone

- 1. CALL REGISTER
 - 1.1. Last 10 missed
 - 1.2. Last 10 received
 - 1.3. Last 10 dialled

2. PHONEBOOK

- 2.1. Search
- 2.2. Copy to phone

3. BLUETOOTH

3.1. Remove phone

- 3.2. Connect fr. mobile phone
- 3.3. Bluetooth info. for the car

4. CALL OPTIONS

- 4.1. Automatic answer
- 4.2. Voice mail no.:

5. Change phone

- 5.1. Carphone
- 5.2. Add phone
- 5.3–7. Added phones ²

6. PHONE SETTINGS

- 6.1. SOUNDS AND VOLUME
 - 6.1.1. Ring volume
 - 6.1.2. Ring signals
 - 6.1.3. Mute radio
- 6.2. Synch. phone book

² A maximum of 5 phones.



RSE - Rear Seat Entertainment system - Dual Screen*

General

The RSE system can be used at the same time as the car's infotainment system.

When the rear seat passengers are using DVD, RSE-AUX or watching TV^1 while listening with headphones, the driver and front seat passenger can still use the car's radio or CD player.

Power consumption, ignition positions

The system can be activated in ignition position I or II and while the engine is running. When the car is being started the film stops temporarily and continues when the engine has started.


When the system has been used once without the ignition in position I it is blocked. To restart, ignition position I must be activated.

i NOTE


In the event of extended use (more than 10 minutes) with the engine switched off - the capacity of the car's battery may decrease to such a low level that the engine cannot be started.

In which case a message will appear on the screen.

TV overview

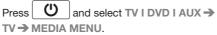



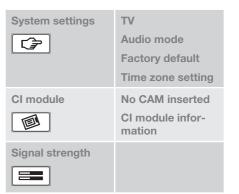

System settings TV

Press MEDIA MENU → System settings → TV.

Languages TV menu language	E.g. English
Pict. format	16:9 4:3 Auto

¹ TV is an option for the RSE system.



RSE - Rear Seat Entertainment system - Dual Screen*

Full screen Centered

-1	C
	ι

Mode (screen	Standard
mode)	Zoom
	Full scree

A 17 1

Audio mode	Left
Banner timeout	
displayed for between 8-40 seconds.	

System settings-Sound mode

Press MEDIA MENU → System settings → Audio mode.

The original speech for a TV programme can be replaced with speech in another language if the programme is broadcast with several audio tracks.

Audio	Audio - 1, e.g. ENG. Audio - 2, e.g. GER.
Audio mode	Right Left Stereo AC3

System settings-Factory settings

Press MEDIA MENU → System settings → Factory default.

The system's factory settings are restored here.


System settings-Time zone settings

Press MEDIA MENU → System settings → Time zone setting.

For local programme times to be displayed correctly the time zone must be set. The **GUIDE** and **INFO** button menus and the clock are affected by local time zones.

Pay channels

To watch pay channels a payment card must be fitted in an adapter which is inserted into the digital TV box.

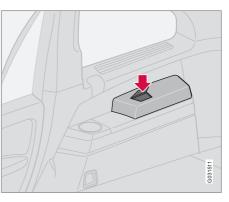

The digital TV box is located on the right-hand side of the cargo area

- 1. The box is protected by a cover. Open the small hatch above the cover.
- 2. Open the rubber cover on the box.
- 3. Fit the payment card into the adapter. Make sure that it is fitted correctly.
- 4. Insert the adapter in the digital TV box. Make sure that it is inserted correctly.
 - > The system will detect that it has received new information.
- Search to find the new channels that have become available, see the section "Payment card TV channels" below.



RSE - Rear Seat Entertainment system - Dual Screen*

C

Ρ

1

Payment card TV channels

Search so that the system identifies the payment card's channels.

- 1. Press MEDIA MENU on the remote control.
- 2. Select Channel search → Auto scan.
- 3. Select country and press OK



Formats supported by the digital TV box

The TV system supports MPEG-2 transmissions. There is the option to receive MPEG-4 transmissions if you buy an adapter. This adapter is inserted into the digital TV box and is fitted in the same way as the adapter for the payment card. See the section "Pay channels" above.

Music

Playing back a CD disc

- 1. Insert the CD with the label side turned from the buttons.
 - > The disc starts to play back automatically.
- 2. Switch on the wireless headphones, select CHA for left-hand screen or CHB for righthand screen.

- > The sound is directed to the headphones.
- 3. Adjust the audio volume in the headphones using the volume control/wheel on the headphones.

Alternatively - activate the car's audio sys-

tem in MODE-AUX and press the remote control to listen via the speakers.

Selecting within a disc directory

I oad the disc. 1.



- 3. Scroll using the navigation buttons to select a file.
- 4. Press **OK** to select the subdirectory.

Different playback options

The disc can be played back in different ways, scroll with the navigation buttons to select playback option.

When the dialogue box appears:

- 1. Press the right-hand navigation button to move over in the right-hand menu.
- 2. Scroll using the navigation buttons to select playback options.

Stop the disc with

3. Press

Discs copied privately can be used. However, playback and quality depend on the quality of the source file, format and disc guality.


AUX input, Electrical socket 12 V

The input allows you to connect other equipment. Always follow the instructions included with the external equipment, or from the manufacturer or reseller, when connecting. Equipment connected via the RSE AUX input can use the screens, wireless headphones, headphones sockets and the car's speakers.



RSE - Rear Seat Entertainment system - Dual Screen*

Connecting the RSE AUX input

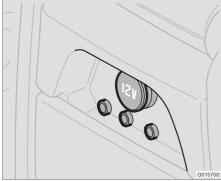

The RSE-AUX input is located in the centre console under the DVD player.

- 1. Connect the video cable to the yellow socket.
- 2. Connect the left-hand audio cable to the white socket and the right-hand one to the red socket.
- 3. Connect the power cable to the power socket if your equipment is designed for 12 V.

System

Formats supported by the system.

Audio format	CD-DA, DVD Audio Playback, MP3, WMA
Video format	DVD video, VCD, SVCD, DivX/ MPEG-4, WMA video, Photo CD Kodak, Photo CD JPG
Disc format	DVD-RAM, DVD-ROM, DVD-RW, DVD+RW, DVD-R, DVD+R, CD-R, CD-ROM, CD-RW, CD-3, HDCD

Advanced system settings

These settings can only be accessed when the DVD player is empty.


Press MEDIA MENU.

GENERAL SETUP	ANGLE MARK
	CAPTION
AUDIO SETUP	COMPRESSION
DVX(R) REGISTRATION	
PREFERENCES	TV TYPE
	AUDIO
	SUBTITLE
	DEFAULTS

Changing the battery in the remote control and wireless headphones

The remote control and headphones are powered by 2 AAA batteries.

Take along extra batteries for a long journey.

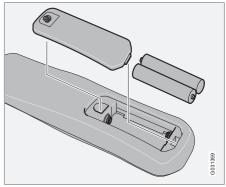


Remote control

- 1. Unscrew the screw and detach the battery cover.
- 2. Remove the used batteries, turn the new batteries in accordance with the symbols in the battery compartment and insert them.
- 3. Fit the cover and screw in the screw.



RSE - Rear Seat Entertainment system - Dual Screen*

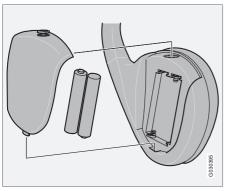

Environmental care

Be sure to dispose of the exhausted batteries in an environmentally safe manner.

Wireless headphones

- 1. Unscrew the screw and detach the battery cover.
- 2. Remove the used batteries, turn the new batteries in accordance with the symbols in the battery compartment and insert them.
- 3. Fit the cover and screw in the screw.

i note


If the system is too hot to be used or if battery voltage is too low then an information message appears on the screen.

Type designation	272
Dimensions and weights	274
Engine specifications	276
Engine oil	277
Fluids and lubricants	279
Fuel	281
Catalytic converter	283
Electrical system	
Type approval	
Symbols in the display	287




01 10 00 11

SPECIFICATIONS

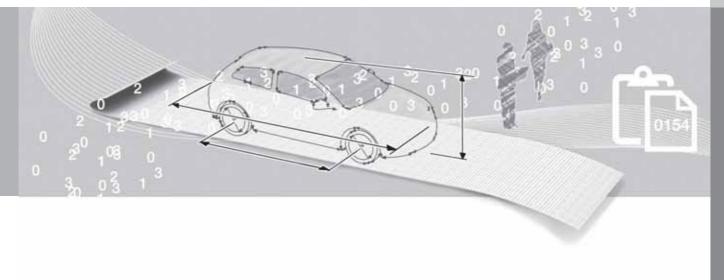



Type designation

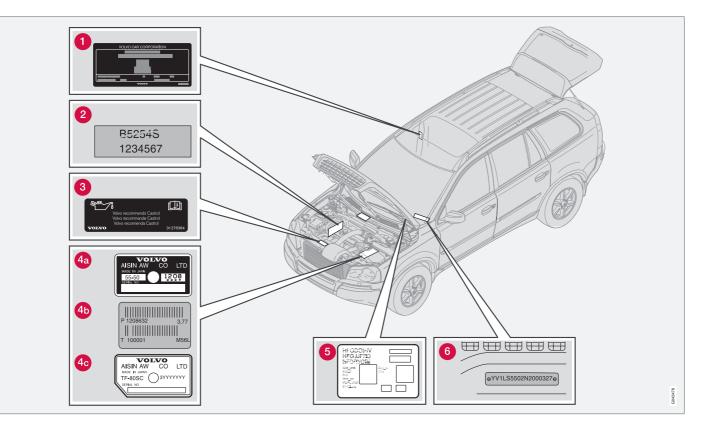

01 10 00 11

11

Type designation

Knowing the car's type designation, vehicle identification and engine numbers can facilitate all contact with an authorised Volvo dealer regarding the car and when ordering spare parts and accessories.

- Type designation, vehicle identification number, maximum permissible weights, codes for colour and upholstery and type approval number. The label is visible when the right rear door is opened.
- 2 Engine code, component and serial numbers.
- 3 Label for engine oil.
- Gearbox type designation and serial number:
 - A automatic gearbox AW
 - B manual gearbox
 - log automatic gearbox
- **5** Label for parking heater.
- 6 VIN number (type and model year designation plus chassis number).

Further information on the car is presented in the registration document.


NOTE


The labels shown in the owner's manual are not provided as exact reproductions of those in the car. The purpose is to show their approximate appearance and location in the car. The information that applies to your car in particular is available on the label in question in your car.



Dimensions and weights

Dimensions

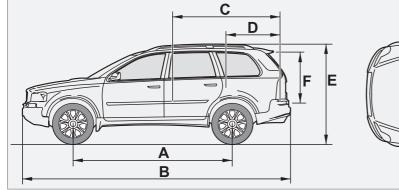

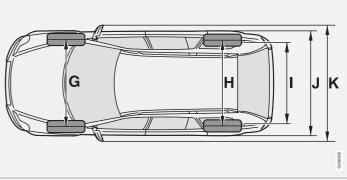

	Dimensions	mm
А	Wheelbase	2857
В	Length	4807
С	Load length, floor, folded seat	2018
D	Load length, floor	1118
Е	Height	1784
F	Load height, floor	872
G	Front track	1634

	Dimensions	mm
Н	Rear track	1624
I	Load width, floor	1064
J	Width	1898
K	Width including door mir- rors	2112

Weights

Kerb weight includes the driver, the fuel tank 90% full and all fluids.

The weight of passengers and accessories, and towball load (when a trailer is hitched, see table) influences the payload and is not included in the kerb weight.

Permitted maximum load = Gross vehicle weight - Kerb weight.

Dimensions and weights

i NOTE


The documented kerb weight applies to cars in the standard version - i.e. a car without extra equipment or accessories. This means that for every accessory added the loading capacity of the car is reduced correspondingly by the weight of the accessory.

Examples of accessories that reduce loading capacity are the Kinetic/Momentum/ Summum equipment levels, as well as other accessories such as Towbar, Load carriers, Space box, Audio system, Auxiliary lamps, GPS, Fuel-driven heater, Safety grille, Carpets, Cargo cover, Power seats, etc.

Weighing the car is a certain way of ascertaining the kerb weight of your own particular car.

\Lambda WARNING

The car's driving characteristics change depending on how heavily it is loaded and how the load is distributed.

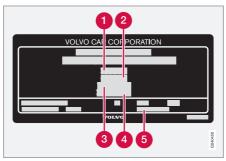

For decal location, see page 272.

- 1 Max. total weight
- 2 Max. train weight (car+trailer)
- 8 Max. front axle load
- 4 Max. rear axle load

6 Equipment level

Max. load: See registration document.

Maximum roof load: 100 kg

Towing capacities and towball load

Model	Max. weight braked trailer, kg	Max. towball load, kg
D3 FWD	1800	90
miscellaneous	2250	90

Max. weight unbraked trailer, kg	Max. towball load, kg
750	50

 $\begin{pmatrix} 01 & 10 \\ 00 & 11 \end{pmatrix}$



Engine specifications

Engine	Engine code ^A	Output (kW/ rpm)	Output (hp/rpm)	Torque (Nm/ rpm)	No. of cylinders	Bore (mm)	Stroke (mm)	Swept vol- ume (litres)	Compression ratio
2.5T	B5254T2	154/4980	210/5000	320/1500- 4500	5	83	93.2	2.52	9.0:1
3.2	B6324S5	175/6200	238/6200	320/3200	6	84	96	3,19	10.8:1
V8	B8444S	232/5850	315/5850	440/3900	8	94	79.5	4,41	10.4:1
D5	D5244T4	136/4000	185/4000	400/2000- 2760	5	81	93.2	2.40	17.3:1
D3 ^B	D5244T5	120/4000	163/4000	340/1750- 2750	5	81	93.2	2.40	17.3:1

A Engine code, component and serial number can be read on the engine, see page 272.
 B Certain markets

Engine oil

Adverse driving conditions

Check the oil level more frequently for long journeys:

- towing a caravan or trailer
- in mountainous regions
- at high speeds
- in temperatures colder than -30 °C or hotter than +40 °C.

This can produce abnormally high oil temperature or oil consumption.

Also check the oil level more often if the car is often driven short distances (less than 10 km) when temperatures are low (below +5 °C).

Choose a fully synthetic engine oil for adverse driving conditions. It provides extra protection for the engine.

Volvo recommends Castrol oil products.


IMPORTANT

In order to fulfil the requirements for the engine's service intervals all engines are filled with a specially adapted synthetic engine oil at the factory. The choice of oil has been made very carefully with regard to service life, starting characteristics, fuel consumption and environmental impact.

An approved engine oil must be used in order that the recommended service intervals can be applied. Only use a prescribed grade of oil for both filling and oil change, otherwise you will risk affecting service life, starting characteristics, fuel consumption and environmental impact.

Volvo Car Corporation disclaims all warranty liability if engine oil of the prescribed grade and viscosity is not used.

Viscosity chart

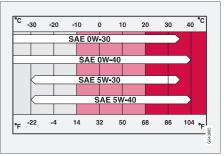

 $\begin{pmatrix} 01 & 10 \\ 00 & 11 \end{pmatrix}$



11 Specifications

Findine oli	
÷.	_

Oil decal

Engine var- iant	Engine code	Recommended oil grade	Filling volume between MIN- MAX (litres)	Volume, incl. oil filter (litres)
2.5T	B5254T2	Oil grade: ACEA A5/B5	1.2	5.5
		, , , , , , , , , , , , , , , , , , ,		
3.2	B6324S5	Viscosity: SAE 0W-30.	1.2	6.8
V8	B8444S		1.2	6.7
D5	D5244T4		1.0	5.9
D3 ^A	D5244T5		1.0	5.9

A Certain markets



Fluids and lubricants

Manual gearbox	Volume (litres)	Prescribed transmission fluid
M66	1.9	BOT 350M3
Automatic gearbox	Volume (litres)	Prescribed transmission fluid

Fluids

Fluid	System	Volume (litres)	Recommended oil grade
Coolant	2.5T	8.0	Coolant recommended by Volvo mixed
	3.2	9.7	with 50% water ^A , see the packaging. The thermostat starts opening at:
	V8	10.2	90 °C in petrol engines and at 82 °C in
	D3 and D5	12.5	diesel engines
Refrigerant	Air conditioning	В	R134a (HFC134a)
			Oil: PAG
Brake fluid	Brake system	0.6	DOT 4+
Power steering fluid	Power steering	1.0	WSS M2C204-A or equivalent product
	of which reservoir	0.2	with the same specification.
Washer fluid		6.5	Use a washer antifreeze recommended by Volvo, mixed with water for temper- atures below freezing.



Fluids and lubricants

Fluid	System	Volume (litres)	Recommended oil grade
Fuel	Petrol engine	approx. 80	Petrol: see page 134
	Diesel engine	approx. 68	Diesel: see page 134

A Water quality must fulfil the standard STD 1285.1.

B Refrigerant quantity varies depending on engine variant. Volvo recommends that you contact an authorised Volvo workshop for the correct information.

IMPORTANT

The recommended transmission fluid must be used to prevent damage to the gearbox. Do not mix with any other transmission fluid. If the transmission is topped up with a different fluid, contact a workshop nearby for servicing. Volvo recommends that you contact the nearest authorised Volvo workshop.

i NOTE

Under normal driving conditions the gearbox oil does not need changing during its service life. However, it may be necessary under adverse driving conditions, see page 277.

Fuel

 $\begin{pmatrix} 01 & 10 \\ 00 & 11 \end{pmatrix}$

11

CO₂ emissions and fuel consumption

		A		В		(C
			Ø		Ø		Ø
2.5T AWD	aut	381 (385) ^A	16,0 (16,2) ^A	220 (222) ^A	9,2 (9,3) ^A	280 (282) ^A	11.7 (11.8) ^A
3.2 AWD	aut	374 (377) ^A	16,1 (16,1) ^A	203 (208) ^A	8,7 (8,9) ^A	265 (269) ^A	11,4 (11,5) ^A
V8 AWD	aut	472 (476) ^A	19,8 (20,0) ^A	230 (234) ^A	9,6 (9,8) ^A	317 (322) ^A	13.3 (13.5) ^A
D3 FWD	aut	294 (294) ^A	11,1 (11,1) ^A	184 (184) ^A	7,0 (7,0) ^A	224 (224) ^A	8,5 (8,5) ^A
D5 AWD	man	280 (283) ^A	10,6 (10,7) ^A	180 (182) ^A	6,8 (6,9) ^A	217 (219) ^A	8.2 (8.3) ^A
D5 AWD	aut	294 (294) ^A	11,1 (11,1) ^A	184 (184) ^A	7,0 (7,0) ^A	224 (224) ^A	8,5 (8,5) ^A
D3 AWD ^B	man	280 (283) ^A	10,6 (10,7) ^A	180 (182) ^A	6,8 (6,9) ^A	217 (219) ^A	8.2 (8.3) ^A
D3 AWD ^B	aut	294 (294) ^A	11,1 (11,1) ^A	184 (184) ^A	7,0 (7,0) ^A	224 (224) ^A	8,5 (8,5) ^A

A The value in brackets applies to the variant seating seven.

B Certain markets

A = urban driving (l/100 km)

C = combined driving (I/100km)

B = driving on main roads (I/100 km)



Fuel

Fuel consumption and emissions of carbon dioxide

Fuel consumption and emission values in the table above are based on specific EU cycles¹, that apply to cars with kerb weight in the basic version and without extra equipment. The car's weight may increase depending on equipment. This, as well as how heavily the car is loaded, increases fuel consumption and carbon dioxide emissions.

There are several reasons for increased fuel consumption compared with the table's values. Examples of this are:

- The driver's driving style
- High speed results in increased wind resistance
- AC switched on (air conditioning)
- Roof load and ski box result in increased wind resistance
- Too low air pressure in the tyres
- Fuel quality, road and traffic conditions, weather and the condition of the car.

To bear in mind

Large deviations in fuel consumption may arise in a comparison with the EU driving cycles¹ which are used in the certification of the car and on which the consumption figures in the table are based. Below are examples of tips that the driver can use in order to reduce consumption:

- Drive gently.
- Drive in the highest gear possible, adapted to the traffic situation and the road you are driving on. Lower engine speeds result in lower fuel consumption.
- Use engine braking to slow down, when it can take place without risk to other road users.
- Avoid letting the engine idle for long periods. Pay attention to local traffic regulations. Switch off the engine if stationary for longer periods, when this can take place without endangering other road users.
- If the car is equipped with an electric engine block heater, always use it before starting from cold.
- Drive with the correct air pressure in the tyres and check this regularly. Select ECO

tyre pressure for best results, see the tyre pressure table on page 178.

- Choice of tyres can affect fuel consumption. Information on suitable tyres can be given by your dealer.
- Extra weight remove unnecessary items from the car.
- Remove the space box directly after use.
- Always carry out service and maintenance on the car in accordance with the instructions in the owner's manual.

Even a combination of some of the abovementioned examples can result in significantly improved consumption.

For further information, please refer to the regulations referred to in accordance with the above.

🔥 WARNING

Never switch off the engine while moving, such as downhill, this deactivates important systems such as the power steering and brake servo.

See page 134 for general information on fuel.

¹ Official fuel consumption figures are based on two standardised driving cycles in a laboratory environment ("EU driving cycles") all in accordance with EU Directive 80/1268/EEC (Euro 4), EU Regulation no 682/2008 (Euro 5) and UN ECE Regulation no 101. The regulations cover the driving cycles for city driving and driving on main roads. - City driving - the measurement starts with cold starting the engine. The driving is simulated. - Dirving on main roads - the car is accelerated and braked at speeds between 0-120 km/h. The driving is simulated. The value for combined driving, which is reported in the table, is a combination of city driving and driving on main roads, in accordance with legal requirements. CO₂ emissions - the exhaust gases are collected in order to calculate the carbon dioxide emissions during the two driving cycles. These are then analysed and give the value for CO₂ emissions.



Catalytic converter

General

The purpose of the catalytic converter is to purify exhaust gases. It is located in the flow of exhaust gases close to the engine so that it quickly reaches operating temperature. The catalytic converter consists of a monolith (ceramic or metal) with channels. The channel walls are lined with a thin layer of platinum, rhodium and palladium. These metals act as catalysts, i.e. they participate in and accelerate a chemical reaction without being used up themselves.

Lambda-sond[™] oxygen sensor

The Lambda-sond is part of a control system intended to reduce emissions and improve fuel economy.

An oxygen sensor monitors the oxygen content of the exhaust gases leaving the engine. This value is fed into an electronic system that continuously controls the injectors. The ratio of fuel to air directed to the engine is continuously adjusted. Together with the three-way catalytic converter, these adjustments create optimal conditions for efficient combustion of the harmful emissions (hydrocarbons, carbon monoxide and nitrous oxides).



Electrical system

General

12 volt system with a voltage-regulated alternator. Single pole system in which the chassis and engine block are used as conductors.

11 Battery

Engine	Voltage, V	Cold start capacity, CCA (Cold Cranking Amperes), A	Reserve capacity, minutes	Capacity, Ah
2.5T, 3.2, V8	12	600–800 ^A	120–150	70–90
D5	12	800	150	90

A Cars with a parking heater have 800 A

If the battery is changed, replace it with a battery of the same cold start capacity and reserve capacity as the original (see the decal on the battery).

Bulbs

Lighting	Output W	Socket
Main beam/dipped beam halogen	55	H7
Main beam, cars with Active Xenon	65	H9
Active Xenon	35	D1S
Fog lamp, front	55	H1
Front direction indicators	21	BAW9s



Electrical system

Lighting	Output W	Socket
Position lamps front/rear, parking lamps front, side marker lamps front, number plate lighting, courtesy lighting rear	5	W 2.1 x 9.5d
Rear fog lamp	21	BAY9s
Brake lamp, reversing lamp	21	BA15S
Rear direction indicators	21	BAU15s
Vanity mirror	1.2	SV5.5
Front courtesy lighting, cargo area lighting	5	SV8.5
Glovebox lighting	3	BA9



Type approval

Remote control system

Country	
A, B, CY, CZ, D, DK, E, EST, F, FIN, GB, GR, H, I, IRL, L, LT, LV, M, NL, P, PL, S, SK, SLO	Certifies that this remote control key system conforms to
IS, LI, N, CH	the essential char- acteristic require-
HR	ments and other rel- evant regulations of directive 1999/5/EC.
RC	ETC093LPD0155

11 Specifications

Symbols in the display

General

There are a variety of different symbols in the display in the car. The symbols are divided into warning, indicator and information symbols. Shown below are the most common symbols with their meanings and a reference to where in the manual further information can be found. For more information on symbols and text messages, see pages 51 and 54.

The red warning symbol illuminates when a fault has been indicated which could affect the safety and/or driveability of the car. An explanatory text is shown on the information display at the same time.

The yellow information symbol illuminates, in combination with text in the information display, when a deviation in any of the car's systems has occurred. The yellow information symbol can also illuminate in combination with other symbols.

Symbols in the display

Indicator and warning symbols in the combined instrument panel

Symbol	Meaning	Page
\triangle	Warning	21, 51, 53, 150, 151
\bigcirc	Emissions system	51, 53
(ABS)	Fault in the ABS system	52, 147
O≩	Rear fog lamp	53
	Stability system, STC or DSTC	53, 150

Symbol	Meaning	Page
00	Engine preheater (diesel)	53
	Indicator symbol for trailer	53
(\mathbb{P})	Parking brake applied	53
×	Airbags - SRS	21, 53
~~~	Low oil pressure	51, 52
	Seatbelt reminder	18, 52

 $\begin{pmatrix} 01 & 10 \\ 00 & 11 \end{pmatrix}$ 

11



## Symbols in the display

Symbol	Meaning	Page
<del>. •</del>	Alternator not charging	53
()	Fault in brake sys- tem	52, 147

# Other information symbols in the combined instrument panel

Symbol	Meaning	Page
CRUISE-ON	Cruise control*	65

## Information symbols in the centre console display

Symbol	Meaning	Page
	Audio files	246
	Directory in CD disc	246
<b>TPיII</b>	Traffic information	242, 244

### Information symbol in rearview mirror

Symbol	Meaning	Page
PASS AIRBAG OFF	Airbag, passen- ger seat, deacti- vated	25





12

# 12 Alphabetical Index

ABS fault	52
Active Xenon headlamps	56, 59
Adaptive system	144
Additional heater	92
Adjusting headlamp pattern halogen headlamp	
Adjusting the steering wheel	68
AF - automatic frequency update	244
Airbag activating/deactivating, PACOS driver's and front passenger side key switch off	23
AIRBAG	22
Airbag system	22
Air conditioning ECC rear of passenger compartment	88
Air distribution	85
Air distribution, A/C	89
Air quality system, ECC	88
Air vents instrument panel	85

#### Alarm

alarm indicator	127
alarm signals	128
arming	127
automatic alarm activation	128
deactivating a triggered alarm	128
disarming	127
general	127
All-wheel drive, AWD	146
Audio	
headphones socket	235
surround	239
Audio, see also Sound	233
Audio files	246
Audio system	
functions	236
Audio volume	
phone 251,	261
phone/media player	261
ring signal, phone	261
Auto, ECC	. 89
Automatic car washes	190
Automatic gearbox 143,	144
Lock-up function	144
safety systems	145
towing and recovery	157

W button 144
Automatic locking 122
AUX
Auxiliary lamps 56
Average fuel consumption 61
AWD, All-wheel drive 146

#### B

Backrest	
front seat, lowering	96
Backrest rear seat, lowering	108
Bag holder	115
Bass speaker	239
Battery 209,	284
maintenance 199,	209
overload	133
specifications	284
start assistance	159
symbols on the battery	209
Blind spot (BLIS)	153
Blind Spot Information System, BLIS 56,	153



handsfree	259
mute microphone	261
transfer call to mobile	261
Boarding	
rear seat	108
Bonnet	201
Bonnet, opening	201
Booster cushion	
folding up	
lowering	. 40
Booster cushion, integrated	. 39
Bottle holder for rear seat passengers	104
Brakes	
anti-lock braking system, ABS	147
Brake system	147
Bulbs, see Lighting 211,	284

### C

Bluetooth

Calls	
functions during a call	253
incoming	260
operation	260
Car care	190

Car care, leather upholstery	192
Cargo area	111
bag holder	115
cargo area compartment	116
cargo cover	115
electrical socket	115
lighting	101
loading	112
safety grille	114
safety net	113
Cargo area compartment	116
Cargo cover	115
Car upholstery	192
Car wash	190
Catalytic converter 137,	283
recovery	158
CD	
changer	246
CD functions	246
Checking and topping up the coolant	205
Children	33
child safety locks 40, 55,	125
child seats and airbags	33
child seats and side airbags	26
location in the car	33

	34 33
Child safety locks	55
extra locking function in seatbelt ISOFIX fixture system for child seats recommended upper mounting points for child seats	33 41 40 34 41
	56
car wash	90 90 93 92 75 49 06
Coat hanger 1	04
Cold start automatic gearbox 1	44
·····	28
Colour code, paint 1	94
Combined instrument panel	49

12



Compass 71
calibration74
setting the zone 71
Condensation in headlamps 190
Cooler box 107
Cooling system 132
Cruise control
Cup holder 104, 105

D

12

Deadlocks	
temporary deactivation	124
temporary deactivation of the alarm	
detectors	128
Defroster	. 90
Detectors	. 56
Diesel	137
Diesel: engine preheater	. 53
Diesel particle filter	138
Direction indicators	. 60
Display, messages	. 54
Dolby Surround Pro Logic II	232
Door mirrors	. 74

Driver's door control panel 48, 69
Driving
cooling system 132
economical 132
in water 133
slippery driving conditions 132
with the tailgate open 132
with trailer 160
Driving in water 133
Driving with a trailer
towball load 274
towing capacity 160, 274
DSTC, see also Stability control sys-
tem 53, 149
operation 149

#### E

ECC, electronic climate control 84	4, 88
Economical driving	132
ECO pressure	177
table	178

Electrical socket	
cargo area	115
centre console	. 56
rear seat	. 68
Electrical system	284
Emergency calls	250
Emergency equipment	
warning triangle	179
Emergency puncture repair	184
Emission control	
fault indicator	. 53
Engine compartment	202
Engine oil 203,	277
adverse driving conditions	277
capacities	277
changing	203
filter	203
oil grade	277
oil pressure	. 52
Engine preheater	. 53
Engine specifications	276
Environmental labelling, FSC, owner's	
manual	. 15
EON - Enhanced Other Networks	245
Equalizer	239



12

Expectant mothers, seatbelt	19
External audio source	
AUX-socket	236
USB connection	237
External dimensions	274

### F

Fan
ECC
First aid equipment 181
Floor mats
Fluids, capacities 279
Fluids and oils 203, 279
Fluids and oils, checks, engine compart-
ment 204
Fluids and oils general 199
Fog lamp
front 59
Fog lamps
rear 59
Front seat
lumbar
massage

FSC	C, environmental labelling	15
Fue	1	
f	uel consumption, display	61
f	uel economy	177
f	uel filter	138
F	oarking heater	91
r	refuelling	134
Fus	es	218
k	oox in cargo area	226
k	oox in cargo area - Executive	228
k	box in passenger compartment	224
k	box in the engine compartment	220
C	changing	218
e	end box	222
ç	general	218

### G

Gearbox	
automatic	143
manual	142
General information on fuel	136
Glovebox	103
Gross vehicle weight	274

### H

Hazard warning flashers 57
Headlamp levelling 58
Headlamp pattern, adjusting 168
Headlamp pattern adjustment Active Bending Lights (ABL) 168
Headlamps
ABL 59
off/on 58
Headlamp washers 64
Headphones socket 235
Head restraint
centre seat, rear 109
Heater
fuel-driven
Heating
front seats
rearview and door mirrors 57, 90
rear window 57, 90
High-pressure headlamp washing 64
HomeLink [®]
Home safe lighting
setting



Ignition keys	141
IMEI number	255
Immobiliser 120,	141
Inflatable Curtain	28
Information display	54
Infotainment system	232
Instrument lighting	59
Instrument overview left-hand drive right-hand drive	44 46
Integrated booster cushion	39
Interior lighting	100
Interior rearview mirrorautomatic dimming	71 71
Intermittent wiping	63
ISOFIX fixture system for child seats	40

Jack	180

#### K

Kerb weight	274
Key	120
remote control key	120
Keypad in the steering wheel	234
Kick-down	
automatic gearbox	145

Lambda-sond 137, 283
Lamps, see Lighting 211
Leather upholstery, washing instructions 192
Lighting
Active Xenon headlamps 56, 59
automatic lighting, dipped beam 58
automatic lighting, passenger compart-
ment 101
bulbs, specifications 284
cargo area 101
exterior
headlamp levelling 58
home safe lighting 60
in passenger compartment 100
instrument lighting

#### lighting panel, passenger compartment..... 58 main/dipped beam..... 58 position/parking lamps..... 58 reading lamps..... 100 rear fog lamp..... 59 switching headlamp pattern right/lefthand traffic, ABL..... 56, 168 Lighting, bulb replacement...... 211 bulb location front lamp...... 212 cargo area..... 217 courtesy lighting...... 216 dipped beam halogen..... 212 fog lamp...... 213 front...... 211 lamp housing, rear..... 214 main beam...... 212 main beam halogen..... 212 number plate lighting...... 216 parking lamps..... 213 position lamps..... 213 rear fog lamp..... 216 side marker lamps..... 213 vanity mirror..... 217 Loading cargo area..... 112

general..... 110, 112

12



load capacity	110
1 5	110
load carriers	110
roof load	110
Load on the roof	110
Locking/unlocking	
glovebox	123
inside	123
outside	122
tailgate	123
Lubricants	279
Lubricants, capacities	279

## M

Main and dipped beam	
switching	60
Main beam "flash"	60
Maintenance	199
rustproofing	195
self-maintenance	199
Making calls	260
Manual gearbox	142
towing and recovery	157
Massage front seat	99

Master key	120
Menus	
audio system	234
Menu structure	
audio system	248
phone, menu options	257
phone, overview	256
Messages in BLIS	155
Messages in the information display	. 54
Meters in the combined instrument panel	
fuel gauge	. 49
outside temperature gauge	
speedometer	
tachometer	
trip meter	. 49
Misting	
condensation in headlamps	
rear window	
removing with defroster function	. 90
Mobile phone	
connect	262
handsfree	259
register phone	260
Mp3 functions	246
Multi-filter	138
MY KEY	234

N	
News	241, 244

### 

Oil, see also Engine oil 52	, 277
One-key dial	253
Owner's manual, environmental labelling.	. 15
Oxyhydrogen gas	159

### P

PACOS	24
PACOS, switch	24
Paintwork	
colour code	194
damage and touch-up	194
Panel vents in the door pillar	86
Parking assistance 56,	151
parking assistance sensors	152
Parking brake 53	, 67



Parking heater

	battery and fuel	92
	general	91
	symbols and display messages	91
	time setting	92
Pa	rking lamps	58
Pe	trol grade	136
۶h	one	
	call volume	254
	connect	262
	controls	250
	ending a call	252
	handsfree	259
	incoming calls	260
	last dialled numbers	253
	making calls 252,	260
	memory	254
	messages	255
	on/off	251
	one-key dial	253
	phone book 254,	262
	phone book, shortcut	262
	privacy handset	252
	receiving a call 252,	261
	register phone	260
	shortcuts	251
	SIM card	252

traffic safety	252
volume reduction during phone call	251
Phone book	254
Phone system	249
Pinch protection, sunroof	. 77
Polishing	191
Position lamps	. 58
Power seat	. 97
Power steering fluid, checking and topping	
up	206
Power sunroof	. 76
Power windows	69
blocking	. 70
passenger seat	. 70
rear seat	. 70
PTY – Programme type	242
Puncture, see Tyres 180,	182

#### R

Radio	
alarm	242
AUTOSTORE	240
EON	245

frequency update 24	14
news 241, 24	14
PTY 24	12
radio settings 24	10
radio stations 24	10
radio text 24	12
regional 24	14
storing stations 24	10
traffic information 24	12
tuning 24	11
volume control, programme types 24	11
Radio functions 24	10
Radio text 24	12
Rain sensor 6	63
Random, CD and audio files 24	17
RDS functions 24	11
resetting 24	15
Reading lamps 10	00
Rear centre console, removal 10	8
Rear seat	
boarding 10	)8
Rear seat, lowering 10	8
Rearview and door mirrors	
compass	71
-	74
electrically retractable	74



heating	57
interior	71
retractable	55
Rear window, defrosting	57
Recirculation	
ECC	89
Refrigerant	84
Refuelling	
fuel cap	136
refuelling	136
REG - Regional radio programmes	244
Relay/fuse box: see Fuses	218
Remote control	120
replacing the battery	121
Remote control, HomeLink [®]	
programmable	78
Remote control key	
functions	120
Remote control key system, type appro-	
val	286
Retractable power door mirrors (option).	55
Rims	
cleaning	190
RND – Random	247
Roll-over protection	31

Roof load	110
ROPS (Roll Over Protection System)	31
ROPS (Roll Over Protection System) (Roll-	
over protection)	31
Rustproofing	195

#### 

Safety grille	114
Safety net	113
Scan radio stations	241
Seatbelt pregnancy	. 19
Seatbelt reminder	. 19
Seatbelts seatbelt tensioner	
Seats heating lowering the front backrest lowering the rear backrest manual setting power seat	. 96 108 . 96
Service programme	198

Side airbag, SIPS 2	26
SIM card 25	52
double 25	55
SIPS bag – decal 2	26
SIPS bags 2	26
Sliding seat 10	)8
SMS 25	55
write 25	55
Soot filter 54, 13	38
Soot filter full 13	38
Sound	
audio settings 233, 23	38
audio source 233, 23	36
Spare wheel 18	30
temporary spare 17	79
Speed dial numbers 25	53
Spin control 14	19
Spin Control 14	19
Spin control function 14	19
SRS system	
general 2	22
Stability system 14	19
deactivating/activating 14	19



12

# 12 Alphabetical Index

indicator 53
symbols 149
Stains 192
Standby mode, phone 251
Start assistance 159
Starting the engine 140
Steering lock 140
Steering wheel cruise control
Stone chips and scratches 194
Storage compartment 105, 106
Storage spaces in the passenger compart-
ment 102
Storing radio stations 240
Subwoofer
Sunroof
ventilation position76
Sunscreen, sunroof 77
Surround 239

Switching main and dipped beam	60
Symbols	
indicator symbols	52
stability system	149
warning symbols	51

#### T .

Tailgate	
driving with open tailgate	132
locking/unlocking	
open	68
Technical data, engine	276
Temperature	
actual temperature	84
Temperature control	90
Fools	180
Towbar 160	), 164
Towbar, see Towing equipment	162
Towing	157
towing eye	157
Towing capacity 160	), 274
Towing equipment	
general 160	), 162

installation	164
removing	166
specifications	163
Towing eye	157
TP – Traffic information 242,	244
Traction control system	149
Traffic information 242,	244
Trailer	160
cable	162
driving with a trailer	160
Trip computer	61
Type approval, remote control key sys-	
tem	286
Type designation	272
Tyres	
direction of rotation	176
driving characteristics	174
general	174
maintenance	174
pressure 177,	178
puncture repair	184
specifications	174
speed ratings	174
tread wear indicators	175
winter tyres	176



USB, connection	237

### V

U

Ventilation fan function	. 84
Vibration damper	162
Volume control	236

### W

Warning lamp stability and traction control system. 149
Warning symbol, airbag system 21
Warning triangle 179
Washers
headlamps64
rear window 64
washer fluid, filling 204
windscreen
Water and dirt-repellent coating 75
Water-repellent surface, cleaning 191
Waxing 191

Weights
kerb weight 274
trailer weight 160
Wheels
changing 182
installation 183
removal 182
snow chains 176
spare wheel 180
Whiplash injury 29
WHIPS
child seat/booster cushion 29
whiplash injury 29
Windscreen washing 64
Windscreen wipers
rain sensor 63
Winter tyres 176
Wiper
rear window 64
Wiper blades 207
cleaning 207
replacing, rear window 207
replacing, windscreen 207



# Volvo. for life



Volvo Car Corporation TP 11807 (English), AT 1020, Printed in Sweden, Göteborg 2010, Copyright @ 2000-2010 Volvo Car Corporation